


CEILING FAN COMPANY

Owner's Guide and Installation Manual

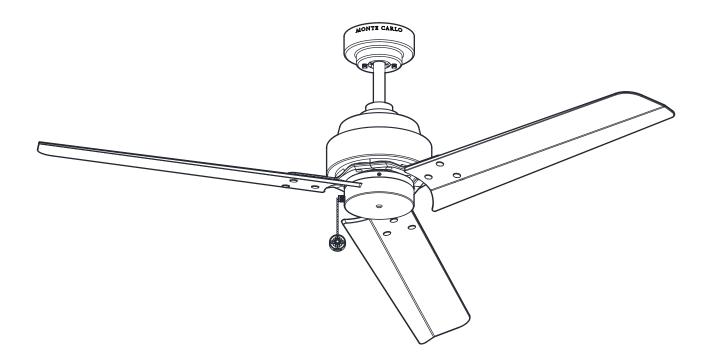

3AR54XXX Series Fan CUL Model NO. : 3AR54XXX

 Attach sales receipt to this card and retain as your proof of purchase

 DATE OF PURCHASE:
 RETAILER NAME:

 MODEL NUMBER:
 RETAILER ADDRESS:

 To register your fixture, please visit our website www.montecarlofans.com



6.6 kg 14.52 lbs

Cautions and Warnings

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING READ AND SAVE THESE INSTRUCTIONS

Installation work and electrical wiring must be done by qualified person(s) in accordance with applicable codes and standards (ANSI/NFPA 70) including fire-rated construction.

Use this unit only in the manner intended by the manufacturer. If you have any questions contact the manufacturer.

After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box. The splices, after being made, should be turned upward and pushed carefully up into the outlet box.

WARNING: Before you begin installing the fan, servicing or cleaning unit, Switch power off at Service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

Be cautious! Read all instructions and safety information before installing your new fan. Review the accompanying assembly diagrams.

When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

Make sure the installation site you choose allows the fan blades to rotate without any obstructions. Allow a minimum clearance of 7 feet from the floor to the trailing edge of the blade.

WARNING: To Reduce The Risk Of Fire, Electric Shock, or Personal Injury, Mount To Outlet Box Marked "Acceptable for Fan Support of 15.9 kg (35 lbs) or less" And Use Mounting Screws Provided With The Outlet Box.

CAUTION: For Compliance with Local Codes and Regulations, If Installing The Secondary Support Safety Cable in the U.S., Do Not Remove Knockouts In The Outlet Box. Mount the secondary support safety cable through the reserved nail/screw hole on the outlet box to the building structure (or the ceiling joist).

WARNING: To reduce the risk of personal injury, do not bend blade holders during installation to motor, balancing or during cleaning. Do not insert foreign object between rotating blades.

Attach the mounting bracket using only the hardware supplied with the outlet box.

WARNING: To reduce the risk of fire or electric shock, do not use this fan with any unverified solid state fan speed control device, or variable speed control.

If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application.

Never place a switch where it can be reached from a tub or shower.

The combustion airflow needed for safe operation of fuel-burning equipment may be affected by this unit's operation. Follow the heating equipment manufacturer's guideline safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities.


CAUTION: To Reduce the Risk of Electric Shock, Disconnect the electrical supply circuit to the fan before installing the light kit.

All set screws must be checked and tightened where necessary before installation.


Tools Required for Assembly (not included): Electrical Tape, Phillips Screwdriver, Pliers, Safety Glasses, Stepladder and Wire Strippers

Customer Service 800-969-3347


Customer Service Center 7400 Linder Ave. Skokie, IL 60077 www.montecarlofans.com

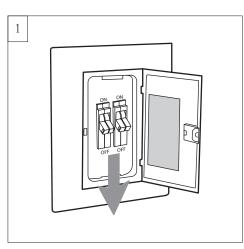

Before you begin installing the fan, Switch power off at Service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel. Use AC 120V/60HZ power supply only.

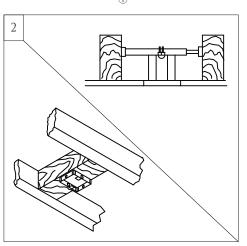


Before installing this fan make sure the outlet box is properly installed to the house structure. To reduce the risk of fire, electric shock, or personal injury, mount to outlet box or supporting system acceptable for fan support. (Mounting must support at least 35 lbs.)

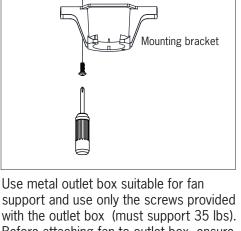


3


support and use only the screws provided with the outlet box (must support 35 lbs). Before attaching fan to outlet box, ensure the outlet box is securely fastened by at least two points to a structural ceiling member (a loose box will cause the fan to wobble). Remove the two outlet box screws provided with the box, aligning the holes of the mounting bracket with the holes of the outlet box. Reinstall the 2 outlet box screws securely.

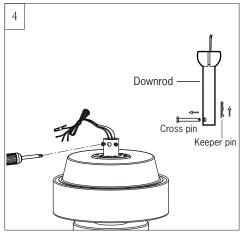

Partially loosen downrod set screws from yoke at top of motor assembly. Remove preassembled cross pin and keeper pin from downrod.

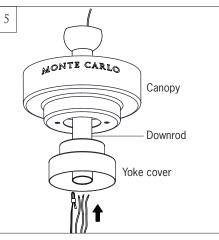


Place downrod over canopy and yoke cover. Thread lead wires and safety cable from motor assembly through downrod.

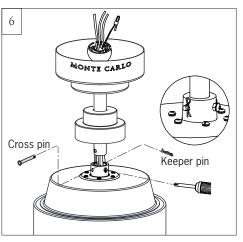


Slip downrod into motor housing yoke, aligning holes and install cross pin and keeper pin.

Insert cross pin through yoke and downrod until point appears on the other side, and insert keeper pin on cross pin. Pull the downrod up tight against the cross pin, and then evenly tighten the downrod set screws on motor housing yoke.

Place yoke cover on top housing of fan. **Warning**: Cross pin and keeper pin must be installed securely, failure to install them will result in serious injury.

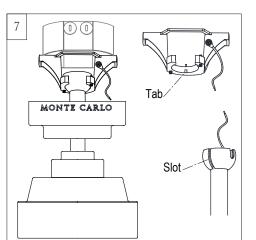

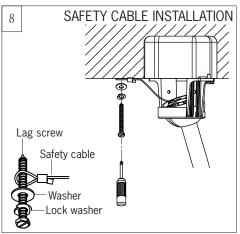


Wall switch (Neutral) Power source Black (Live) Ground/Green Black Blue


9

Install ball end of downrod into mounting bracket opening. Align (engage) slot on ball with tab on mounting bracket. **Warning:** Failure to align slot on ball with tab may result in serious injury. **Important:** If using the angle mount, make sure open end of mounting bracket is installed facing the higher point of the ceiling and make sure the ceiling angle is not steeper than 30°. Longer downrod may be necessary allowing the fan blades to rotate without obstructions. For Canadian installation and for USA fan and light kit combinations over 35 lbs, in both flush and downrod modes the safety cable must be installed into the house structure beams using 3" lag screws, washers and lock washers provided. Make sure that when the safety cable is fully extended the lead wires are longer than the cable and no stress is placed on the lead wires.

Note: If Installing The Secondary Support Safety Cable in the U.S., Do Not Remove Knockouts In The Outlet Box. Make wiring connections using wire connectors provided as indicated above. White from fan to White (Neutral) from house. Black and Blue from fan to Black (Live) from house. Connect all green grounded wires to Grounded wire from House. Make sure that no filaments are outside of the wire connectors.

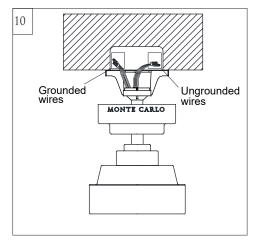


After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box. The splices after being made should be turned upward and pushed carefully up into the outlet box.

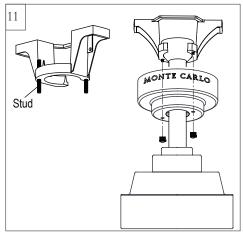


Lift Canopy, allowing the 2 studs to protrude through the canopy. Install knurled nuts provided and tighten the knurled nuts securely. The canopy should adjust for any irregularity in the ceiling or outlet box.


Make sure the studs protruding from the bottom of the Mounting bracket are installed with threads all the way through the bracket.

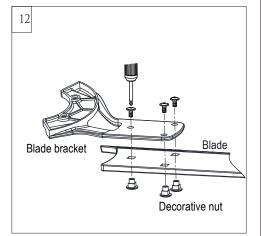


Install blade bracket with blade by 3 blade screws and decorative nuts provided. Tighten screws securely. Repeat this process for remaining blades.

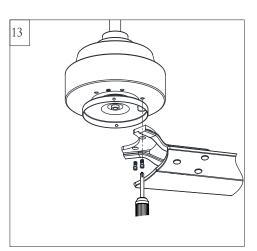


Install the blade assembly to motor using the set screws provided. Tighten screws securely. Repeat this process for remaining blade assemblies.

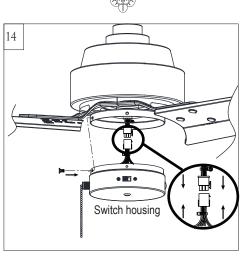


Remove set screws from top cover of switch housing. Keep screws. Connect the plug from fan to the plug from switch housing, aligning the claps and make sure plugs connected securely. Install witch housing, aligning the holes on switch housing with screw holes on top cover and reinstall the set screws.

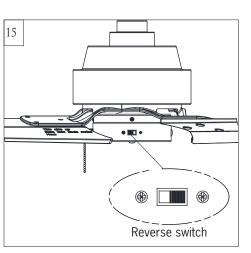

Setting the reverse switch in the left hand side will result in downward airflow and setting the switch in the right hand side will result in upward airflow. **Note:** Reverse switch must be set either way completely. If the reverse switch is set in the middle position, fan will not operate.

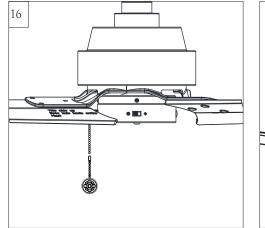

Install fan pull chain to preassembled pull chain on fan. Pull chain provided.

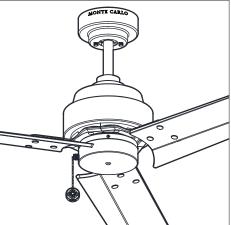



Trouble Shooting

If you have difficulty operating your new ceiling fan, it may be the result of incorrect assembly, installation, or wiring. In some cases, these installation errors may be mistaken for defects. If you experience any faults, please check this Trouble Shooting Chart. If a problem cannot be remedied, or you are experiencing difficulty in installation, please call our Customer Service Center at the

number printed on your parts list insert sheet.

Warning: Before servicing or cleaning unit, Switch power off at Service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

eck main and branch circuit fuses or circuit breakers. eck line wire connections to fan and switch wire connections in switch housing. TION : Make sure main power is turned off. this fan uses manual forward/reverse switch, make sure the switch is pushed firmly er way. Fan will not operate when switch is in the middle. this fan uses remote controller, make sure dip switches are setting properly and make battery is effective. eck to make sure all screws in motor housing are snug (not over tightened). eck to make sure the screws which attach the fan blade holder to the motor are tight. eck to make sure the screws which attach the fan blade holder to the motor are tight. eck to make sure wire nut connectors in switch housing are not rattling against each r or against the interior wall of the switch housing. TION : Make sure main power is turned off before entering switch housing. eck to be sure light bulb is tight in socket and not touching the glass shade. me fan motors are sensitive to signals from Solid State variable speed controls. ow "break-in" period of 24 hours. Most noises associated with a new fan will disappear this period. this is a downrod mount fan, make sure the ridge on mounting bracket engages the h in the downrod ball. ike sure that canopy, mounting bracket or mounting plate are tightened securely to ng junction box and junction box is mounted firmly to ceiling joist. eck that all blades are screwed firmly into blade holders. eck that all blade holders are tightened securely to motor. set fan wobble problems are caused when blade levels are unequal. Check this level by thing a point on the control the tight of the of the of the date.
eck to make sure the screws which attach the fan blade holder to the motor are tight. eck to make sure wire nut connectors in switch housing are not rattling against each r or against the interior wall of the switch housing. TION : Make sure main power is turned off before entering switch housing. eck to be sure light bulb is tight in socket and not touching the glass shade. me fan motors are sensitive to signals from Solid State variable speed controls. ow "break-in" period of 24 hours. Most noises associated with a new fan will disappear this period. this is a downrod mount fan, make sure the ridge on mounting bracket engages the h in the downrod ball. eke sure that canopy, mounting bracket or mounting plate are tightened securely to ng junction box and junction box is mounted firmly to ceiling joist. eck that all blades are screwed firmly into blade holders. eck that all blade holders are tightened securely to motor.
h in the downrod ball. the sure that canopy, mounting bracket or mounting plate are tightened securely to ng junction box and junction box is mounted firmly to ceiling joist. eck that all blades are screwed firmly into blade holders. eck that all blade holders are tightened securely to motor. box fan wobble problems are caused when blade levels are unequal. Check this level by
cting a point on the ceiling above the tip of one of the blades. Measure this distance blade tip to ceilng. Keeping measure within 1/8", rotate the fan until the next blade ositioned for measurement. Repeat for each blade. If all blade levels are not equal, can adjust blade levels by the following procedure. To adjust a blade tip down, insert asher (not supplied) between the blade and blade holder at the screw closest to the br. To adjust a blade tip up, insert washer (not supplied) between the blade and blade er at the two screws farthest from the motor. Reverse the position of the washer if es mount from top of blade. blade wobble is still noticeable, interchanging two adjacent (side by side) blades can stribute the weight and possibly result in smoother operation. e above steps do not eliminate the wobble problem, you will need to dynamic balance fan with balancing kit provided.
eck blue wire from fan to make sure it is connected to hot wire from house. eck for loose or disconnected wires in fan switch housing. eck for loose or disconnected wires in light kit. eck for faulty light bulb and make sure bulb is tight in socket. move light kit and check the plug connections if they are present. this fan uses remote controller, make sure dip switches are setting properly and make battery is effective. TION : Make sure main power is turned off before entering switch housing and/or

Jul.2019