

THE KB851 HIGH CHAIR TRAY USAGE INSTRUCTIONS

Please Note:


The child should be secured in the Koala high chair at all times by the waist restraint.

The Koala tray is not designed to hold the child in the chair. It is recommended that the Koala high chair be used only by children capable of sitting upright and unassisted. Do not leave the child unattended while using the Koala high chair.

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place and a “click” is heard.

The waist restraint can be adjusted to make the strap tighter or looser.

Restraint Usage:

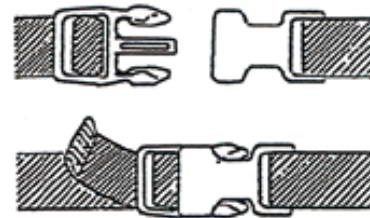

You are responsible for the safe operation of this unit.

Tray Instructions:

The tray can be attached to (and removed from) the high chair by compressing both tray clips, located on the bottom of the high chair tray, and clipping to the notches on the high chair arm.

The tray can be moved into three positions by pulling up on the clips and sliding the tray forward or backward.

Maintenance:

Clean and sanitize regularly. The KB850 High Chair and KB851 High Chair Tray can be cleaned as follows:

- Wipe down high chair and tray with a soft rag using a non-abrasive cleaner.

Important: DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.

**To order replacement parts call
888.733.3456 or 303.539.8300
or visit www.koalabear.com.**

