

SAFETY INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS

WARNING: DO NOT LIGHT WAX WHEN USING THIS WARMER.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND EXCESSIVE UV RADIATION, FOLLOW THESE DIRECTIONS FOR USE:

- Read all instructions, including these important safeguards in this manual.
- Turn off and unplug Wax Warmer when not in use or before cleaning.
- Keep out of reach of children.
- Use only tempered glass or metal containers, containers do get hot.
- Surface temperature is hot; do not allow hot plate to come in contact with skin.
- Some wax tend to overflow while melting. Watch carefully.
- Do not move warmer when supporting container of hot wax.
- Do not allow cord to hang over edge of table or counter or touch hot surfaces.
- Please check with wax manufacturer to ensure safety of Wax Warmer hot plate.

SAVE THESE INSTRUCTIONS

INTENDED FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING:

- Do not use appliance for other than intended use.
- Read all the instructions before using the product.
- Do not place appliance or cord on or near a hot gas or electric burner or in an oven.
- The use of accessory attachments not recommended by the manufacturer may cause injuries.
- Do not operate when the appliance is not working properly or when it has been damaged in any manner.
- Do not attempt to repair this appliance yourself. Service should only be performed by an authorized service representative.
- Do not light your candle when using a wax warmer.
- To protect against risk of electrical shock do not put cord, plug or lamp in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. To reduce the risk of injury, close supervision is necessary when a product is used near children.
- Do not use outdoors. Do not put finger or hands into the products.
- To disconnect, grip plug and pull from wall outlet. Never pull on cord to disconnect.
- A short cord set is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.

OPERATION

- Place on level, heat resistant, stain resistant surface.
- Remove lid from wax before using.
- Insert the plug into the wall outlet.
- Turn on the switch.
- Place container of wax on hot plate. Use only tempered glass or metal containers, containers do get hot.
- Turn off the appliance when not in use or when left unattended.
- Remove the plug from the wall outlet.

TIPS

- If wax is not melting make sure that the indicator light is on and that the wax jar lid has been removed.
- If wax spills on a wax warmer use a plastic spatula or credit card to scrape the wax off. Use a paper towel to rub off any remaining wax. Do not use metal or any other sharp objects to scrape off melted wax.
- Make sure that your candles, wax chips, tarts, potpourri, etc. are in a jar or dish. If not, the wax will melt on to the base.
- Once a wax has been melted by a wax warmer it is not recommended that you light the wick and burn the same wax.

MADE IN CHINA