

QUICK START GUIDE

Locate receiver (not included) and

open for access to DIP switches.

NOTE: For a gate installation, the receiver is typically

٢

0

۲

Unit Enabled

(exit button active)


key switch located below the exit button.

0

٢

installed inside the gate operator housing.

RTE 300

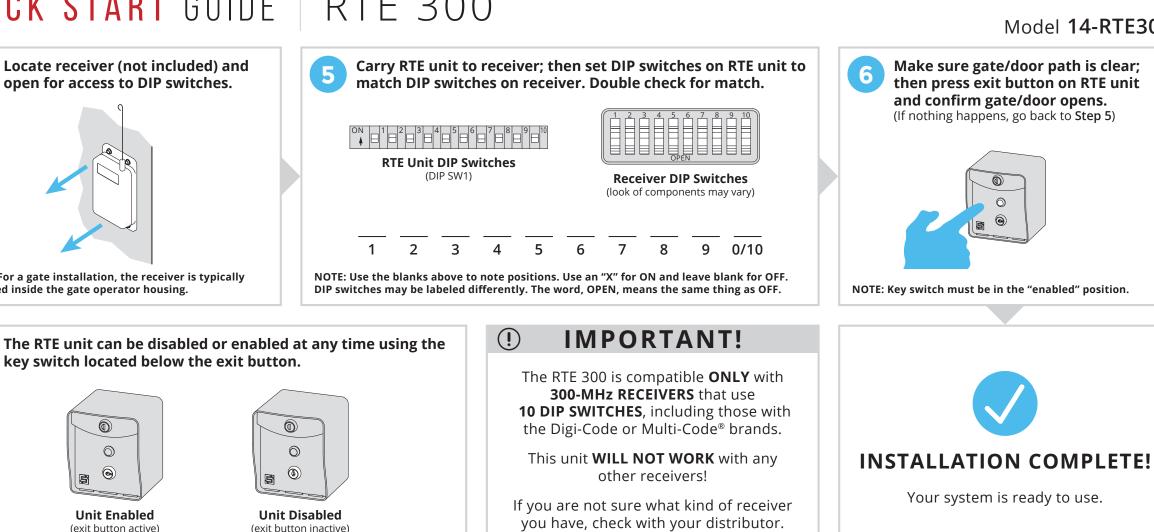



Call (972) 474-6390 Email techsupport@securitybrandsinc.com

We are available Mon-Fri / 8am-5pm Central



Model **14-RTE300**

© 2021 Security Brands, Inc. All rights reserved.