




ATTACH THE OPERATOR

Secure brackets to post and gate with c-clamps. Attach operator arm to brackets with pins and clips provided (Figure 2).

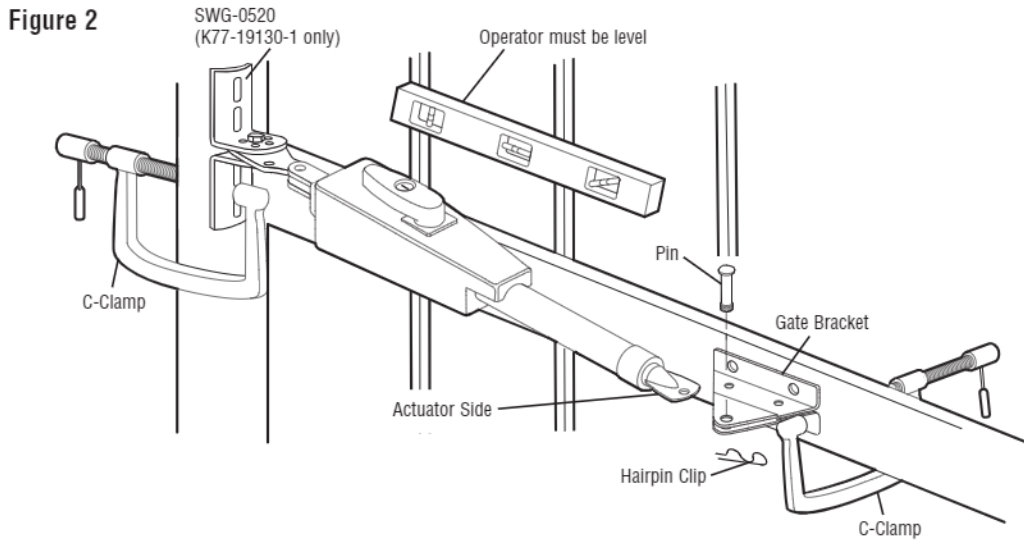

Disengage the operator by inserting the key and rotating the handle (Figure 3).

Move the gate manually to the fully open and fully closed positions. It is extremely important that the gate bracket does not bind with the post bracket (Figure 4).

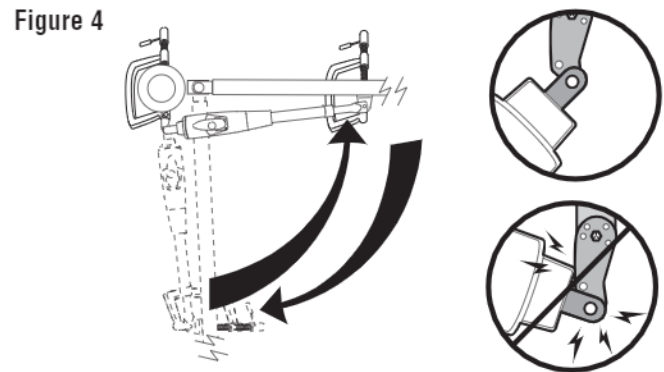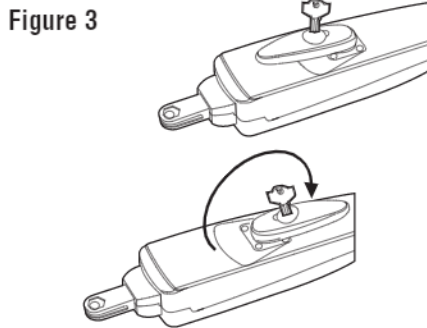

Secure the brackets to the gate post using hardware provided.