


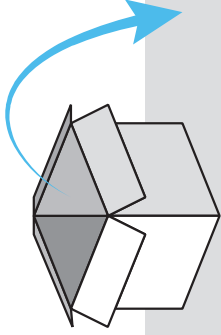


1

Carefully unpack box.



2

Make sure you have everything shown here.

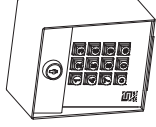

Keypad Unit



Key



Carriage Bolt  
(4x)



Hex Nut  
(4x)

## What's what?

Important components labeled


### Power and Relay Terminals

For wiring to gate operator or door opener and power

**POWER MUST BE 7-14 VDC!**

### Reset Button

For performing reset procedures

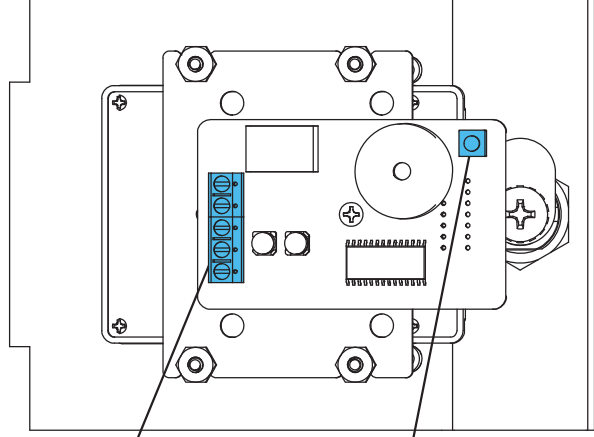


## Keypad Unit Front Panel

Shown as it would appear with front panel inserted into enclosure as in Step 4.


3

Unloose  
of Ke  
carr  
atta

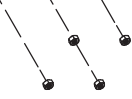

4

For e  
pane

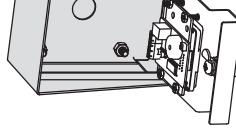

**AUTO  
SERI**

**ALWAYS  
CLEA**

**REVERSI  
SHC**


## CAUTION!

Double check your wires! You must wire from positive on keypad unit to positive on your power source and negative on keypad unit to negative on your power source.

**Reverse polarity can damage keypad unit!**


### 5a Make the connections

Wiring for Gate Operator or Door Opener

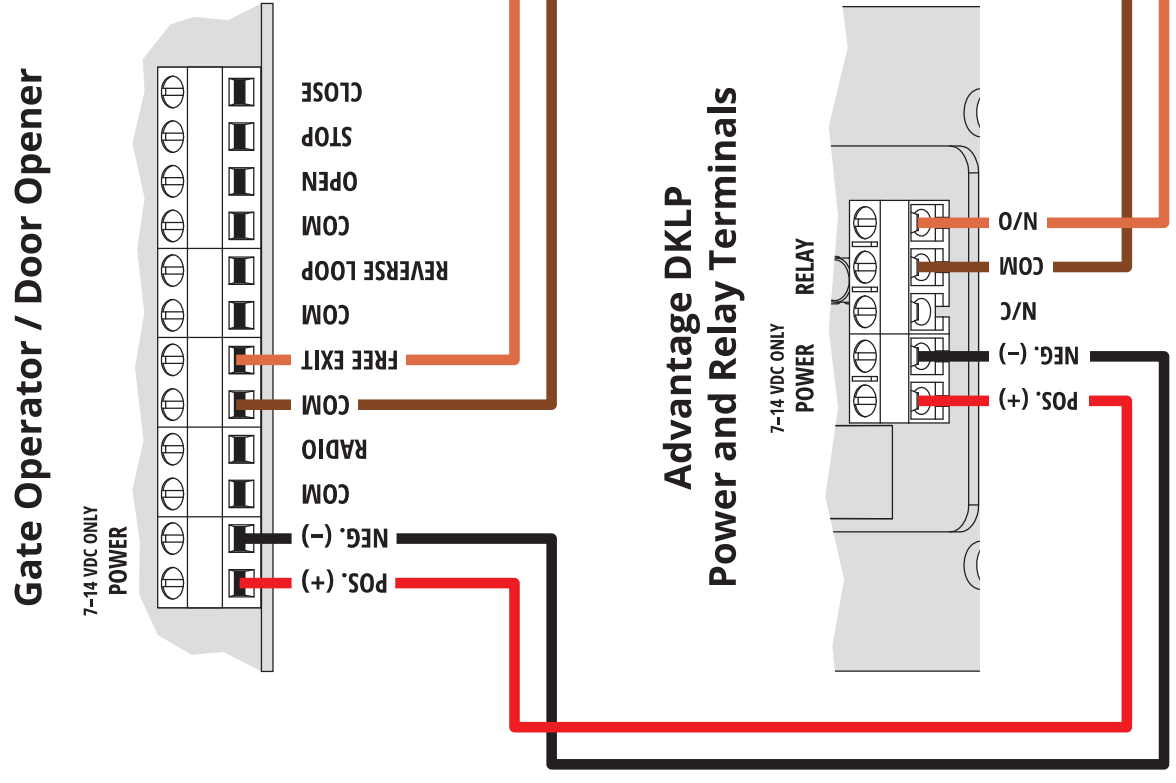


### 5b Make the connections

Wiring for Electric Door Strike

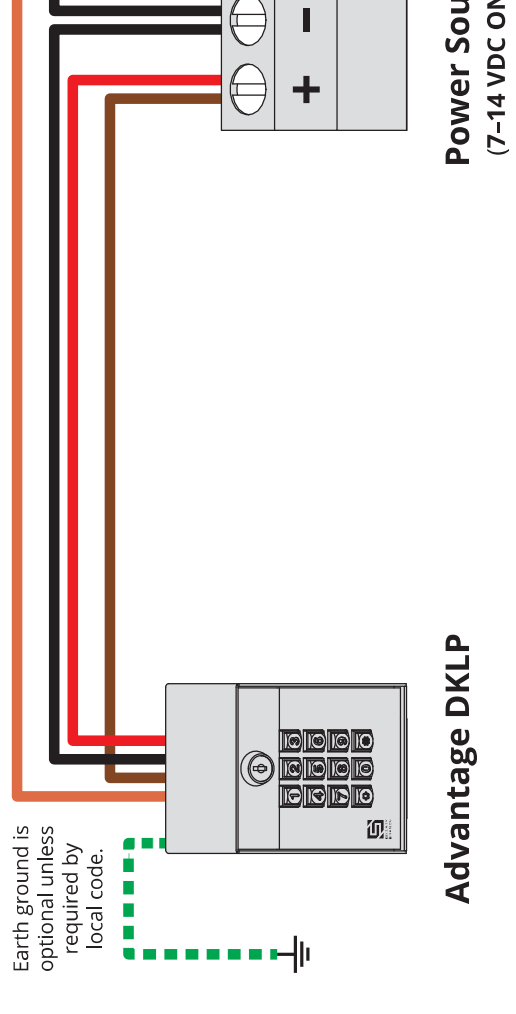

### 5c Make the connections

Wiring for Mag Lock

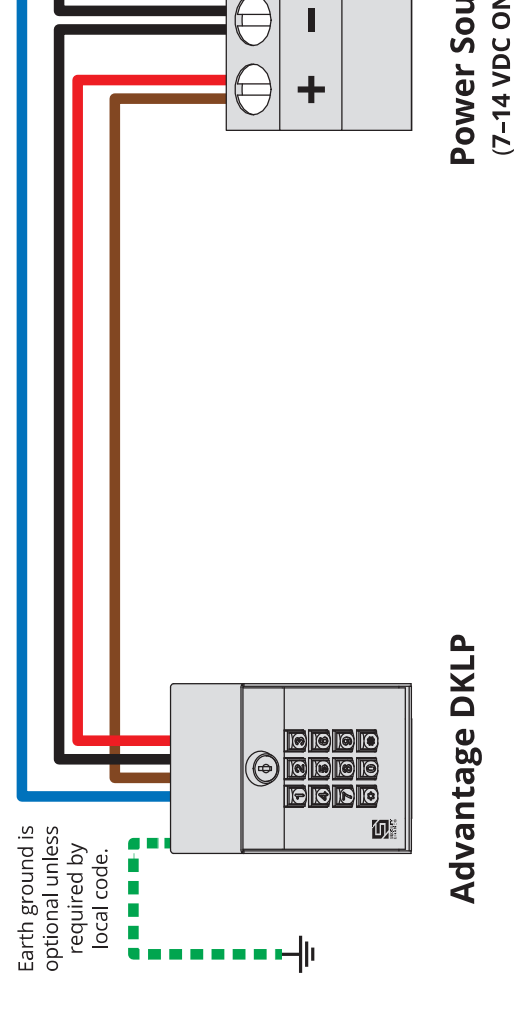



## 6

### Add Access Code(s).


(To add multiple codes, enter each of them before pressing pound key)

1	2	5	1	→	1	→	—	—	—	—	→	#	
											Master Code	Sub Mode	Access Code(s)
											(1251 is default)		(4 digits; numbers only)

NOTE: The Master Code is for programming only and will not trigger the relay. The green arrow indicates a "good" tone on the keypad. An incorrect entry will sound a "bad" tone.

## 7

Make sure gate path is clear; then enter access code on keypad and confirm gate opens.

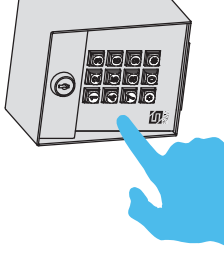

## INSTALL

Your

## A1

### Additional Programming

#### Delete Code(s)

(To delete multiple codes, enter each of them before pressing pound key)

1	2	5	1	→	2	→	—	—	—	—	→	#	
											Master Code	Sub Mode	Code(s) to Be Deleted
											(1251 is default)		(4 digits; numbers only)

#### Change Master Code

1	2	5	1	→	3	→	—	—	—	—	→	#	
											Current Master Code	Sub Mode	New Master Code
											(1251 is default)		(4 digits; numbers only)

#### Set Latch Code

1	2	5	1	→	5	→	—	—	—	—	→	#	
											Master Code	Sub Mode	Latch Code
											(1251 is default)		(4 digits; numbers only)

### Things to Know

#### The Star Key (\*)

The star key deletes your current entry. If you happen to make a mistake keying in a code, simply press the star key to delete the entire entry and start over.

#### The Pound Key (#)

The pound key is good for one thing and one thing only: exiting Programming Mode. Whenever you're in Programming Mode, simply press the pound key to get out.

#### Master Reset Procedure

If for some reason the Master Code and/or Latch Code is forgotten, a reset procedure is available to remedy the situation.

This procedure can be found on Page 4 of this guide.

NOTE: Green arrow indicates "good" tone on keypad. Always wait for good tone before moving on.

## Program

- 1 Add /
- 2 Dele
- 3 Chan
- 4 Set R
- 5 Set L
- 0 Dele

**A2**

**Additional Programming (continued)**

**Set Relay Output Time**

1	2	5	1	→	4	→	_	→	#
Master Code (1251 is default)		Sub Mode		Seconds (0-9)					

**Delete All Codes (Cannot Be Undone)**

1	2	5	1	→	0	→	1	2	5	1	→
Master Code (1251 is default)		Sub Mode		Master Code Again							

Keypad will sound "good" tone when complete.

**NOTE:** Green arrow indicates "good" tone on keypad. Always wait for good tone before moving on.

**B**

**Master Reset Procedure**

This procedure is used if the Master Code is unknown, or if the unit is in Latch Mode. All other codes will be retained after the unit is reset.

**NOTE: If an error is made during these procedures, an 'error' tone will sound. If this occurs, you must start again from the beginning.**

- Step 1 - Open front panel on unit.**
- Step 2 - Disconnect power.**  
Remove one power wire from screw terminal on circuit board.
- Step 3 - Press and hold Reset Button; reconnect power.**  
Insert removed power wire back into screw terminal and sound one (1) tone. Release Reset Button after you hear a "good" tone.
- Step 4 - Close front panel on unit.**  
The Master Code is now reset to default (1251).



**NEED HELP**

Call (972) 474-6390  
Email [techsupport@securitybrandsinc.com](mailto:techsupport@securitybrandsinc.com)  
We are available **Mon-Fri / 8am-5pm Central**



**SECURITY BRANDS**  
your