

Specifications

Frequency: 433.39 MHz.

Security: 128-bit AES encryption.

Range: up to 50 metres.

Battery life: up to 10 years.

Battery type: Lithium ion 3.6V 2600 mA x 4.



e-LOOP Fitting Instructions

Step 1 – Coding e-LOOP

Coding e-LOOP without Magnet

1. Power up the e-Trans 50 and hold the e-Loop within 10cm of the transceiver's antenna.
2. Now press and release the CODE button on the e-Trans 50. The yellow and red LEDs will flash on the e-Loop, and the blue LED on the e-Trans 50 will flash 3 times. The systems are now paired.

(For coding e-Trans 200 LCD transceiver refer to e-Trans 200 manual.)

Coding e-LOOP with Magnet (Commercial systems only)

1. Power up the e-Trans 50, then press and release the CODE button. The blue LED on the e-Trans 50 will light up.
2. Now place the magnet on the CODE recess on the e-Loop – the yellow LED will flash 3 times, and the blue LED on the e-Trans 50 will flash 3 times. The systems are now paired and you can remove the magnet.

Step 2 – Fitting e-LOOP

1. Place e-LOOP device in the desired location and secure it into the ground using 2 Dyna bolts. Ensure the e-LOOP device is secured and can't be moved when touched.

NOTE: Never fit near high voltage cables, this can affect the e-LOOP's detection capability.

Step 3 – Calibrate e-LOOP


1. Move any metal objects away from the e-LOOP.
2. Place magnet into the SET button recess on the e-LOOP until red LED flashes twice, then remove the magnet.
3. The e-LOOP will take about 5 seconds to calibrate and once complete, the red LED will flash 3 times.

NOTE: After calibration, you may get an error indication.

ERROR 1: Low radio range - Yellow LED flashes 3 times.

ERROR 2: No radio connection - Yellow and Red LED flashes 3 times.

The system is now ready.

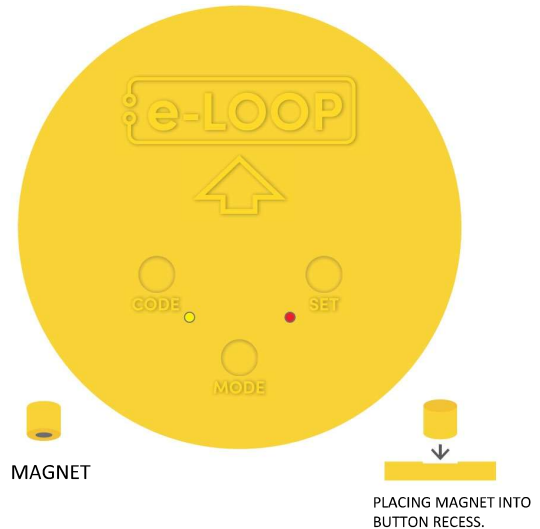

Uncalibrate e-LOOP

1. Place magnet into the SET button recess until the red LED flashes 4 times, e-LOOP is now uncalibrated.

Changing mode

The e-LOOP is set to pulse mode as standard setting. This can be changed to presence mode via the menu in the e-TRANS-200 LCD transceiver – refer to the manual.

NOTE: This menu cannot be accessed via the e-TRANS-50 Transceiver.

Parameters that can be altered:

1. Pulse / Presence mode. NOTE: do not use presence mode as a safety function.
2. Wake-up time intervals for presence mode.
3. Sensitivity detection level for Pulse mode.
4. Sensitivity detection for presence mode by each axis: Above / Approach / Side.
5. Radar detection distance.