


INSTRUCTION MANUAL

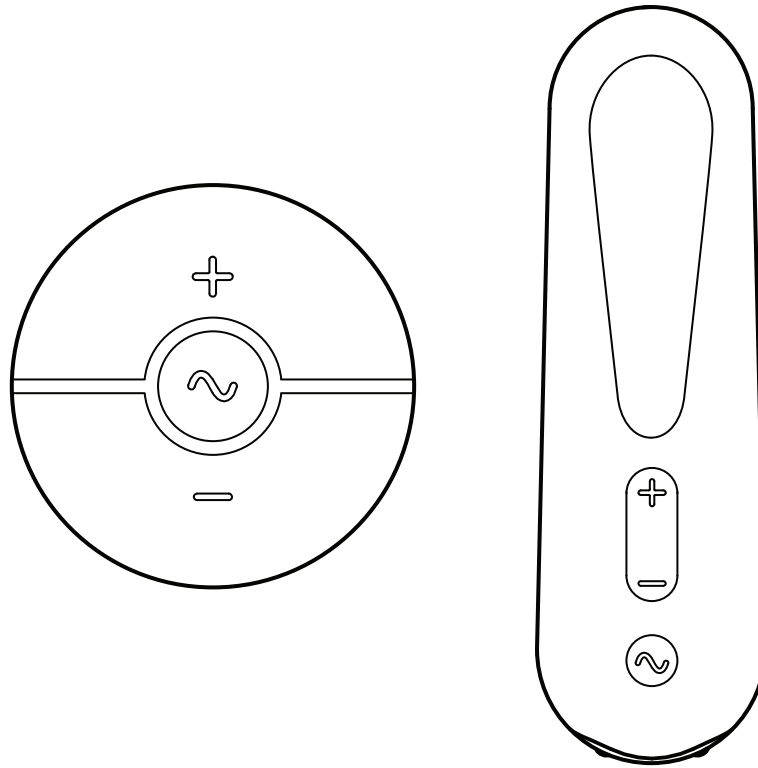

---

**FORM I**

WATERPROOF RECHARGEABLE VIBRATOR

---

JIMMYJANE


# FORM I

WEARABLE FORM. SHAREABLE EXPERIENCE.

Meet the world's slimmest, yet most powerful, wearable vibrator. With its Stay-in-Place Panty Sleeve and Bluetooth-enabled remote control, **FORM I** packs big excitement into a compact design.

## Sexy is smart.

Jimmyjane is a design-centric brand founded on the belief that life is better with a sexy twist. We design products and experiences to provide pleasure, strengthen connection and create provocative possibility. Pleasure to the People.

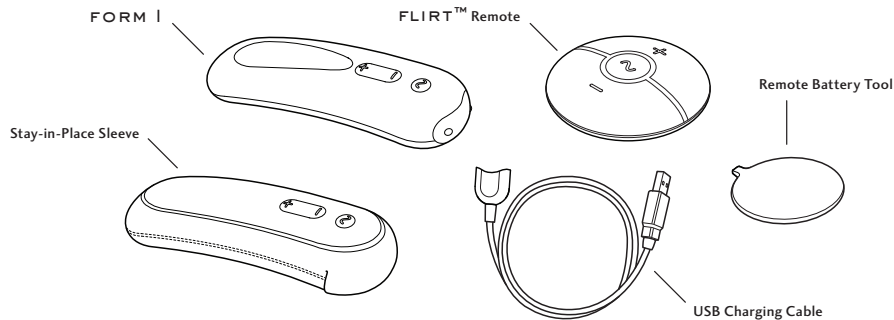

Register your **FORM I** Vibrator and receive 25% off your next purchase.

Enregistrez **FORM I** et profitez d'une réduction de 25% sur votre prochain achat.

Registre **FORM I** y beneficiese de un descuento 25% en su próxima compra.

Registrieren **FORM I** und sie erhalten einen preisnachlass von 25% auf ihren nächsten einkauf.

Registreer **FORM I** en ontvang 25% korting op uw volgende aankoop.

Registrate **FORM I** e riceverete il 25% di sconto sul prossimo acquisto.

[WWW.JIMMYJANE.COM/REGISTER](http://WWW.JIMMYJANE.COM/REGISTER)

## Using FORM I

| To                            | Do This   |
|-------------------------------|---|
| Charge <b>FORM I</b> Vibrator | Place the magnetic charging contacts against each other. Plug the other end into your computer, laptop, or a USB wall socket. The vibrator will be fully charged after two hours.<br><br><b>FORM I</b> Vibrator runs up to 1.5 hours on a single charge, depending on power level and vibration mode.<br><br>Note: To maximize battery life, charge the vibrator for eight hours before first use. If the vibrator is not used for more than 30 days, charge it before use. |

| To                       | Do This   |
|--------------------------|---|
| Turn On                  | Press the (+) button to start the vibrator.<br>Note: If the vibrator is locked for travel, it will first need to be unlocked.   |
| Turn Off                 | Press and hold the (-) button until you reach the lowest vibration level, then click it one more time to make the vibration stop.<br><br><b>FORM</b> Vibrators are intelligent – they remember their last vibration mode when turned off, and will resume in that mode when turned back on. |
| Select a Vibration Level | <b>FORM I</b> has five power levels. Click or press and hold the (+) button to increase the power level. Click or press and hold the (-) button to decrease the power level.<br><br>  |
| Select a Vibration Mode  | <b>FORM I</b> has five unique vibration modes and five pre-programmed tease modes. Press the (~) button to cycle through to the one that makes you smile. (Go to: Using <b>FLIRT</b> Remote Control for tease modes)<br><br>  |

| To                           | Do This  |               |   |             |          |   |               |         |   |            |                |   |             |
|------------------------------|--|---------------|---|-------------|----------|---|---------------|---------|---|------------|----------------|---|-------------|
| Check the Battery Level      | <p>When you disconnect <b>FORM I</b> from its charging cable, lights will illuminate to indicate battery level.</p> <table border="0"> <tr> <td>3 blinks</td> <td>—</td> <td>high charge</td> </tr> <tr> <td>2 blinks</td> <td>—</td> <td>medium charge</td> </tr> <tr> <td>1 blink</td> <td>—</td> <td>low charge</td> </tr> <tr> <td>4 slow flashes</td> <td>—</td> <td>zero charge</td> </tr> </table> <p>If the battery becomes fully discharged while the vibrator is running, the vibration will stop and the light will flash slowly four times to indicate that it needs to be recharged. Charge the vibrator to resume normal function.</p> | 3 blinks      | — | high charge | 2 blinks | — | medium charge | 1 blink | — | low charge | 4 slow flashes | — | zero charge |
| 3 blinks                     | —  | high charge   |   |             |          |   |               |         |   |            |                |   |             |
| 2 blinks                     | —  | medium charge |   |             |          |   |               |         |   |            |                |   |             |
| 1 blink                      | —  | low charge    |   |             |          |   |               |         |   |            |                |   |             |
| 4 slow flashes               | —  | zero charge   |   |             |          |   |               |         |   |            |                |   |             |
| Lock or Unlock (Travel Mode) | <p><b>FORM</b> Vibrators include a convenient button-lock function so that you can be sure that they will not turn on by accident.</p> <p>Press and hold the (+) and (-) buttons simultaneously for 1.5 seconds to lock or unlock your vibrator. If any button is pressed briefly (less than two seconds) when locked, the light will blink rapidly, but your <b>FORM I</b> will not vibrate.</p>  |               |   |             |          |   |               |         |   |            |                |   |             |

| To                                   | Do This   |
|--------------------------------------|---|
| Select a Vibration Level             | <p><b>FORM I</b> has five power levels. Click or press and hold the (+) button on <b>FLIRT</b> to increase the power level on <b>FORM I</b>. Click or press and hold the (-) button on <b>FLIRT</b> to decrease the power level. The LED power indicator lights will let you know the current level.</p>  |
| Select a Vibration Mode              | <p><b>FORM I</b> has five unique vibration modes. Press the (~) button on <b>FLIRT</b> to cycle through them. The LED power indicator lights will let you know the current mode.</p>  |
| Activate <b>TEASE</b> (delay) Mode   | <p>While in mode 5, simultaneously press and hold the (+) button and the (-) button on <b>FLIRT</b> for 1.5 seconds to enter <b>TEASE</b> Mode.</p>   |
| Select a <b>TEASE</b> Mode           | <p>Once in <b>TEASE</b> mode, Press the (+) button to cycle through the five delay settings. The LED power indicator lights will let you know the delay setting:</p> <ol style="list-style-type: none"> <li>5 seconds on, 5 seconds off (one light blinks)</li> <li>10 seconds on, 10 seconds off (two lights blinks)</li> <li>30 seconds on, 30 seconds off (three lights blinks)</li> <li>1 minute on, 1 minute off (four lights blinks)</li> <li>1 minute on, 10 minutes off (five lights blinks)</li> </ol> |
| Deactivate <b>TEASE</b> (delay) Mode | <p>To exit delay mode, simultaneously press and hold the + button and the - button on <b>FLIRT</b> for 1.5 seconds. Or do nothing for 3 seconds and <b>TEASE</b> mode will automatically exit.</p>  |
| Replace Batteries                    | <p>Use the Battery Tool to pop open the tab on the back of the remote (the piece with the <b>JIMMYJANE</b> logo). Remove the battery and replace with a 3V Lithium Battery.</p>   |

## Using **FLIRT**™ Remote Control

| To                                   | Do This  |
|--------------------------------------|--|
| Link <b>FORM I</b> with <b>FLIRT</b> | <p><b>FORM I</b> and <b>FLIRT</b> remote are auto-paired at the factory. If they become disconnected, press the (~) button on both <b>FORM I</b> and <b>FLIRT</b> simultaneously for three seconds. The light will flash to indicate the items are paired.</p>   |
| Turn On                              | <p>Press the (+) button on <b>FLIRT</b> to start vibration on <b>FORM I</b>.<br/>Note: If the vibrator is locked for travel, it will first need to be unlocked.</p>  |
| Turn Off                             | <p>Press and hold the (-) button on <b>FLIRT</b> until you reach the lowest vibration level, then click it one more time to make the vibration stop.</p>   |
| Sleep Mode                           | <p><b>FLIRT</b> and <b>FORM I</b> will go to sleep after 8 hours of no operation. To wake <b>FORM I</b>, press (~) button on <b>FORM I</b> and any button on <b>FLIRT</b>.<br/>Note: If <b>FORM I</b> and <b>FLIRT</b> are out of range from each other for more than 1hr they will automatically go to sleep.</p> |

## Using **FORM I** Stay-in-Place Sleeve

| To                       | Do This   |
|--------------------------|---|
| Use Stay-in-Place Sleeve | <p>The washable neoprene sleeve is designed to hold <b>FORM I</b> in place in any panty, lingerie, or underwear you choose.</p> <ol style="list-style-type: none"> <li>Insert <b>FORM I</b> into the sleeve</li> <li>Place into underwear, lining up the sticky silicone strip against the fabric</li> <li>Take a walk and enjoy</li> </ol> |

| To    | Do This   |
|-------|---|
| Clean | Clean <b>FORM I</b> and <b>FLIRT</b> Remote Control with a damp cloth using mild soap and warm water before and after each use. Do not use any other cleaning products on the surface.  |
| Store | <ul style="list-style-type: none"> <li>– For longest battery life, store <b>FORM I</b> partially charged. If the battery is fully discharged, charge for 30 minutes before storing. Storing a Lithium Polymer battery fully discharged may negatively impact its performance.</li> <li>– If not in use for a long period of time, store <b>FORM I</b>, charging cable, and remote in a cool environment free of dust and moisture.</li> </ul> |

**Note – Do not use silicone lubricant with FORM vibrators or any other silicone product. Silicone lubricants can degrade the product material, limiting its performance and lifespan.**

#### IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING. DO NOT DISCARD THESE INSTRUCTIONS. FORM VIBRATORS HAVE BEEN CAREFULLY ENGINEERED FOR BOTH EFFECTIVENESS AND SAFETY. WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

#### DANGER

In order to reduce risk of electric shock:

- DO NOT place or store the charging cable in water or other liquid.
- DO NOT place or store the charging cable where it can fall or be pulled into a bathtub, sink, toilet or other liquid.
- DO NOT reach for the charging cable if it has fallen into water or other liquid. Unplug immediately.
- DO NOT charge the vibrator when wet.
- ALWAYS unplug the charging cable before cleaning, and ensure that it is dry before plugging it into an electrical outlet.
- DO NOT plug the charging cable into any outlets other than those it has been designed for. Refer to label on the adapter for the correct voltage specification. Voltage converters and plug adapters do not guarantee voltage compatibility. Never force the plug into an outlet.
- DO NOT connect vibrator to the charging cable if the charging cable is damaged.
- DO NOT use a power adapter other than one provided by Jimmyjane.

#### WARNING

To reduce the risk of burns, electrocution, fire or injury:

- Never operate the product if it is not working properly, if it has been dropped, is damaged in any way, or if the charging base has been dropped into water, or has a damaged cord or plug.
- Do not operate the vibrator if the outer layer of silicone or the metal contacts have been damaged.
- Do not mistreat the Lithium Polymer battery if it becomes exposed.
- Do not disassemble, crush or puncture the Lithium Polymer battery. Do not allow metal objects to contact the battery terminals.

- Do not dispose of either the device or the Lithium Polymer battery in a fire.
- Unplug the power adapter from outlet when not in use.
- Do not carry the charging base by its power cord or use the cord as a handle.
- Always keep the power cord away from heated surfaces.
- Always connect charging base to a properly grounded electrical outlet.
- This product is designed for household use only. Do not use charging base outdoors.
- Vibrator and charging base should never be placed in a dishwasher for cleaning.
- The charging base should never be submerged in liquid for cleaning.
- Close supervision is necessary when this product is used by, on or near children, invalids or disabled persons.
- Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Use this product only for its intended purpose as described in this manual.
- Do not use attachments not recommended by Jimmyjane.
- Do not leave unattended on any surface while it is operating.
- Do not massage abdomen when pain is present or if you are pregnant.
- Do not use massager on swollen or inflamed areas or broken skin.
- Do not use on unexplained calf pain.
- Do not massage any single area for more than 15 minutes.
- Never use the product while sleeping.
- Always avoid contact with the eye or eyelid.
- Do not massage the upper neck area near the base of the skull.
- Individuals with pacemakers or other implanted devices should consult a doctor before use.
- Do not use this product as a substitute for medical attention.
- Do not use on broken or sensitive skin areas or in the presence of poor circulation.
- Do not touch the contacts on the charging base with any part of your body.
- If you have concerns regarding your health, consult your doctor before using this product.
- It is recommended that you do not accept candy from strangers.



Electrical and electronic equipment (EEE) contains materials, components and substances which can be dangerous to the environment and harmful to human health if waste electrical and electronic equipment (WEEE) is not disposed of correctly.

Products labeled with the symbol of a crossed-out wheeled bin as shown above are electrical and electronic equipment. The crossed-out wheeled bin denotes that waste electrical and electronic equipment must not be disposed of with the remainder of unseparated household waste, but should instead be collected separately.

All municipalities have established collection schemes to this end. Waste electrical and electronic equipment can be delivered free of charge by any person to recycling stations or to other collection sites, or it can be collected directly from the households. For more detailed information, please refer to your local municipality.

As a consumer, you are not allowed to dispose of waste electrical and electronic equipment together with your household waste. You should instead use the municipal collection schemes. In this way, the environmental impact associated with disposal of waste electrical and electronic equipment is reduced and there will be more opportunity for reusing, recycling and recovering waste electrical and electronic equipment.

#### General

The marking shown above on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

#### Keep In Touch

customerservice@jimmyjane.com  
1.877.JIMMYJANE  
WWW.JIMMYJANE.COM/ASK

JIMMYJANE  
P.O. Box 193974  
San Francisco, California 94119  
USA

JIMMYJANE Europe  
Zweibruckenstrasse 8, 80331  
Munich, Germany

Designed and engineered in California by Jimmyjane. Assembled in PRC. JIMMYJANE, the Jimmyjane logo, FLIRT REMOTE, FORM 1, FORM 2, FORM 3, FORM 4, FORM 5, FORM 6 and FORM 8 are trademarks of Jimmyjane. All designs, images and text copyright © Jimmyjane, 2004 - 2015. All rights reserved. Patents - WWW.JIMMYJANE.COM/IP. jimmyjane Europe - Magneet 12-L, 1446 XD - Purmerend, The Netherlands. Live Sexy.