

1

STEP BY STEP INSTRUCTIONS

Once you open the box your whizzer will look like this.

Everything you need is inside.

Peel the lid off, no screwing needed.



2


Attachments (inc bag, strap) sold separately

A) Remove the white stability ring with the attached funnel

B) then the unisex spout



Ensure the highest part is at the front as a privacy shield.

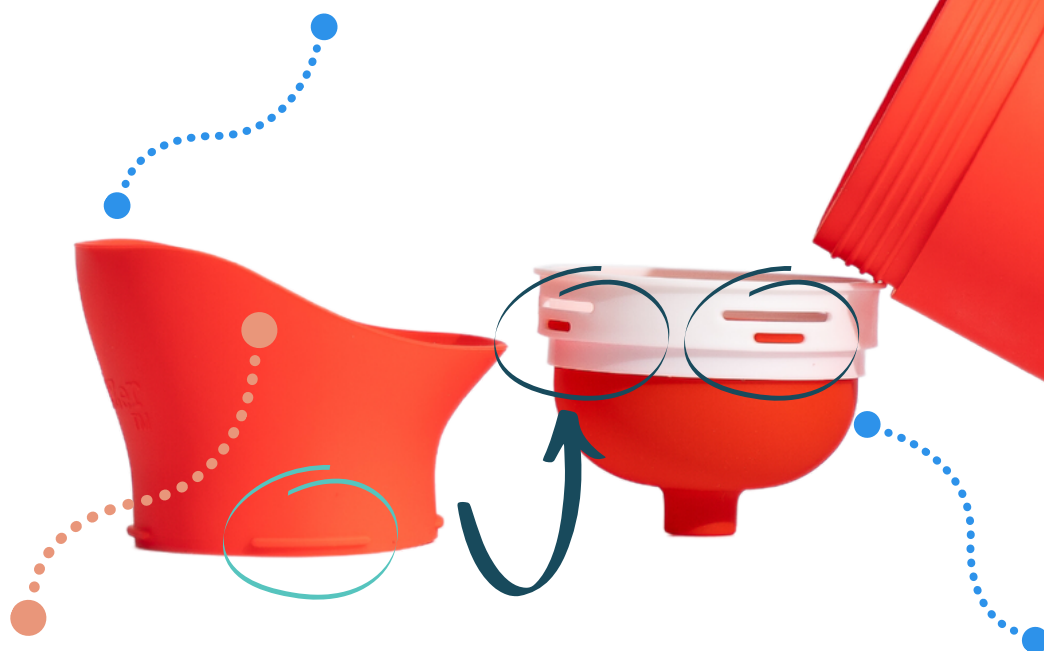

Unisex funnel scoops down to fit beneath the body for females.

The raised bumps on the spout and funnel fit into the holes on the stability ring.

Ensure the parts are secure before use. (it gets quicker after practice)



Leakproof spout can be removed when in use if fast flow fills it too quickly but replace for carrying when full.

4



Either

Once used, remove the spout, stability ring and funnel all in one to empty immediately. Revert steps back to state 1.

Or

Pinch the spout off and replace with the lid and put it all in a bag or use the strap to attach it to something then empty/ clean later.

Attachments (inc bag, strap) sold separately

Tip:
Keep a few
tissues/wipes
with you

We use high-grade food quality silicone so with the right care the Whizzer should last for years of use!

**Clean with hot soapy water after use. *Nothing abrasive. *Dishwasher safe.*