



INSTRUCTIONS:

1

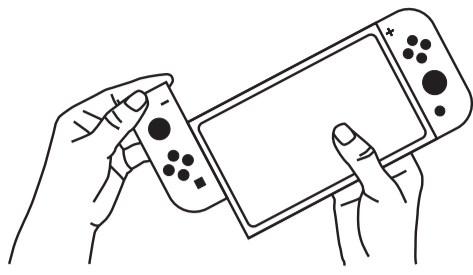


Remove the joy-cons

2

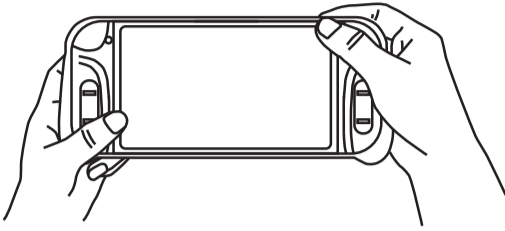

Put the console into the GripCase


3

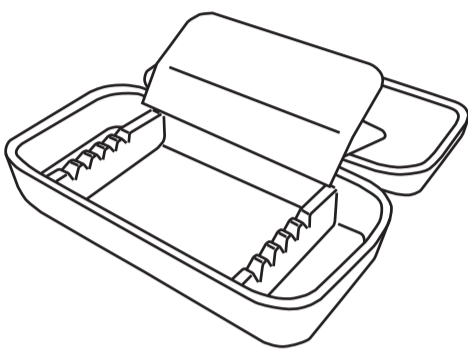

STEEP VIEW

Open the Maxcarry Case


4

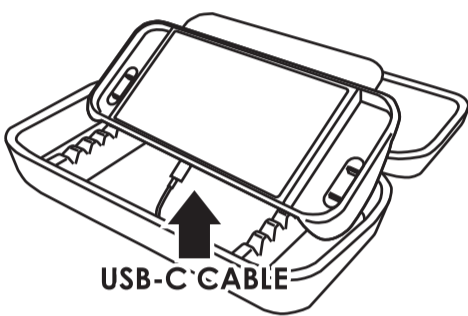

STEEP VIEW

Put SWITCH on the sawtooth rails. You are able to charge your SWITCH when using the Maxcarry Case as a stand.


5

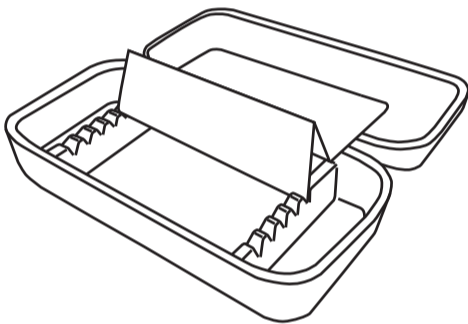

FLAT VIEW

Also, you can fold the bottom pad to make it as a flat angle stand.


6

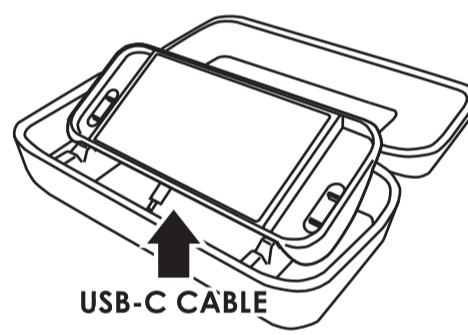

FLAT VIEW

Put SWITCH on the sawtooth rails. You are able to charge your SWITCH when using the Maxcarry Case as a stand.


IN CASE CHARGING:

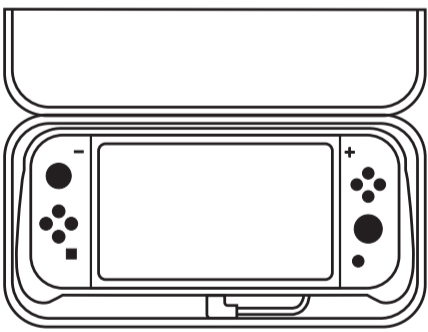

↑
L-SHAPED CABLE

SWITCH & POWER BANK IN THE CASE

Using L-shaped (90°) cable to charge your SWITCH while it is in the Maxcarry Case and the power bank underneath it.

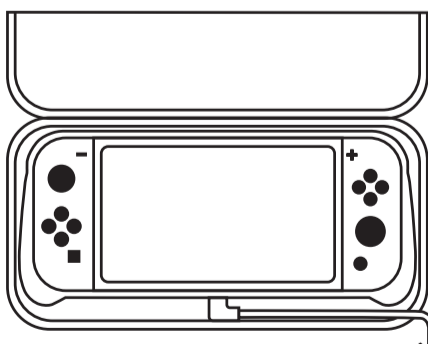

SWITCH IN THE CASE POWER BANK OUTSIDE THE CASE

You may find the SWITCH heated by the power bank when both of them in the Maxcarry Case. If you do mind, leave the power bank outside the case.



{MAXCARRY} CASE

POWER BANK

SWITCH IN THE CASE POWER BANK OUTSIDE THE CASE

Close the Maxcarry Case. Give a small gap for the cable. So the power bank will no longer heat your SWITCH.