



**INSTRUCTIONS:**

1

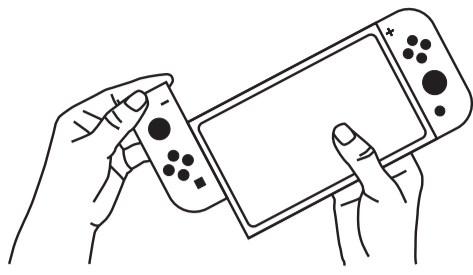


Remove the joy-cons

2

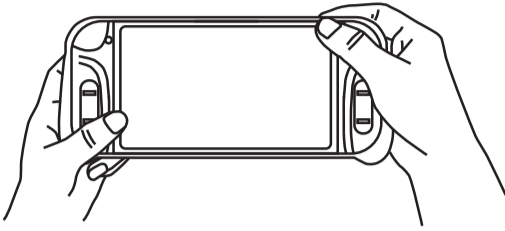

Put the console into the GripCase


3

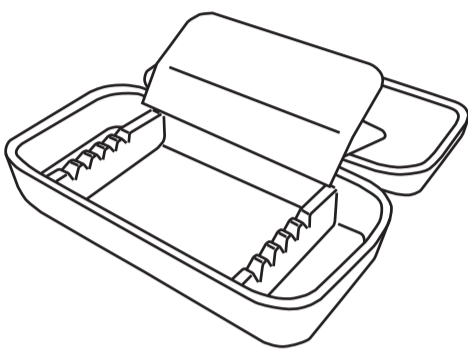

**STEEP VIEW**

Open the Maxcarry Case


4

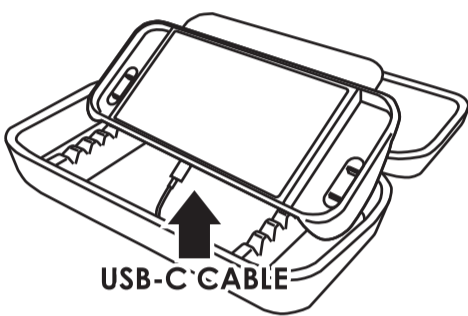

**STEEP VIEW**

Put SWITCH on the sawtooth rails. You are able to charge your SWITCH when using the Maxcarry Case as a stand.


5

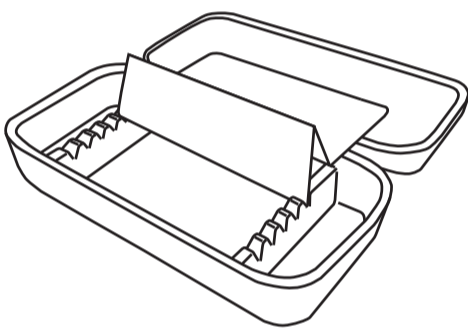

**FLAT VIEW**

Also, you can fold the bottom pad to make it as a flat angle stand.


6

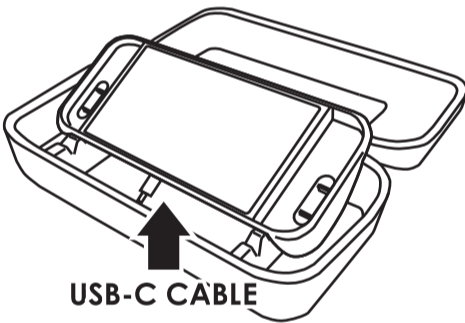

**FLAT VIEW**

Put SWITCH on the sawtooth rails. You are able to charge your SWITCH when using the Maxcarry Case as a stand.


**IN CASE CHARGING:**

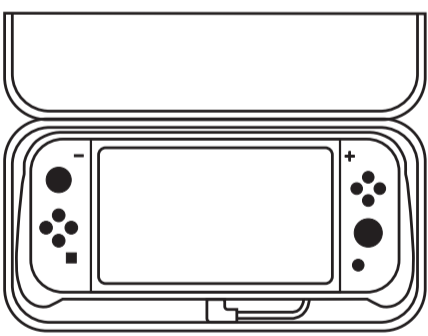

L-SHAPED CABLE

**SWITCH & POWER BANK IN THE CASE**

Using L-shaped (90°) cable to charge your SWITCH while it is in the Maxcarry Case and the power bank underneath it.

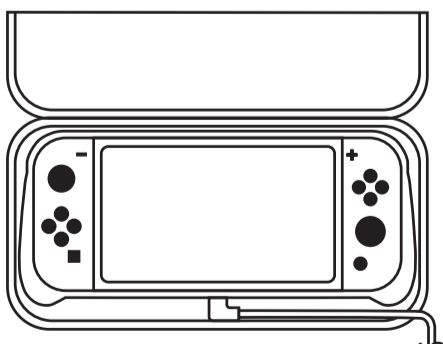

**SWITCH IN THE CASE POWER BANK OUTSIDE THE CASE**

You may find the SWITCH heated by the power bank when both of them in the Maxcarry Case. If you do mind, leave the power bank outside the case.



**SWITCH IN THE CASE POWER BANK OUTSIDE THE CASE**

Close the Maxcarry Case. Give a small gap for the cable. So the power bank will no longer heat your SWITCH.



POWER BANK