


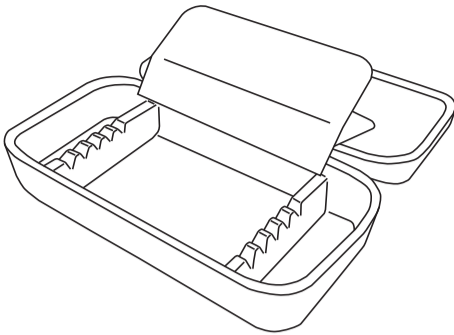

## INSTRUCTIONS:


1



### STEEP VIEW

Open the Maxcarry Case.


2

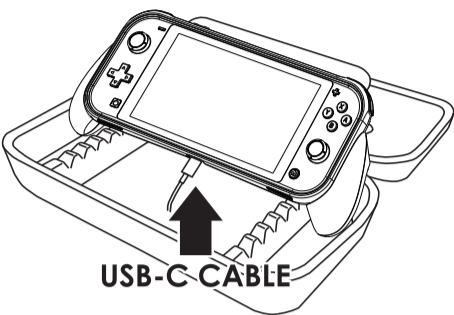

### STEEP VIEW

Put the SWITCH Lite on the rails.  
You are able to charge your SWITCH Lite when using the Maxcarry Case as a stand.


3

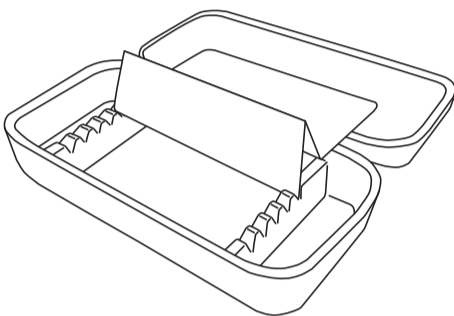

### FLAT VIEW

Fold the bottom pad to use as a kickstand.


4

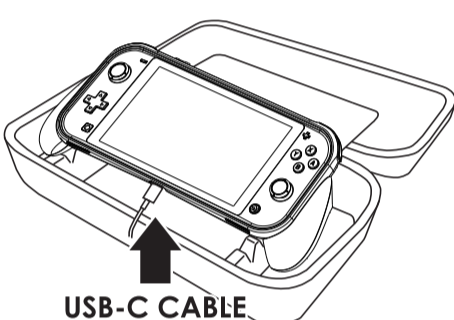

### FLAT VIEW

Put the SWITCH Lite onto the rails.  
The saw rails allow you to change the viewing angle.


## IN CASE CHARGING:

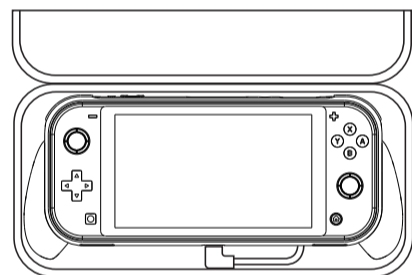

L-SHAPED CABLE


### SWITCH & POWER BANK IN THE CASE

You can use an L-shaped (90°) cable to charge your SWITCH Lite whilst in the Maxcarry Case with power bank underneath.

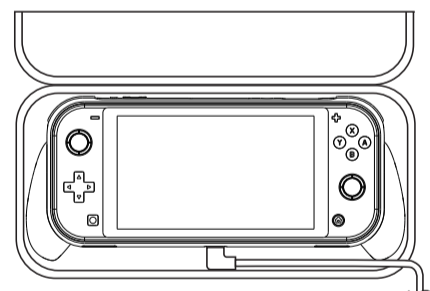

### SWITCH IN THE CASE POWER BANK OUTSIDE THE CASE


You may find the power bank heats the SWITCH Lite when both are inside the Maxcarry Case. If this bothers you, you can leave the power bank out of the case.

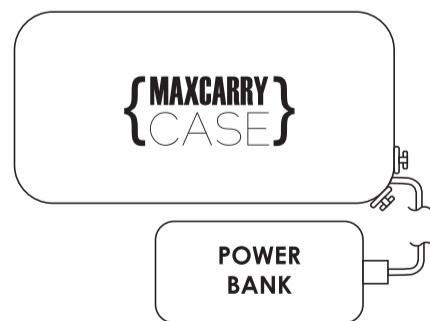

### SWITCH IN THE CASE POWER BANK OUTSIDE THE CASE

The power bank will not heat your SWITCH Lite.

## SLIM BLUETOOTH TRANSMITTER COMPATIBLE:

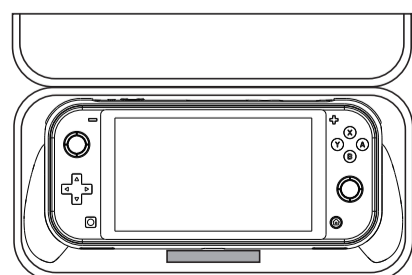

Bluetooth Transmitter

**SLIM (within 10mm)** Bluetooth Transmitter/Adapter Compatible. No need to remove the Bluetooth transmitter when putting the SWITCH Lite into the carrying case.