


How to Replace the Blade in the Classroom Friendly Pencil Sharpener

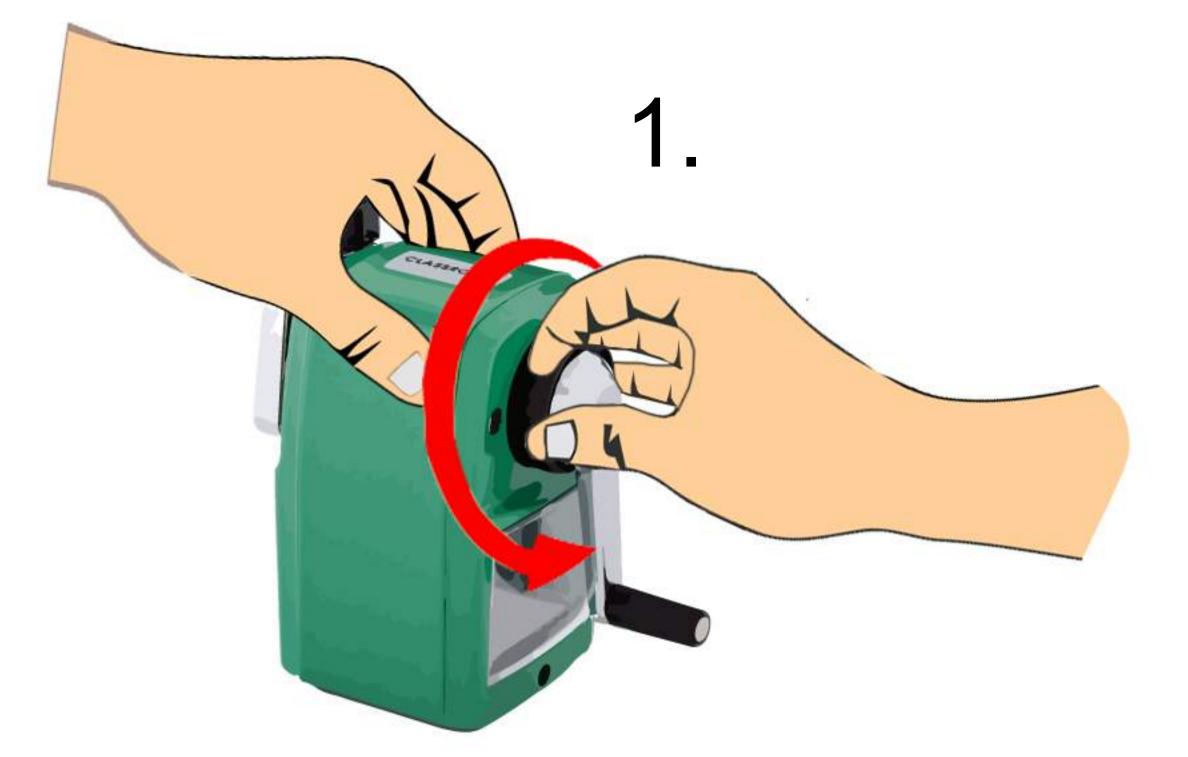


Turn black ring counterclockwise to loosen.

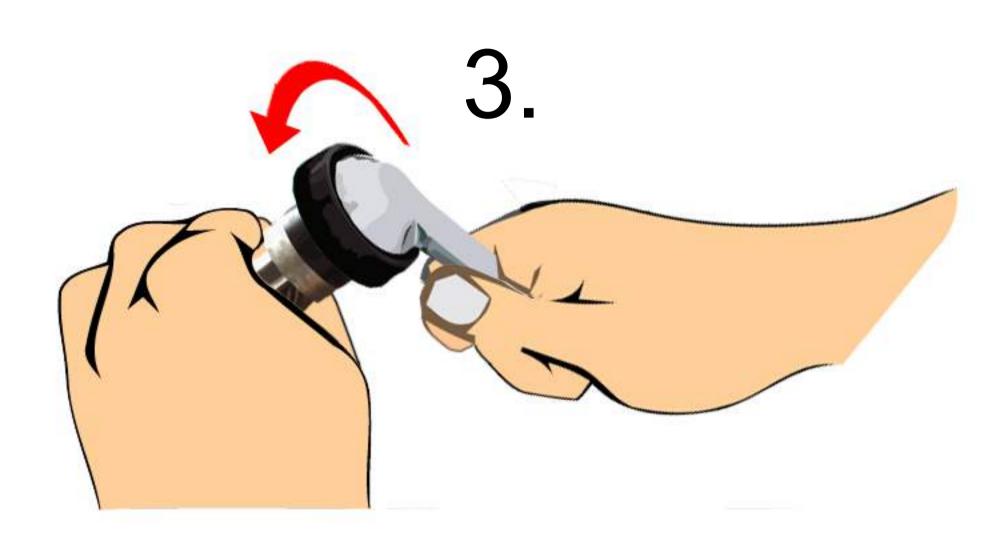


Hold blade firmly in one hand and turn handle counterclockwise. (Be careful as the blade is very sharp.)

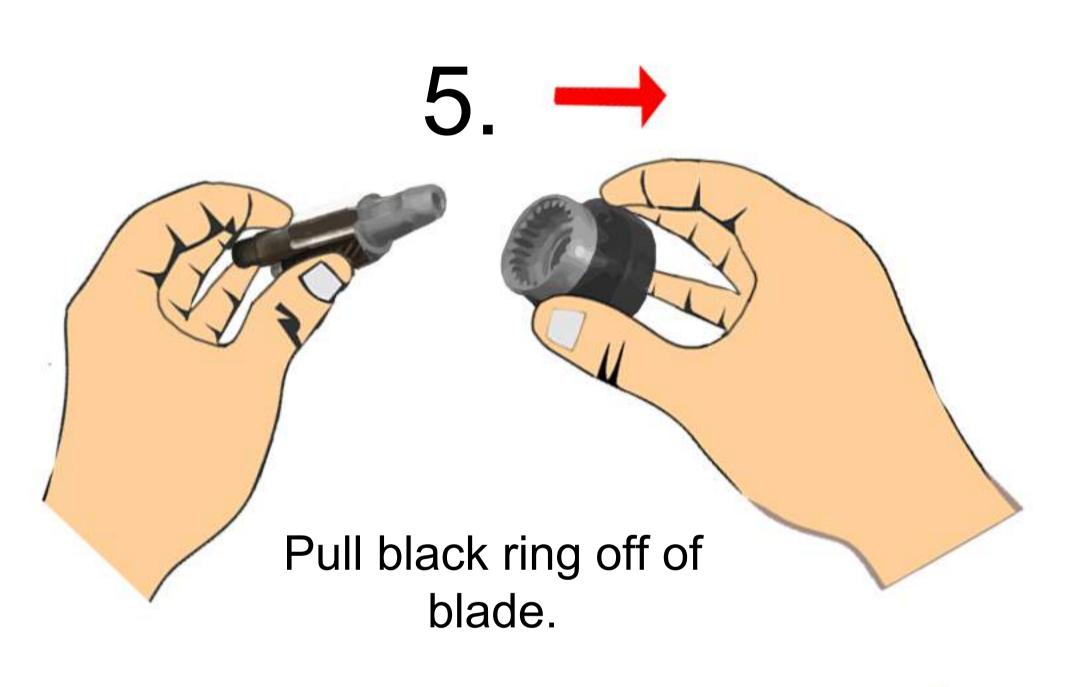




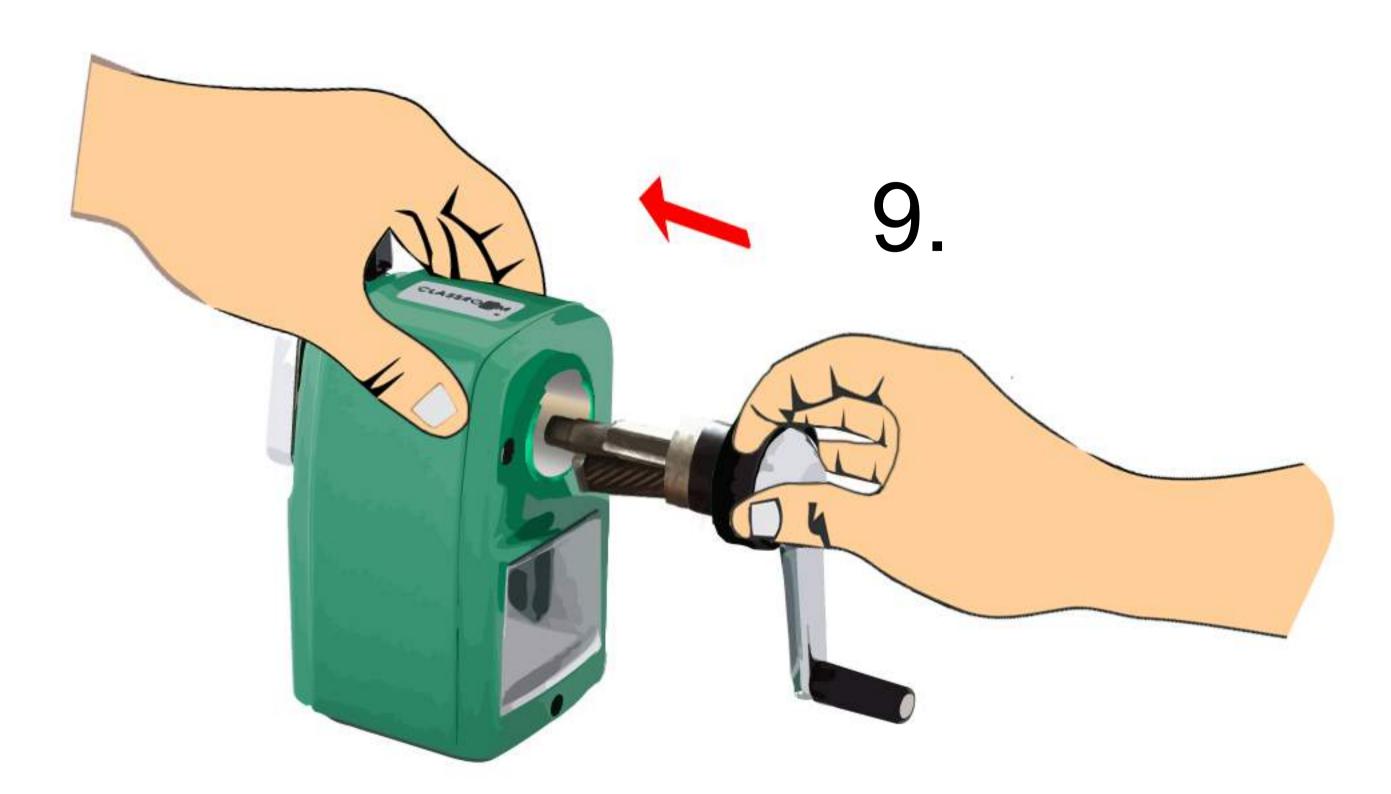


Put blade assembly back into sharpener body.

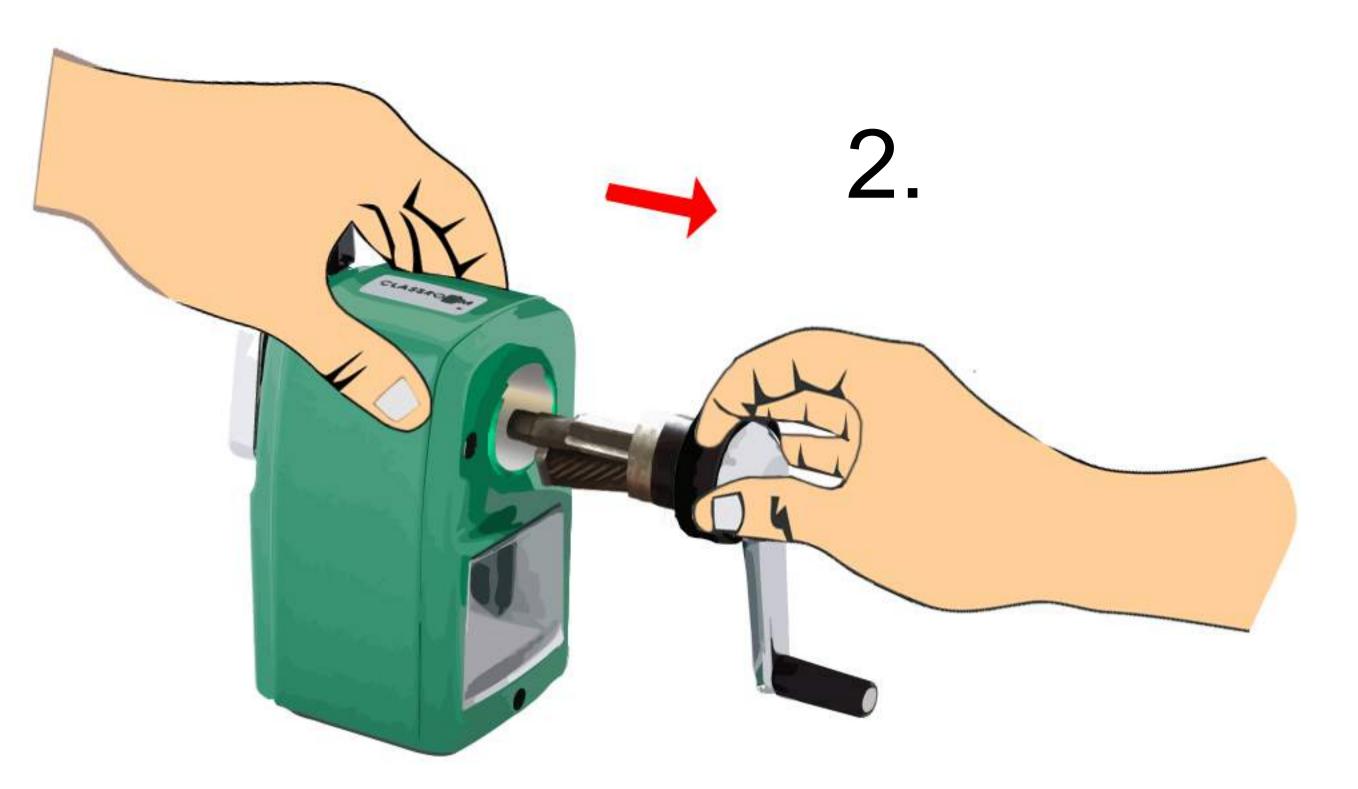


Remove blade assembly from sharpener body.

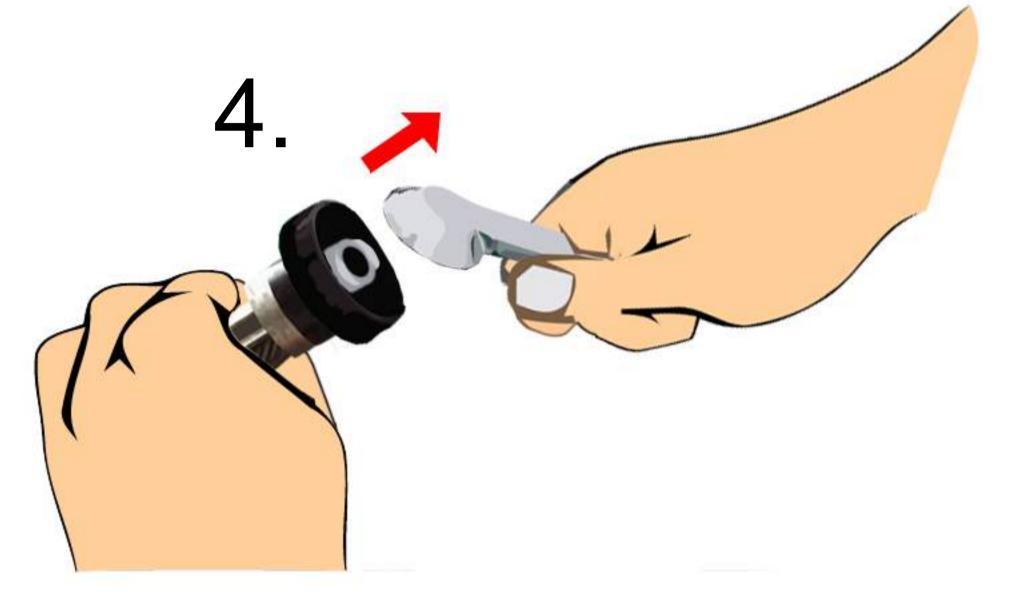


Remove handle from the blade.

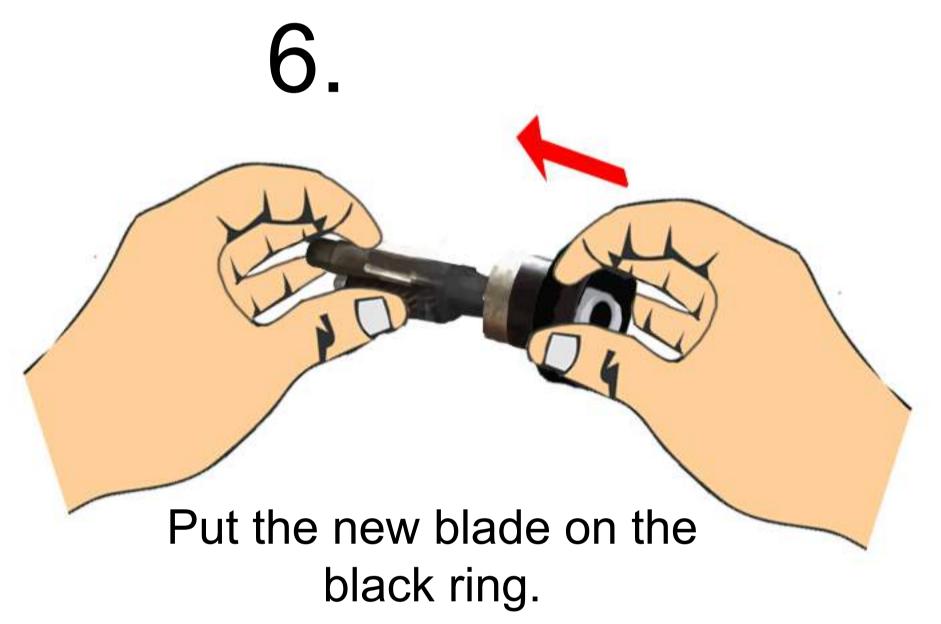

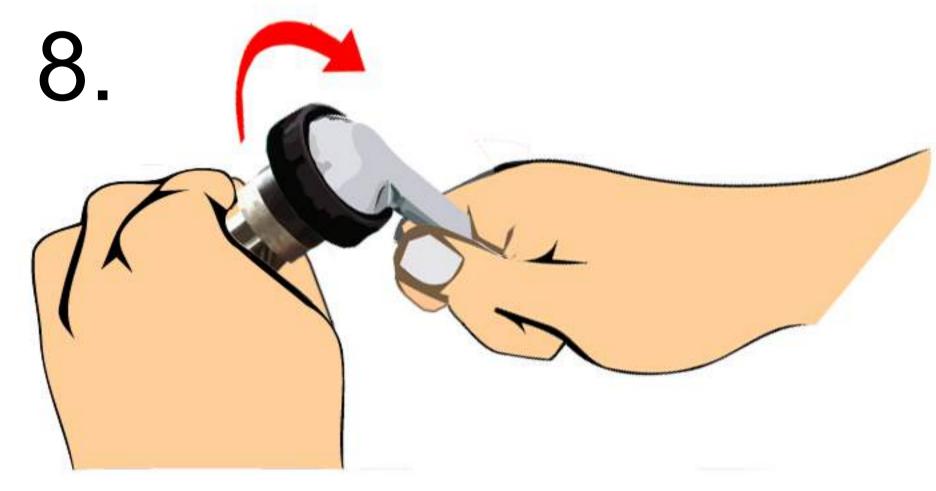

Hold blade firmly in one hand and turn handle clockwise. (Be careful as the blade is very sharp.)

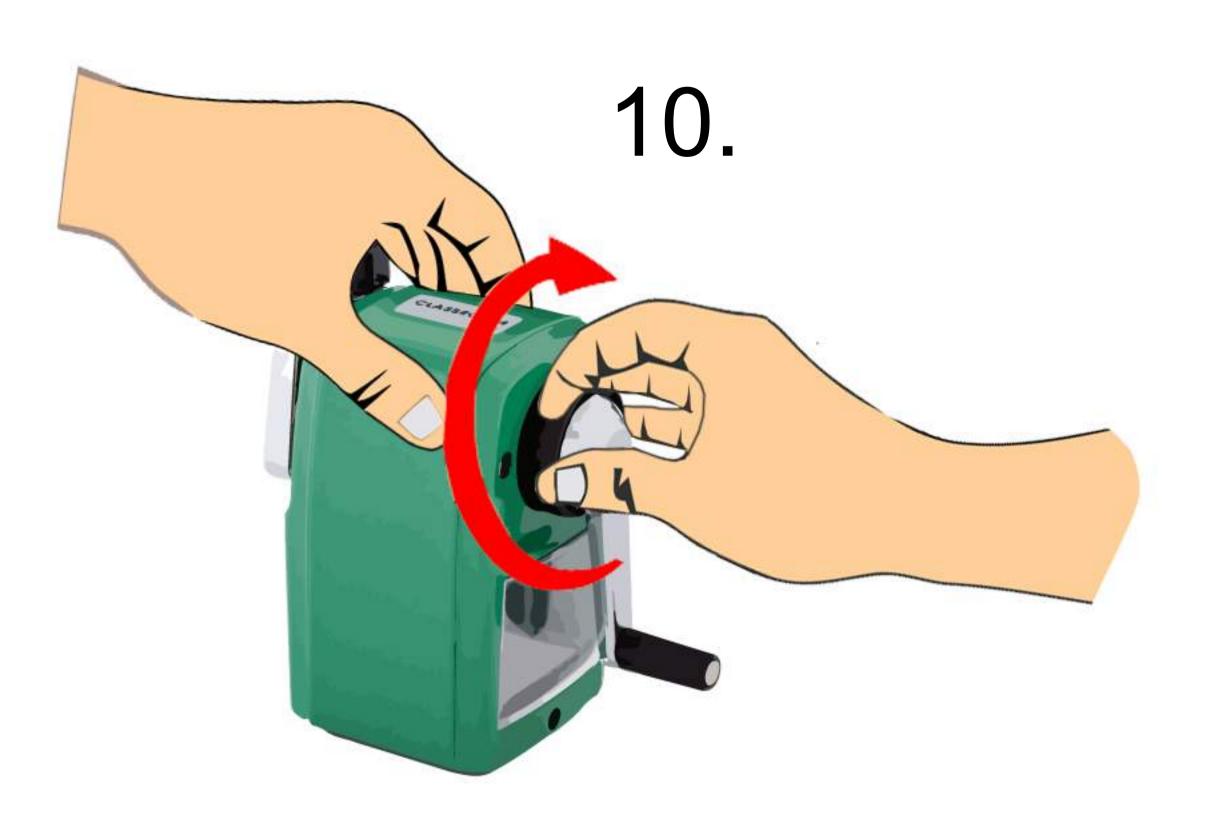

Turn black ring clockwise to tighten.

