

LOTUSGRILL®

THE SMOKELESS CHARCOAL GRILL

INSTRUCTION MANUAL

Charcoal Grill Model G340

Distributed by:

Reduction Revolution Pty Ltd

www.reductionrevolution.com.au

DEU

ENG

FRA

ITA

SPA

NED

FIN

SWE

CZE

SVK

RUS

CRO



- DEU** Betreiben Sie den Grill nicht in geschlossenen und/oder bewohnbaren Räumen, z. B. Gebäuden, Zelten, Wohnwagen, Wohnmobilen, Booten. Es besteht Lebensgefahr durch Kohlenmonoxid-Vergiftung.
- ENG** Do not use the barbecue in a confined and / or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.
- FRA** Ne pas utiliser le barbecue dans un espace confiné et/ou habitable par exemple des maisons, tentes, caravanes, camping-cars, bateaux. Risque de décès par empoisonnement au monoxyde de carbone.
- ITA** Non utilizzare il barbecue in uno spazio confinato e/o abitabile, per esempio in case, tende, caravan, case mobili, barche. Pericolo di morte per avvelenamento da monossido di carbonio.
- SPA** No use la barbacoa en un espacio cerrado y/o habitable, p.e. vivienda, tienda de campaña, caravana, autocaravana, embarcación. Peligro de envenenamiento mortal por monóxido de carbono.
- NED** De barbecue mag niet in afgesloten en/of bewoonbare ruimtes, zoals gebouwen, tenten, caravans, campers en boten, gebruikt worden. Hierdoor ontstaat een levensbedreigend gevaar op koolmonoxidevergiftiging.
- FIN** Älä käyttää grilliä suljetuissa ja/tai asuintiloissa, kuten rakennuksissa, teltoissa, asuntovaunuissa, matkailuautoissa tai veneissä. Hiilimonoksidimyrkytys voi aiheuttaa hengenvaaran.
- SWE** Använd inte grillen i slutna och/eller beboeliga rum, t.ex. byggnader, tält, husvagnar, husbilar, båtar. Det är livsfarligt på grund av risken för kolmonoxidförgiftning.
- CZE** Nepoužívat rožně v uzavřeném prostoru a/nebo obytném prostoru, např. v domech, stanech, karavanech, lodích nebo jiném uzavřeném prostoru. Existuje nebezpečí otravy oxidem uhelnatým.
- SVK** Nepoužívajte gril v uzavretých a/alebo obytných priestoroch, napr. v budovách, stanoch, obytných prívosoch, karavanoch, člnoch. Hrozí nebezpečenstvo ohrozenia života otravou oxidom uhohnatým.
- RUS** Не используйте гриль в закрытых и/или жилых помещениях, например, в зданиях, палатках, автофургонах, жилых автоприцепах, на лодках. Существует опасность отравления угарным газом.
- CRO** Roštilj nemojte upotrebljavati u zatvorenim i / ili prostorima predviđenim za boravljenje, kao što su npr. zgrade, šatori, kamp-kućice, kamperi, brodovi. Postoji opasnost za život od trovanja ugljičnim monoksidom.



DEU Komponentenliste

- 1 - 1 x Grillrost
- 2 - 1 x Deckel für den Holzkohlebehälter
- 3 - 1 x Holzkohlebehälter
- 4 - 1 x Anzündschale
- 5 - 1 x Innenschale
- 6 - 1 x Außenschale mit eingebautem Batteriefach
- 7 - 2 x Verriegelungsschnallen
- 8 - 1 x Kombinierte An-/Ausschalter-Lüftung und Wärmerregler mit Lichtanzeige
- 9 - 4 x Batterie AA 1,5V DC
- 10 - 1 x Batteriefachabdeckung
- 11 - 1 x Steckanschluss
- 12 - 1 x USB-Stromkabel
- 13 - 1 x Transporttasche
- 14 - 1 x Bedienungsanleitung

ENG List of Components

- 1 - 1 x Grill Grid
- 2 - 1 x Charcoal Container Cover
- 3 - 1 x Charcoal Container
- 4 - 1 x Ignition Plate
- 5 - 1 x Inner Bowl
- 6 - 1 x Outer Bowl with integrated Battery Case
- 7 - 2 x Latch
- 8 - 1 x On/Off Switch for Heat Regulation with Light Indicator
- 9 - 4 x Battery AA 1,5V DC
- 10 - 1 x Battery Case Cover
- 11 - 1 x Plug-in connector
- 12 - 1 x USB power cable
- 13 - 1 x Carrying Bag
- 14 - 1 x Instruction Manual

FRA Liste des pièces

- 1 - 1 x grille
- 2 - 1 x couvercle pour le réservoir à charbon de bois
- 3 - 1 x réservoir à charbon de bois
- 4 - 1 x plaque d'allumage
- 5 - 1 x cuve intérieure
- 6 - 1 x cuve extérieure avec compartiment à piles intégré
- 7 - 2 x clips de fixation
- 8 - 1 x interrupteur de mise en marche et d'arrêt du velateur et un thermostat avec témoin lumineux
- 9 - 4 x piles AA 1,5V DC
- 10 - 1 x couvercle pour le compartiment à piles
- 11 - 1 x Connecteur
- 12 - 1 x Câble d'alimentation USB
- 13 - 1 x housse de transport
- 14 - 1 x mode d'emploi

ITA Distinta componenti

- 1 - 1 x griglia
- 2 - 1 x coperchio per il contenitore della carbonella
- 3 - 1 x contenitore della carbonella
- 4 - 1 x piano di accensione
- 5 - 1 x guscio interno
- 6 - 1 x guscio esterno con vano batterie integrato
- 7 - 2 x fibbie di bloccaggio
- 8 - 1 x sistema di ventilazione combinato di accensione/spengimento e regolatore di calore con spia luminosa
- 9 - 4 x batterie AA 1,5V DC
- 10 - 1 x coperchio del vano batterie
- 11 - 1 x Connettore plug-in
- 12 - 1 x Cavo di alimentazione USB
- 13 - 1 x borsa da trasporto
- 14 - 1 x istruzioni per l'uso

SPA Lista de componentes

- 1 - 1 x Parrilla
- 2 - 1 x Tapa para el recipiente de carbón vegetal
- 3 - 1 x Recipiente de carbón vegetal
- 4 - 1 x Bandeja de encendido
- 5 - 1 x Bandeja interior
- 6 - 1 x Bandeja exterior con compartimiento para pilas incorporado
- 7 - 2 x Hebillas de aseguramiento
- 8 - 1 x Interruptor de conexión/desconexión combinado del ventilador y regulador de calor con indicación luminosa
- 9 - 4 x Pilas AA 1,5V CC
- 10 - 1 x Cubierta de compartimiento de pilas
- 11 - 1 x Conector de enchufe
- 12 - 1 x Cable de alimentación USB
- 13 - 1 x Bolsa de transporte
- 14 - 1 x Instrucciones de manejo

NED Component list

- 1 - 1 x grillrooster
- 2 - 1 x deksel voor houtskoolreservoir
- 3 - 1 x houtskoolreservoir
- 4 - 1 x ontstekingsplaat
- 5 - 1 x binnenste schaal
- 6 - 1 x buitenste schaal met geïntegreerd batterijcompartiment
- 7 - 2 x vergrendelingsluitingen
- 8 - 1 x gecombineerde aan/uit-knop en ventilatie-/warmteregelaar met indicatielampje
- 9 - 4 x batterij AA 1,5V DC
- 10 - 1 x afdekplaatje batterijcompartiment
- 11 - 1 x Plug-in connector
- 12 - 1 x USB-voedingskabel
- 13 - 1 x transporttas
- 14 - 1 x gebruikshandleiding

Introduction








Before using the Charcoal Table Grill for the first time, read the manual thoroughly.

Keep the manual for your reference during the complete product life and pass it on to any other grill users.

Technical Data	G340
Weight (approx)	3,7 kg
Main Dimensions (approx)	top Ø 350 mm bottom Ø 260 mm height 234 mm grid Ø 320 mm
Material	Steel and shock-resistant plastics, Grill grid. Inner bowl, charcoal container and latches: stainless steel. Operated with 4 x 1.5 VV batteries (6 Volt).


Safety information

Important symbols and precautionary measures

 IMPORTANT	Be attentive!
 ATTENTION	Inaccurate use could cause damage to material.
 CAUTION	Inaccurate use could cause small injuries or damage to material.
 WARNING	Inaccurate use could cause heavy injuries or even lethal outcome.
 WARNING	<ul style="list-style-type: none">- Do not use spirit or petrol for lighting or re-lighting!- Risk of burns!- Risk of suffocation!- Do not use indoors!
 CAUTION	<ul style="list-style-type: none">- Use only firelighters complying to EN 1860-3!- Keep the grill away from children and animals!- Wear gloves when touching the hot grill grid.- Replace batteries only when grill is completely cooled down.
 ATTENTION	<ul style="list-style-type: none">- Let the grill cool off entirely before cleaning.- Never pour water into the charcoal container in order to extinguish the charcoal.
 IMPORTANT	<ul style="list-style-type: none">- The bbq must be placed on a stable support before use.- Use barbecue tongs. We recommend LotusGrill Accessories.- Never leave the hot grill unattended.- When grilling very fatty foods, ensure that the inner bowl is emptied on a regular basis.- Test the batteries each time before firing the grill.- Do not replace exhausted batteries while using the grill.

Safety information

Secure handling and disposal of used batteries

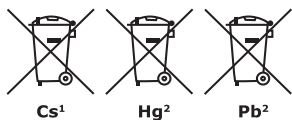

Please note: Only use commercially approved AA-batteries.

Remember to dispose batteries properly according to local regulation, i.e. at a battery collection point.

Batteries may not be disposed with domestic waste.

Proper disposal of charcoal

Dispose charcoal in proper non-combustible or metal containers only. Do not dispose in plastic or inflammable containers.

Environmentally friendly disposal of electrical equipment



Please dispose your old grill at proper collection points, which the manufacturer can point out to you at request. Do not dispose your old device with domestic waste.

Intended Use

The LotusGrill may be used to grill meals using charcoal. Do not use this grill in unventilated spaces.

All guidelines provided in this manual must be observed.

The LotusGrill grill is intended for private use only!

Assembly: General Information

Read the assembly instructions carefully and follow the safety information. Be sure to have enough time at your disposal. Create ample space. Remove grill from packaging!

Assembly: Preparation

Check list of components and chart to make sure all items are included in delivery:

- Remove the pre-assembled grill grid and charcoal container.
- Take off packaging.

First Use

The Charcoal Container may contain a thin oil film on the metal, due to its production process. This oil can cause smoke only in the first use.

Maintenance and Storage



IMPORTANT

The grill must cool off completely before cleaning.



CAUTION

Do not use water to cool off the hot grill. Burns and scalding might occur.

Clean grill grid, inner bowl and other dirty parts after each use. The grill must cool off entirely before cleaning, otherwise burning injuries might occur.

Grill grid and inner bowl are dishwasher safe or can be cleaned with standard washing-up liquid.

We recommend for cleaning of tenacious residues commercially available barbecue cleaners e.g. the LotusGrill Cleaner for BBQ- and Oven.

Clean outer bowl (containing electronic unit) only with wet cloth or brush.

Do not use acidic, solvent or other flammable liquids.

Remove batteries during a longer period of storage.

The charcoal container may be cleaned only dry, e. g. with a brush.



ATTENTION

Never use water to clean the charcoal container!

Warranty

The LotusGrill has a 2-years-warranty from date of purchase against manufacturing defects, given that it was used according to instructions of use. For proof of warranty, please retain your sales receipt with indicated date of purchase.

Abrasion, rust, deformation or staining of parts exposed directly to flame (especially stainless steel parts) are normal wear after use and are under no circumstance considered to be manufacturing defects. The charcoal container is a wearing part and should be changed from time to time.

Assembly and Operation Instructions

Assembly

1. Open the battery case ⁽¹⁰⁾ at the bottom of the outer bowl⁽⁶⁾. Insert four AA batteries⁽⁹⁾. Mind polarity. Close the battery case.
2. Place the inner bowl⁽⁵⁾ into the outer bowl⁽⁶⁾.
3. Fill the charcoal container⁽³⁾ completely with charcoal e. g. LotusGrill Beech Charcoal*
Put cover on charcoal container⁽²⁾.
4. Apply a circular layer of lighter gel on ignition plate⁽⁴⁾, approx 10 mm (0.4 inches) wide.
Place ignition plate⁽⁴⁾ into inner bowl⁽⁵⁾. We recommend the LotusGrill Safety Fuel Gel.
5. Turn the round ventilation control button ⁽⁸⁾ on outer bowl⁽⁶⁾ on.
Turn it clockwise to maximum position.



IMPORTANT

In order not to quench the flame, the ventilation needs to be turned on.



CAUTION

Do not touch the flame!

6. Light gel until it burns.
7. Put the cover⁽²⁾ on the filled charcoal container⁽³⁾ and place container on ignition plate⁽⁴⁾. Within a short period of time, the charcoal will be glowing.



CAUTION

Place the charcoal container carefully and evenly on the ignition plate!

8. Put the grill grid⁽¹⁾ on top of the inner bowl⁽⁵⁾. Make sure to insert the four metal legs into the slots of the inner bowl⁽⁵⁾. Both metal loops at the side of the grill grid⁽¹⁾ have to be aligned with the latches ⁽⁷⁾.
9. Hook the latches into the metal loops, and pull down to lock the device. The grill is now a connected and compact unit.
10. After approx. 3-4 minutes, LotusGrill is ready for use. Use the On/Off Switch for heat regulation⁽⁸⁾ to regulate heat. The fan stays on during the entire barbecue session.


Using the USB power cord

The LotusGrill can be operated either with batteries or using the USB power cord supplied and a USB power pack (not included in the scope of supply). The battery compartment is disconnected when the round connector is plugged into the grill.



IMPORTANT

The USB power cable can not be used to charge rechargeable batteries.

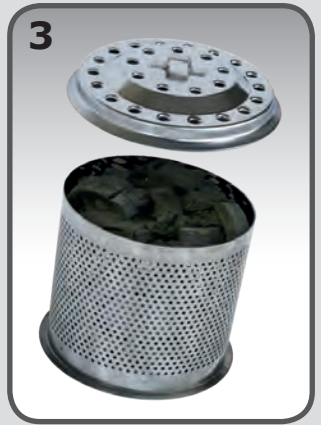

LOTUSGRILL®

THE SMOKELESS CHARCOAL GRILL



DESIGN PLUS



reddot design award
winner 2013

Distributed by:

Reduction Revolution Pty Ltd

www.reductionrevolution.com.au

LotusGrill ist ein eingetragenes Warenzeichen.

Alle Rechte vorbehalten. Änderungen vorbehalten. Stand Februar 2019, Version 33

Vertriebspartner
Reseller
Distributeur
Rivenditore
Concesionario
Distributiepartner
Jälleenmyyjä
Distribütörer
Distributor
Distribütör
Дистрибьютор
Distributer



www.lotusgrill.de