



at&t

quick start guide

Portable Wireless Speaker

model #: PBS10

Portable Wireless Speaker

Compliance with FCC Regulations

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate Radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to Radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to Radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio / television technician for assistance.

Thank you for purchasing Portable Wireless Speaker [PBS10]


**1 year
warranty**

The AT&T brands are used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to Concept 101 LLC at www.att.com/electronics or call **1 (888) 920-8680** from the USA or Canada. Concept 101 LLC warrants that the product will be free from defects in material, parts and workmanship for the period of one (1) year from date of purchase. Concept 101 LLC agrees that it will, at its option, replace the defective product with either a new or remanufactured product equivalent to your original purchase during the warranty period. Please be advised the returned product must carry the proof of purchase.

Portable Wireless Speaker

Controls

1. Wireless/Charge LED indicator (not shown)
2. Micro USB port for charging
3. AUX IN jack
4. Power ON/OFF (switch)
5. Microphone
6. Controller

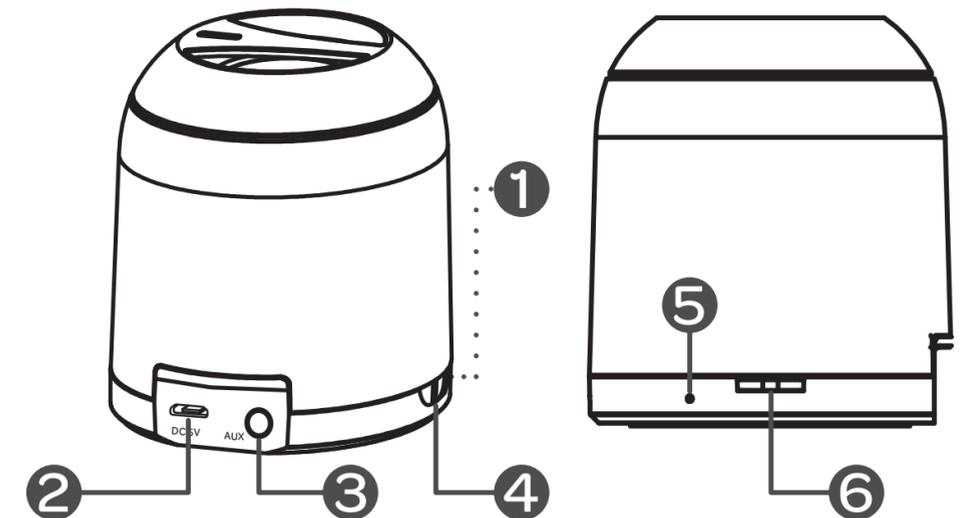

Charging & Power ON/OFF

1. Using the included micro USB cable, charge your speaker by connecting it to any USB port on your computer, or a USB wall adapter.
2. The Charge LED indicator will turn red to indicate that your speaker is charging.
3. Once fully charged the Charge LED indicator will turn off.
4. Power ON/OFF your speaker by sliding the power switch on the side of the speaker.

Bluetooth® Pairing + Playing

1. Turn on the speaker. The blue indicator light will flash to detect Bluetooth enabled devices near you. The blue light will turn off if no Bluetooth devices are detected within 5 minutes.
2. Navigate to the Bluetooth menu on your media player or smartphone and select “PBS10” from the menu.
3. Once paired, start playing music by selecting songs on your device.
4. To play music from another Bluetooth device, disconnect the current device and restart the Bluetooth speaker and repair it with the desired Bluetooth device.

Wireless/Charge LED Indicator Lights

Status	Indicator
Power OFF	No light
Ready to pair	Steady flashing blue light
Bluetooth® connected	Slow flashing blue light

Play Audio Through AUX IN Jack

1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN jack on the speaker and the other end into the headphone jack of your media player.
2. Power on the speaker and press play on your media player.
3. Control your music playback and volume using the native controls on your media player or smartphone.

Controls

Status	Operations
Skip forward/ Volume +	Slide the controller to the V+▶ position for one second to skip to the next song. Slide to the V+▶ position and hold to increase the volume
Skip backward/ Volume -	Slide the controller to the ◀V- position for one second to go to the previous song. Slide to the ◀V- position and hold to decrease the volume

Note: When maximum or minimum volume has been reached, the PBS10 speaker will make a sound to alert you.

Speakerphone Function

- While in Bluetooth mode, to answer an incoming call, press the **▶||☎** button to answer your call. To hang up the call and resume playing music, press the **▶||☎** button again.
- Double press the **▶||☎** button to call the number dialed.



www.att.com/electronics

Concept 101 LLC does not warrant that the speaker will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. Concept 101 LLC has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of Concept 101 LLC. Concept 101 LLC reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us through our website.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

© 2016 Concept 101 LLC. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Concept 101 LLC, New York, New York 10018. Issue 2.2 AT&T 6/2016.