



- 1、 This light fitting operates at a normal supply voltage of 220~240V.
- 2、 When changing the bulb or fuses, always switch off at the mains and allow the old bulb to cool down before handling.