



CONICAL INSTRUCTIONS

CASTER WHEEL INSTALLATION

- 1 Screw the caster wheels into the threaded conical legs.
- 2 Always face the wheel locks pointing towards the front to avoid any tipping.
- 3 Always push from the front or pull from behind when moving the conical.

