

## IMPORTANT RECOMMENDATIONS FOR INSTALLATION

Installation should comply to AS/NZS3500.1 2003 or relevant local requirement.  
Not suitable for gravity feed application.  
Hot & cold water inlet pressures should be equal.



### **WATER PRESSURE**

Operating static pressure is 150 - 500kpa. If pressure exceeds this, then an approved pressure limiting valve must be installed.



### **PRE-FLUSH**

Always flush out the pipework before connecting any faucets.  
Damage caused to the faucet by debris coming through the pipework is not covered under warranty.



### **WATER TEMPERATURE**

Maximum hot water temperature is 75 degree.



### **ATTENTION!**

Failure to do so will void the warranty.



## **CITY LIFE** INSTALLATION INSTRUCTION CL.7100



### **IMPORTANT!**

Please read this instruction **Prior** to installation



T 1300 837 688 E [info@verotti.com](mailto:info@verotti.com)  
[www.verotti.com](http://www.verotti.com)

## **Installation**

1. Ensure both supply pipes has been flushed and is free from debris before proceeding.
2. When installing into a concrete floor, a chase will need to be cut out of the concrete to rough in the supply pipe. Rough in to a spout outlet with a 1/2 inch male BSP thread & cap until fit-off.
3. Feed the two flexible hoses through the floor bracket, riser pipe & cover plate. Hand tighten riser pipe into the bracket & slide plate onto riser pipe.
4. Connect the two flexible hoses into the mixer by hand tightening & making a final adjustment with spanner. Hand tighten riser pipe onto mixer.
5. Connect the two flexible hoses into the water supply by hand tightening & making a final adjustment with a spanner.
6. Screw mounting bracket to floor using fixings provided. Slide cover plate down into position.

## **Care and Use**

1. Shutting the tap gently will reduce the chance of water hammer or 'banging' pipes.
2. Regularly clean the chrome surfaces only with non scouring, neutral wash solutions.



