


**Fan Rotation Should Be Checked By Looking At The Cooling Fan On The Motor. The Cooling Fan Should Be Turning Clockwise As Shown By The Arrow Below**

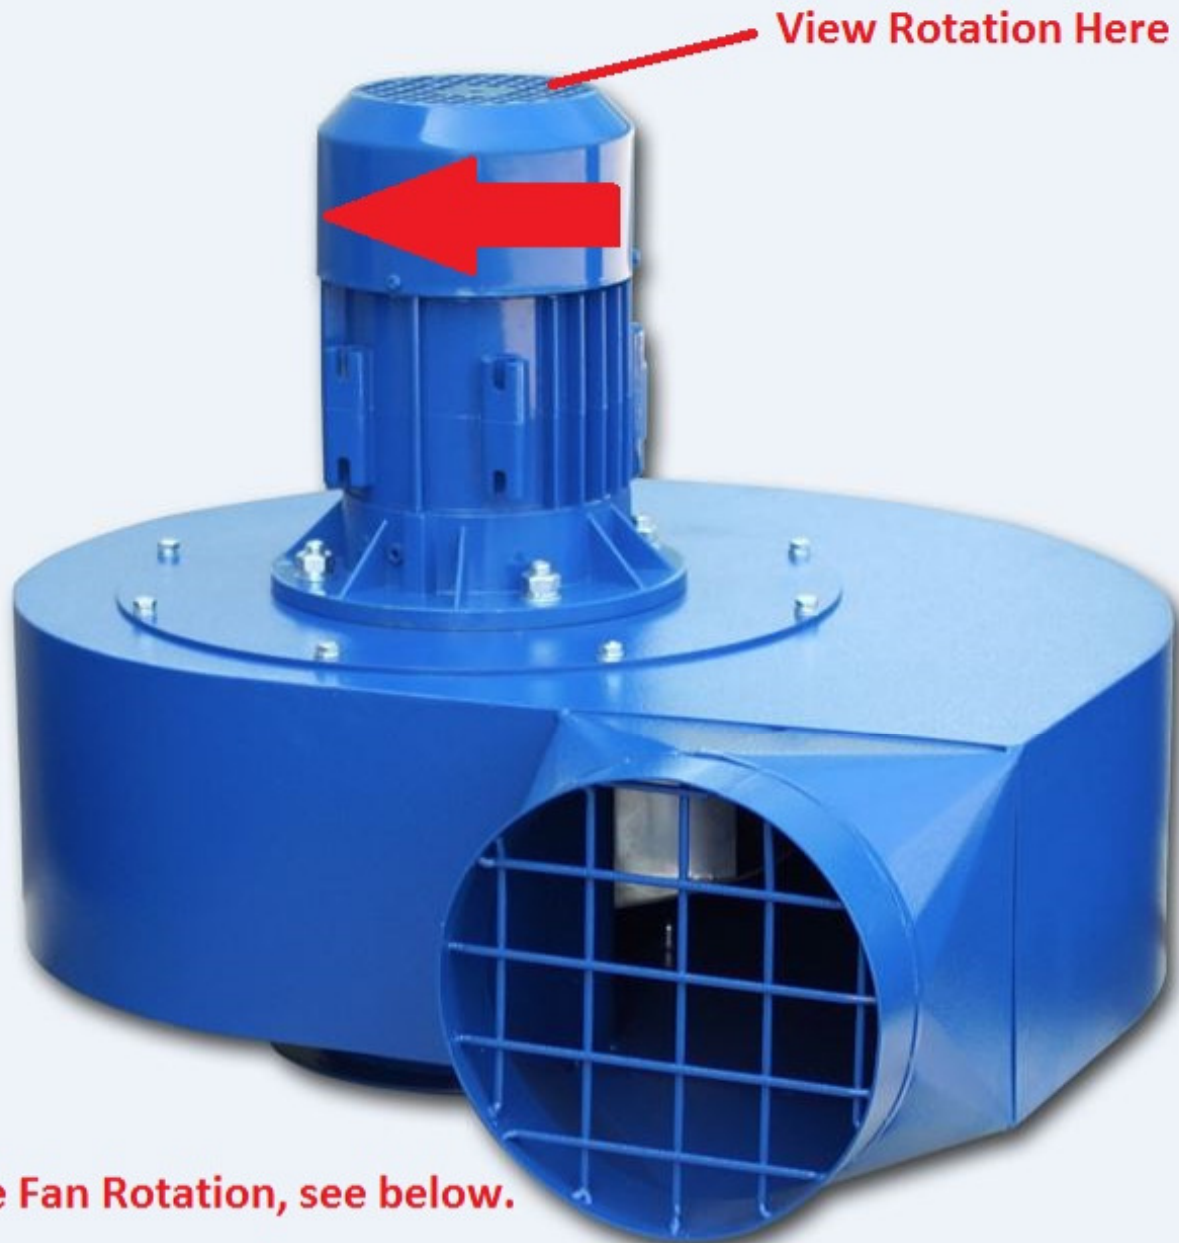

**To Reverse Fan Rotation, see below.**

**3 Phase Electrical - Interchange Any 2 Incoming Power Wires  
(e.g. - interchange Line1 & Line2)**

**Single Phase Electrical - Follow Instructions On Motor Nameplate**