

## MODE

- Circle Ramp
- Saw Ramp
- Analog Style
- Sweep Filter
- FM Pad
- Bass Delay

## MIDI Parameters:

Sends and receives notes on CH 1 by default.

To change send & receive channel (1-16), hold down corresponding key during power up.

## KNOB 1

- Slope
- Slope
- Cutoff
- Slope
- LFO Rate
- Time

## KNOB 2

- Height
- Height
- Resonance
- Resonance
- Index
- Feedback


## Sequence Recording

Press and hold SEQUENCE button until SEQUENCE LED flashes red.

Play a note to begin recording.  
Adjustments to KNOB 1, 2, and TUNE are recorded too.

Press SEQUENCE button to end recording.  
Playback begins immediately.

As many as 256 notes or 90 seconds  
(whichever comes first) can be recorded.

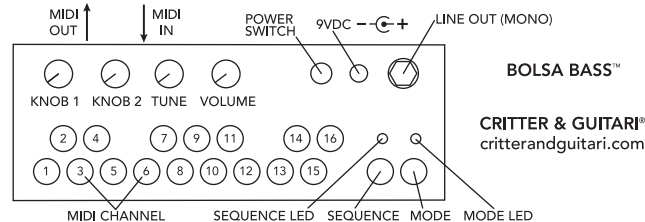

For more information, please visit: <http://critterandguitari.com/bolsabass>

© 2015. All Rights Reserved. USA.