

MODE

- Vibrato Synth
- Harmonic Sweeper
- 2-Octave Arpeggiator
- Octave Cascade
- Mono FM Synth
- FM Arpeggiator
- Mono Glider

KNOB 1

- Depth
- Rate
- Rate
- Rate
- Harmonicity
- Rate
- Detune

KNOB 2

- Rate
- Envelope
- Envelope
- Decay
- Index/Envelope
- Index/Envelope
- Glide


BUTTON

- Waveform
- Waveform
- Waveform
- Waveform
- Octave Shift
- Octave Shift
- Waveform

When MIDI clock is present, RATE selects these beat divisions:



NOTES / MIDI
RECEIVE CHANNELS

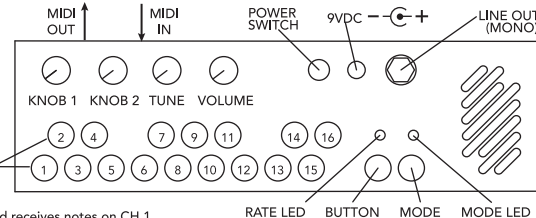

To 'Hold' notes: 1. Press & hold note(s) 2. Press & hold MODE 3. Press BUTTON & release all pressed keys. Note(s) are now held until next note is pressed.

MIDI Parameters: Sends and receives notes on CH 1.

To change receive channel (1-16), hold corresponding key during power up.

RATE LED

BUTTON

MODE

MODE LED

Manual available at: critterandguitari.com/pocket-piano-midi

© 2016. All Rights Reserved.
Made in Brooklyn, NY.

POCKET PIANO MIDI™

CRITTER & GUITARI®
critterandguitari.com