

 
CLUTCH RELEASE MOVEMENT ALTERATION KIT INSTALLATION MANUAL (AUTOMATIC ADJUSTMENT TYPE) **ENCLOSED PARTS IN THE KIT**

Fork Set (Pre-assembled at factory)

Dust Cover T-Bracket (Φ 12 pin, 2 circlips for Φ 12 pin) Sleeve Bearing (2 bearing retainers)

Release Cylinder Set

Cylinder Push Rod 2 Slide Rods (Φ 10 pin, 2 circlips for Φ 10 pin) I Bracket Return Spring Hydraulic Hose



INSTALLATION

installation easier. Do not disassemble the kit, except for the instructed part in this manual.

1. Remove the original release fork, release sleeve, release cylinder, dust boot and linkage base.

2. Set the sleeve bearing to the front cover, while the fork set being on it.

3. Set the T bracket and dust boot using the bolts provided in the kit.

4. Set the release cylinder to the bell housing with the original bolts. See Picture 2. Make sure if the slide rod operates smoothly.

5. This movement alteration kit is automatic adjustable. Disassemble the provided slave cylinder and adjust the length to 115mm as shown in picture 4. Reassemble the slave cylinder and it is ready for installation.

Release Slide Rod OSOS SASO Picture 2



XCheck to see if all the parts are enclosed.

- X Please be aware of potential risks and hazards when installing our products. We do not take any responsibility for any loss and/or injury occurred when our products are modified, re-used and/or ill-fitted.
- XSpray aerosol lubricant to the appropriate surface of the moving parts.
 - Periodical lubrication is recommended.
- XThe clutch release movement alteration parts are expendables. When excessive wear or damage is found, all concerning parts should be replaced at the same time.
- XAll information on this sheet is based on Japanese Domestic Model vehicles and may not be applicable in your country. XSpecification may be changed without notice.



Picture 1