

YK-9699A

 
Contents

Precautions for Use.....	1
Parts.....	2
Operation Instructions.....	3-6
Specifications.....	7
Precautions for Maintenance.....	7
Multiple-finger Chord Finger Techniques Table.....	8
Single-finger Chord Finger Techniques Table.....	9
Voice List.....	10-13
Style List.....	13-16

Precautions of use

Do not share the socket with other electrical appliance.

It may lead to overheat of the socket and cause fire or other unexpected accidents

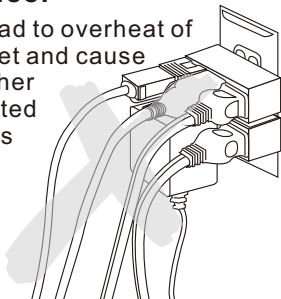


Do not disassemble, repair or modify the product.

Poor assembly may cause unexpected failure or accident, which may do harm on your interests.



 Cut the power off when you don't use the product to save energy.

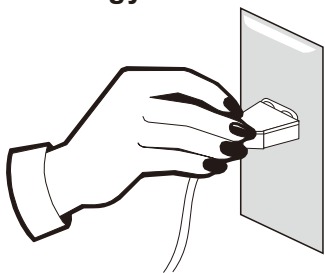


Use under rated voltage only.

The product may not work properly if the voltage is too low, and may even reduce the useful life of the product; if the voltage is too high, it will damage the circuit and even cause fire.



Well keep the cables

 Do not cut off, break, drag, distort or modify the cable; do not put anything heavy on the cable to avoid breaking it and causing unexpected failure or accident.

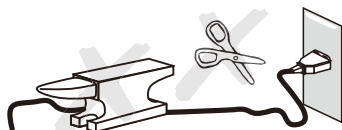


Never wash the product with water or use it in the bathroom to avoid water penetration and causing unexpected failure or accident.




Parts

 Basic Operator Panel

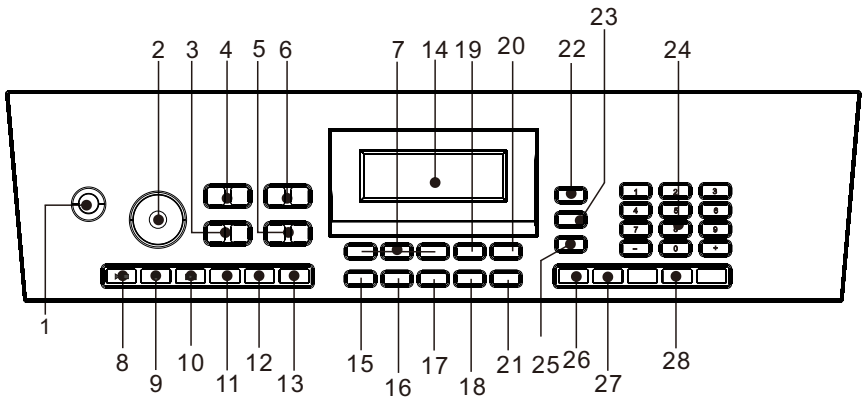

Back Panel

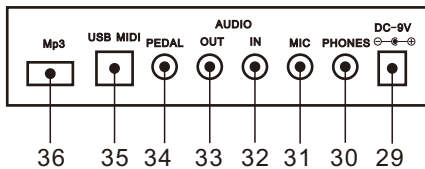 

- | | | | |
|-----------------|-----------------|--------------|----------------------|
| 1. Power Switch | 10. Fill-In | 19. Metro | 28. Mp3 Control |
| 2. Main Vol | 11. Single | 20. Record | 29. Dc Input |
| 3. Chord Vol | 12. Finger | 21. R-play | 30. Earphone Output |
| 4. Tempo +/- | 13. Chord Off | 22. Voice | 31. Mic Input |
| 5. Tran. +/- | 14. Lcd Display | 23. Style | 32. Audio Input |
| 6. Acmp Vol | 15. Split | 24. Number | 33. Audio Output |
| 7. Lesson | 16. Vibrato | 25. Songs | 34. Pedal Output |
| 8. Start/Stop | 17. Sustain | 26. Demo One | 35. Usb Midi |
| 9. Sync | 18. Drum | 27. Demo All | 36. U Disk Interface |

Operating Instructions

Before using


(I). Power Supply

For this electronic keyboard, the external power adapter must be used according to the specified power parameters. Always turn off the keyboard power whenever you are not using it.

*Use external power adapter

1. Connect the external power supply to the external power input on the back of the keyboard (see the picture on the right)
2. Connect the power plug of the external power supply to the AC power outlet.

**Note: Only use the power parameters applicable to this keyboard; external power supply of other models may cause fire or electric shock.

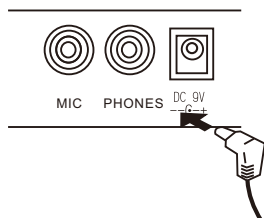

(II). Connector

1. Headphone output interface:

Insert the headphone plug into the headphone output port on the back of the keyboard. At this time, the internal speaker of the keyboard is automatically cut off. With the headphone, you will not interfere with others when playing, especially suitable for personal monitoring and night practice.

2. Microphone input interface

Insert the condenser microphone into the microphone input interface to sing and play at the same time.

** Note: Only condenser microphone can be applied to this product.

3. Audio input/output interface

Input: Input other audio to the electronic keyboard and restore it.

Output: It can be applied to connect the audio amplifier through which the sound can be restored. It is specially for the large-scale play performance.

4. USB flash disk interface and USB MIDI interface


It can be applied to connect the USB flash disk and play any song in the form of MP3 stored in the disk. USB MIDI interface allows connecting to tablet PC and computer for APP connection to realize teaching function.

(for Android system only)

5. Pedal interface (fermata pedal)

Insert the pedal into the pedal input port on the back of the keyboard. At this time, play the keyboard and step on the pedal to give a fermata effect.

Note: In order to adapt to the fermata pedals of different structures, it is best to connect the fermata pedal before the keyboard is turned on, or turn off the keyboard and then turn it on after it is connected.

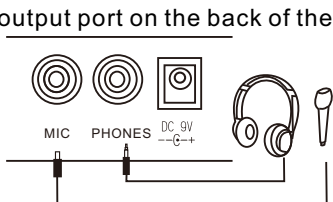

Operating Instructions

Basic operation

I. Power switch and volume control

 
Move the power switch (1) to the ON position to turn on the LCD, and adjust the volume (2) to the appropriate level. 10 volume levels are available for the accompaniment.

II. Playing demo

1. Press Continuous Play (27) key to continuously play built-in demo songs.

2. Press Chosen Play (26) key to play the chosen demo song. Press Song Selection (25) and then press Number Selection (24) to choose a built-in demo song for playing among 50 built-in demo songs. It will pause after the chosen song plays to the end. Press "+" or "-" in Number Selection (24) to change another demo song for playing.

3. Repeat the above operation and play the next demo song automatically.

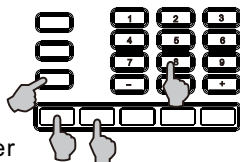

Tone and Effect

I. Selection of tone

This electronic keyboard has 500 tones for selection.

When the keyboard power is turned on, the key sound is grand piano tone. Press the tone selection key (22) and

press the number selection key (24) to select the tone you

need; press the "+" / "-" in the number selection key (24) to change the tone number and the tone, and the LCD display shows the corresponding tone number.

II. Selection of effects

 
1. During keyboard playing, press the sustain key (17) and vibrato key (16) to select the corresponding sound effect setting.

2. Dual keyboard playing: press the dual keyboard key (15) to enable the dual keyboard function, and then the keyboard will be split into left and right keyboard. Press the tone selection key (22) and then press any number key to select a tone for the right keyboard.

3. Press "+" in the transposition key (5) to increase 6 half-tones in turn and press "-" to decrease 6 half-tones. Press "+" and "-" at the same time to recover the default status.

4. Percussion music playing

Press Drum button (18), tap the keypad to play percussion music.

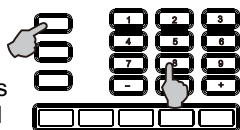

Playing rhythm

I. Selection of rhythm

This electronic keyboard has 500 rhythms for selection. Press the rhythm selection key (23), then press the number selection key (24) to select the

Operating Instructions

rhythm you need; or press the “+”/“-” keys in the number selection key (24) to increase or decrease the rhythm number, and the LCD display shows the corresponding rhythm number.



II. Start and stop of rhythm

 
Press the Start/Stop key (8) to start the rhythm, and press it again to stop the rhythm.

III. Adjustment of rhythm speed

Press the rhythm key (4): press “+” to speed up the beat and press “-” to slow down the beat. At the same time, press the rhythm speed (4) “+”/“-” back to the default speed.

IV. Automatic bass chords

1. Press the single-finger chords (11) and the multi-finger chords (12) in the chords control key to respectively enter the chosen automatic chords status.



2. Press the sync key (9) and play the keyboard's chords section, and automatically enter the chords status.

Press any key among 19 keys on the left keyboard to start the prelude. After the prelude ends, it will shift to the basic accompaniment.

3. Press the chords on/off (13) to turn on/off the automatic bass chords.

4. The single-finger chords playing mode and the multi-finger chords playing mode are available.

V. Inserting drum sound

During the rhythm playing, press Insert key (10) to insert short drum music into the rhythm.

VI. Metronome

Press the metronome (19) to change a beat. There are four variations of the metronome sound, which is sequential: 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat → stop.

Recording function

1. You can record your performance by pressing the Record key (20).
2. When you have finished recording, press the Play key (21), and the keyboard will play back the recorded playing.

USB flash disk playing

This electrical keyboard supports the playing of all songs in MP3 format.

1. Connect the USB flash disk in which songs in MP3 format are stored with the interface (36) on the back of the keyboard; then, it will automatically enter the playing status.
2. During the music playing, press Pause, Play, Previous, and Next in MP3 Control (28) to enable corresponding functions.
3. During the music playing, press Previous or Next in MP3 Control (28) to adjust the specific playing volume.

Operating Instructions

USB MIDI

 
This keyboard supports data connection with the tablet PC and mobile phone with OTG function, realizes the intelligent teaching function by downloading the corresponding teaching APP.

Teaching Function

After having press the corresponding teaching item of Lesson Function (7) , press the white key to select music and enter into corresponding learning modes. Music Note key must be pressed during learning to continue playing the music. Otherwise, the music will be paused. It will automatically exit from teaching mode after one piece of music is learnt. Press other mode keys in learning mode to exit from learning mode.


A.Step 1 (One Key One Note) Mode:

Music Note key must be pressed during learning to continue playing the music. Otherwise, the music will be paused. But the right sound will be made whether the music note keys performed are right or not. The music will be played continuously till it is ended.

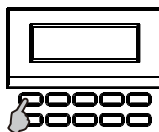


B.Step 2 (Follow) Mode:

 The music will be played continuously only when the correct note keys are pressed. Otherwise, the music will be paused. During playing the performed music key sound, the music will be played continuously till it is ended.

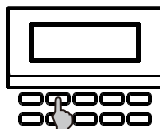

C.Step 3 (Accompaniment) Mode:

 The principal tone of music will be shielded when a note is pressed and the principal tone will be automatically opened 5 seconds after no note is pressed, similar to Karaoke feature. The music will be played continuously till it is ended.

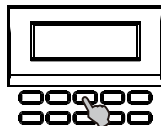

Specification Table

Model	YK-9699A
Rated Voltage	External power adapter DC-12V/2A
Keyboard and Display	61 keys and the multifunctional LCD
Tone & Rhythm	500 Standard MIDI tones/500 rhythm styles
Demo songs	50 famous demo songs
Teaching function	Intelligent three-step teaching system
Automatic bass chords	Single-finger and multi-finger chords system
Control and sound effect	Vibrato,metro,sustain,split,drum
Play recording	Recording/playback
External interfaces	MP3, earphone, audio in/out,mic,pedal

Maintenance and Precautions

Proper maintenance of the keyboard is significant for extending the keyboard's service life and reducing any possible malfunction. Specific precautions are shown as follows:

1.Dust prevention and moisture protection

Keep the keyboard's surface clean and prevent any foreign material from entering its interior via the gap of the switch or keys. Frequently use the soft dry cloth to wipe its surface. The keyboard shall be placed in the dry place to prevent any moisture. In addition, do not expose the keyboard to the strong sunlight for a long time.

2.Vibration prevention

The keyboard shall be moved or transported with caution and avoid any strong vibration and impact; otherwise, its outer shell or internal electronic elements may be damaged.























































3.Corrosion protection























































Protect the keyboard from exposing to any acid or alkaline substance; avoid operating the keyboard in such place filled with corrosive gas so as to prevent any risk of circuit oxidation and bad contact.

4.No replacement

















































The keyboard is a precise instrument, and any modification may even result in any malfunction. In case of any malfunction, please send it to the company's maintenance department or the local distributor or experienced maintenance staff for servicing. Please do not randomly disassemble and replace any element.

Multiple-finger Chord Finger Techniques Table

	C	C [#]	D	E ^b	E	F
MAJOR (C)						
MINOR (Cm)						
DOMINANT 7th (C7)						
MINOR 7th (Cm7)						
MAJOR 7th (Cmaj7)						
DIMINSHED (Cdim7)						
AUGMENTED (Caug)						
6th (C6)						
MINOR 6th (Cm6)						

	F [#]	G	A ^b	A	B ^b	B
MAJOR (C)						
MINOR (Cm)						
DOMINANT 7th (C7)						
MINOR 7th (Cm7)						
MAJOR 7th (Cmaj7)						
DIMINSHED (Cdim7)						
AUGMENTED (Caug)						
6th (C6)						
MINOR 6th (Cm6)						

Single-finger Chord Finger Techniques Table

Voice List

PIANO

000 Acoustic Grand Piano
001 Bright Acoustic Piano
002 Electric Grand Piano
003 Honky-tonk Piano
004 Rhodes Piano
005 Chorused Piano
006 Harpsichord
007 Clavichord
008 Celesta
009 Glockenspiel

PERCUSSION

010 Music box
011 Vibraphone
012 Marimba
013 Xylophone
014 Tubular Bell
015 Dulcimer

ORGAN

016 Drawbar Organ
017 Percussive Organ
018 Rock Organ
019 Church Organ
020 Reed Organ
021 Accordion
022 Harmonica
023 Tango Accordion

GUITAR

024 Acoustic Guitar (nylon)
025 Acoustic Guitar (steel)
026 Electric Guitar (jazz)
027 Electric Guitar (clean)
028 Electric Guitar (muted)
029 Overdriven Guitar
030 Distortion Guitar
031 Guitar Harmonics

BASS

032 Acoustic Bass
033 Electric Bass (finger)
034 Electric Bass (pick)
035 Fretless Bass
036 Slap Bass 1
037 Slap Bass 2
038 Synth Bass 1
039 Synth Bass 2

STRINGS/ENSEMBLE

040 Violin
041 Viola
042 Cello
043 Contrabass
044 Tremolo Strings

045 Pizzicato Strings
046 Orchestral Harp
047 Timpani
048 String Ensemble 1
049 String Ensemble 2
050 Synth Strings 1
051 Synth Strings 2
052 Choir Aahs
053 Voice Oohs
054 Synth Voice
055 Orchestra Hit

BRASS

056 Trumpet
057 Trombone
058 Tuba
059 Muted Trumpet
060 French Horn
061 Brass Section
062 Synth Brass 1
063 Synth Brass 2
064 Soprano Sax
065 Alto Sax
066 Tenor Sax
067 Baritone Sax

REED/PIPE

068 Oboe
069 English Horn
070 Bassoon
071 Clarinet
072 Piccolo
073 Flute
074 Recorder
075 Pan Flute
076 Bottle Blow
077 Shakuhachi
078 Whistle
079 Ocarina

SYNTH SOUND1

080 Lead 1 (square)
081 Lead 2 (sawtooth)
082 Lead 3 (calliope lead)
083 Lead 4 (chiff lead)
084 Lead 5 (charang)
085 Lead 6 (voice)
086 Lead 7 (fifths)
087 Lead 8 (bass+lead)

SYNTH SOUND2

088 Pad 1 (new age)
089 Pad 2 (warm)
090 Pad 3 (polysynth)
091 Pad 4 (choir)

092 Pad 5 (bowed)
093 Pad 6 (metallic)
094 Pad 7 (halo)
095 Pad 8 (sweep)
SYNTH SOUND3
096 FX 1 (rain)
097 FX 2 (soundtrack)
098 FX 3 (crystal)
099 FX 4 (atmosphere)
100 FX 5 (brightness)
101 FX 6 (goblins)
102 FX 7 (echoes)
103 FX 8 (sci-fi)

STRINGS 2

104 Sitar
105 Banjo
106 Shamisen
107 Koto
108 Kalimba
109 Bagpipe
110 Fiddle
111 Shanai

EFFECTS

112 Tinkle Bell
113 Agogo
114 Steel Drums
115 Woodblock
116 Taiko Drum
117 Melodic Tom
118 Synth Drum
119 Reverse Cymbal
120 Guitar Fret Noise
121 Breath Noise
122 Seashore
123 Bird Tweet
124 Telephone Ring
125 Helicopter
126 Applause
127 Gunshot

ETHNO

128 Yong Gin
129 Zheng
130 Zhong Ruan
131 Pi Pa
132 Big Souna
133 Souna
134 Er Hu
135 Yue Hu
136 Di Zi
137 Bong Di
138 Koto

Voice List

139 Qu Di	190 Soft Accord	241 Didgeridoo 3
140 Xylophone 2	191 Wind Organ	242 Grow Guitar 2
141 Dulcimer 2	192 Viola Attack	243 Soft Guitar 3
142 Guitar Pinch 2	193 Bari & Tenor	244 Soft Clav. 2
143 Slow Violin	194 Soft Guitar 1	245 Soft Sax 3
144 Bright String	195 Grow Guitar	246 Tubular Bells 3
145 Jungle Bass 2	196 Didgeridoo 1	247 Bodhran 2
146 Indian Flute	197 Attack Barafon	248 Oct Harp 2
147 Clavi 2	198 Mute Barafon 1	249 Tsugaru 2
148 Celesta 2	199 Nay	250 Bari & Tenor 2
149 Church Bells	200 Didgeridoo 2	251 Wind Organ 2
150 Kalimba 2	201 Dual Horns 2	252 Soft Accord 2
151 Steel Bell 1	202 Hard Barsoon 1	253 Attack Harp 4
152 Tenor Sax 2	203 Kawala 1	254 Viola Attack 2
153 Woodblock 2	204 Soft Guitar 2	255 Kawala 3
154 Electric Guita (Clean) 2	205 Mute Barafon 2	256 Soft Sax 4
155 Shanai 2	206 Hard Barsoon 2	257 Jazz Organ 2
156 Marimba 3	207 Tron Flute	258 Nay 2
157 Dulcimer 3	208 Kawala 2	259 Mute Barafon 3
158 Reed Organ 3	209 Jazz Organ	260 Dulcimer 4
159 Koto 2	210 Synth Harpsi. 3	261 Xylophone 4
160 Crystal	211 Woodblock 3	262 Tron Flute 2
161 Bag Pipe 2	212 Tenor Sax 3	263 Hard Barsoon 3
162 Barafon	213 Steel Bell 3	264 Mute Barafon 4
163 Organ Flute	214 Kalimba 4	265 Soft Guitar 4
164 Kalimba 3	215 Shamisen 3	266 Kawala 4
165 Reed Horn	216 English Horn 3	267 Hard Barsoon 4
166 English Horn 2	217 Shanai 3	268 Dual Horns 4
167 Electric Guita (Clean) 3	218 Soft Sax 2	269 Didgeridoo 4
168 Shamisen 2	219 Attack Harp 2	270 Steel Bell 5
169 Koto 3	220 Castanets 2	271 Kalimba 5
170 Hard Vibe 2	221 Suona 2	272 Church Bells 2
171 Twin Bones	222 Xylophone 3	273 Celesta 3
172 Synth Harpsi. 1	223 Koto 4	274 Clavi 3
173 Attack Clav. 1	224 Attack Clav. 3	275 Indian Flute 2
174 Chorus Guitar.	225 Synth Harpsi. 4	276 Jungle Bass 3
175 Steel Bell 2	226 Twin Bones 2	277 Bright String 2
176 Tsugaru	227 Hard Vibe 3	278 Slow Violin 2
177 Oct Harp	228 Reed Horn 2	279 Guitar Pinch 3
178 Synth Harpsi. 2	229 Organ Flute 2	280 Bag Pipe 4
179 Attack Clav. 2	230 Steel Bell 4	281 Crystal 3
180 Soft Santur	231 Chorus Guitar. 2	282 Koto 5
181 Dual Horns 1	232 Dual Horns 3	283 Reed Organ 4
182 Bodhran	233 Soft Santur 2	284 Dulcimer 5
183 Tubular Bells 2	234 Barafon 2	285 Marimba 4
184 Suona	235 Bag Pipe 3	286 Shanai 4
185 Castanets	236 Crystal 2	287 Electric Guita (Clean) 4
186 Attack Harp 1	237 Attack Clav. 4	288 Woodblock 4
187 Electric Vraphone	238 Electric Vraphone 2	289 Tenor Sax 4
188 Soft Sax 1	239 Attack Harp 3	290 Twin Bones 3
189 Soft Clav.	240 Attack Barafon 2	291 Hard Vibe 4

Voice List

292 Koto 6	343 Soft Sax 6	394 Didgeridoo 8
293 Shamisen 4	344 Shanai 5	395 Dual Horns 8
294 Electric Guitar (Clean) 5	345 English Horn 5	396 Hard Barsoon 8
295 English Horn 4	346 Shamisen 5	397 Kawala 8
296 Reed Horn 3	347 Kalimba 7	398 Soft Guitar 8
297 Kalimba 6	348 Steel Bell 7	399 Mute Barafon 8
298 Organ Flute 3	349 Tenor Sax 5	400 Woodblock 6
299 Barafon 3	350 Chorus Guitar. 4	401 Electric Giutar (Clean) 6
300 Dual Horns 5	351 Steel Bell 8	402 Shanai 6
301 Soft Santur 3	352 Organ Flute 4	403 Marimba 5
302 Attack Clav. 5	353 Reed Horn 4	404 Koto 8
303 Synth Harpsi. 5	354 Hard Vibe 5	405 Xylophone 6
304 Oct Harp 3	355 Twin Bones 4	406 Tenor Sax 6
305 Tsugaru 3	356 Synth Harpsi. 8	407 Organ Flute 5
306 Steel Bell 6	357 Attack Clav. 7	408 Kalimba 8
307 Chorus Guitar. 3	358 Koto 7	409 English Horn 6
308 Attack Clav. 6	359 Xylophone 5	410 Electric Giutar (Clean) 7
309 Synth Harpsi. 6	360 Didgeridoo 7	411 Shamisen 6
310 Wind Organ 3	361 Attack Barafon 4	412 Koto 9
311 Soft Accord 3	362 Attack Harp 7	413 Kalimba 9
312 Soft Clav. 3	363 Electric Vraphone 4	414 Barafon 5
313 Soft Sax 5	364 Attack Clav. 8	415 Chorus Guitar. 5
314 Electric Vraphone 3	365 Crystal 4	416 Tsugaru 5
315 Attack Harp 5	366 Bag Pipe 5	417 Synth Harpsi. 9
316 Castanets 3	367 Barafon 4	418 Crystal 5
317 Suona 3	368 Soft Santur 4	419 Bag Pipe 6
318 Tubular Bells 4	369 Dual Horns 7	420 Synth Harpsi. 10
319 Bodhran 3	370 Wind Organ 4	421 Soft Sax 9
320 Dual Horns 6	371 Bari & Tenor 4	422 Soft Clav. 5
321 Didgeridoo 6	372 Tsugaru 4	423 Bodhran 5
322 Nay 3	373 Oct Harp 4	424 Bari & Tenor 5
323 Mute Barafon 5	374 Bodhran 4	425 Soft Guitar 9
324 Attack Barafon 3	375 Tubular Bells 5	426 Didgeridoo 9
325 Didgeridoo 5	376 Soft Sax 7	427 Mute Barafon 9
326 Grow Guitar 3	377 Soft Clav. 4	428 Nay 5
327 Soft Guitar 5	378 Soft Guitar 7	429 Soft Santur 5
328 Bari & Tenor 3	379 Grow Guitar 4	430 Kawala 9
329 Viola Attack 3	380 Hard Barsoon 7	431 Soft Guitar 10
330 Woodblock 5	381 Tron Flute 4	432 Mute Barafon 10
331 Synth Harpsi. 7	382 Mute Barafon 7	433 Tron Flute 5
332 Jazz Organ 3	383 Nay 4	434 Kawala 10
333 Kawala 5	384 Jazz Organ 4	435 Soft Accord 5
334 Tron Flute 3	385 Soft Sax 8	436 Wind Organ 5
335 Hard Barsoon 5	386 Kawala 7	437 Kalimba 10
336 Mute Barafon 6	387 Viola Attack 4	438 Shamisen 7
337 Soft Guitar 6	388 Attack Harp 8	439 English Horn 7
338 Kawala 6	389 Soft Accord 4	440 Shanai 7
339 Hard Barsoon 6	390 Guitar Pinch 4	441 Soft Sax 10
340 Suona 4	391 Indian Flute 3	442 Didgeridoo 10
341 Castanets 4	392 Bright String 3	443 Tenor Sax 7
342 Attack Harp 6	393 Church Bells 3	444 Koto 10

Voice List

445 Synth Harpsi. 11	464 Soft Accord 6	483 Mute Barafon 14
446 Organ Flute 6	465 Tron Flute 6	484 Hard Barsoon 10
447 Synth Harpsi. 12	466 Mute Barafon 12	485 Tron Flute 7
448 Woodblock 7	467 Soft Guitar 12	486 Kawala 14
449 Xylophone 7	468 Kawala 12	487 Jazz Organ 5
450 Soft Santur 6	469 Didgeridoo 12	488 Synth Harpsi. 13
451 Bag Pipe 7	470 Bari & Tenor 6	489 Woodblock 8
452 Crystal 6	471 Wind Organ 6	490 Tenor Sax 8
453 Soft Guitar 11	472 Soft Guitar 13	491 Steel Bell 9
454 Soft Clav. 6	473 Grow Guitar 5	492 Kalimba 11
455 Soft Sax 11	474 Didgeridoo 13	493 Shamisen 8
456 Bodhran 6	475 Attack Barafon 5	494 English Horn 8
457 Tsugaru 6	476 Mute Barafon 13	495 Shanai 8
458 Chorus Guitar. 6	477 Nay 7	496 Soft Sax 13
459 Kawala 11	478 Didgeridoo 14	497 Attack Harp 9
460 Soft Sax 12	479 Dual Horns 9	498 Castanets 5
461 Nay 6	480 Hard Barsoon 9	499 Suona 5
462 Mute Barafon 11	481 Kawala 13	
463 Didgeridoo 11	482 Soft Guitar 14	

Style List

Pop	027 Classic 8Beat	054 60's Vintage Rock	080 Reggae 16Beat
000 China1	028 Vintage Gtr Pop	055 Chart Rock Shfl	081 Bossanova
001 China2	029 Schlager Italia	056 60's Pop Rock	082 Mambo 1
002 China3	030 50's Pop	Ballroom	083 Mambo 2
003 China4	031 Cool Pop	057 Waltz	084 Bolero
004 China5	032 Groovy Pop	058 Cha Cha	085 Cumbia
005 China6	033 60's Vintage Pop	059 Rumba	086 Latin Rock
006 China7	034 80's Pop	060 Jive	087 Disco Latin
007 China8	Rok	061 Pasodoble	088 Tijuana
008 China9	035 Rock'n Roll 1	062 Samba 1	089 Reggae
009 China10	036 Rock'n Roll 2	063 Samba 2	090 Pop Mambo
010 Club Pop	037 Straight Rock	064 Schlager Rock 1	091 Latin Party Pop
011 16 Beat Pop	038 Jazz Rock	065 Schlager Rock 2	092 Cumbia
012 8 Beat Pop	039 Fast Gospel	066 Fox Trot	093 Parranda
013 8 Beat Soul	040 Folk Rock	067 Viennese Waltz	094 Carnival
014 8 Beat Rock	041 Rock Billy	068 Tango 1	Ballad
015 Rap Pop	042 Rock Boogie	069 Tango 2	095 Slow Rock 1
016 Pop Rock	043 Rock Cha Cha	070 German Waltz	096 Slow Rock 2
017 60's Soul	044 Rock Classical	071 Carnival	097 Slow Rock 3
018 70's Soul	045 Rock Shuffle	072 Organ Samba	098 Slow Soul
019 Funk	046 Rock Pop	073 Reel	099 8 Beat Adria
020 16 Beat Shuffle	047 Skiffle	074 Gay Gordons	100 Classic Piano
021 Twist	048 Funk Pop Rock	075 Scand Waltz	101 Unplugged
022 British Pop	049 Contemp Rock	Latin	102 Pop Ballad
023 Hard Rock	050 Acoustic Rock	076 Salsa	103 Pop New Age
024 Fusion	051 60's Rock N	077 Calypso	104 8 Beat Modern
025 Funk Shuffl	052 Standard Rock	078 Guad Dance	105 Country Ballad
026 Fusion Shuffl	053 Brit Rock Pop	079 Reggae 12Beat	106 Love Song

Style List

- 107 Modern Country Pop
- 108 Electro Pop
- 109 Acoustic Ballad
- 110 Piano Ballad
- 111 R&B Ballad
- 112 Rock Ballad
- 113 Slow & Easy
- 114 Analog Ballad
- 115 E_Ballad
- 116 80's EP Ballad
- 117 80's Boy Band
- 118 70's Chart Ballad
- 119 Romantic Ballad
- 120 90's Cool Ballad
- 121 Alp Ballad1
- 122 Alp Ballad2
- Dance
- 123 Techno 1
- 124 Techno 2
- 125 Funky Disco
- 126 Saturday Night
- 127 Club Latin
- 128 Disco Chocolate
- 129 Disco Fox
- 130 Disco Funk
- 131 Disco Hands
- 132 Disco Party
- 133 Disco Samba
- 134 UK Pop
- 135 Club Dance
- 136 Modern R&B
- 137 Hip Shuffle
- 138 Charleston
- 139 DiscoPop
- 140 DiscoSoul
- 141 DiscoTrot
- 142 EuroBeat
- 143 Rap
- 144 Rave
- 145 70's Disco Funk
- 146 Disco Philly
- 147 Disco House
- 148 80's Disco
- 149 70's Disco1
- 150 70's Disco2
- Country
- 151 Country 1
- 152 Country 2
- 153 Finger Pickin
- 154 Country Brothers
- 155 New Country
- 156 Easy Country
- 157 70's Chart Cntry
- 158 Hoedown
- 159 Country Shuffle
- 160 Country Ballad
- 161 Country Two Step
- Swing
- 162 Big Band Shuffle 1
- 163 Big Band Shuffle 2
- 164 Big Band Shuffle 3
- 165 Fast Band 1
- 166 Fast Band 2
- 167 Cat Groove
- 168 Dixie Jazz
- 169 Medium Jazz
- 170 Jazz Big Band
- 171 Jazz Club
- 172 Ragtime
- 173 Frankly Soul
- 174 Jazz Funk
- 175 Classic Big Band
- 176 French Jazz
- 177 Jump Jive
- 178 Swing Fox
- 179 Slow Fox
- 180 Organ Cha Cha
- 181 Organ Quick Step
- March
- 182 Ober Polka
- 183 Polka Pop
- 184 Blue Grass 1
- 185 Blue Grass 2
- 186 Blue Grass 3
- 187 Pop Waltz
- 188 USA March
- 189 Hully Gully
- 190 Tarantella
- 191 Limbo Rock
- 192 Swing Waltz
- 193 Pub Piano
- 194 Jazz Waltz 1
- 195 Jazz Waltz 2
- 196 Show Tune
- 197 Polka
- 198 Party Polka
- 199 Schlager Polka
- Rock1
- 200 Hard Rock2
- 201 60's RockN
- 202 Standard Rock
- 203 Brit Rock Pop
- 204 60's Vintage Rock
- 205 Chart Rock Shfl1
- 206 60's Pop Rock
- 207 German Rock
- 208 Schlager Beat
- 209 Rock &Roll
- 210 Rock & Roll Shfl
- 211 Oldies R & R
- 212 60's Rock & Roll
- 213 Brit Pop
- 214 Chart Rock Shfl2
- 215 New R&B
- 216 Pop R&B
- 217 Chart R&B
- 218 Rock Cha Cha
- 219 Funk Shuffl 3
- 220 8 Beat Rock3
- 221 Rock Cha Cha2
- Ballroom1
- 222 Joropo
- 223 Reggaeton
- 224 French Waltz
- 225 Merengue
- 226 Tango3
- 227 Tango4
- 228 Jig
- 229 Hawaiian
- 230 Electronica
- 231 Funky House
- 232 Club Beat
- 233 Retro Club
- 234 Mod Chart Pop
- 235 MOR Swing
- 236 Retro Pop
- 237 Rumba Flamenco
- 238 Cumbia
- 239 Parranda
- 240 Carnival2
- Pop1
- 241 50's Pop
- 242 Groovy Pop
- 243 Cool Pop
- 244 Club Pop2
- 245 16 Beat Pop2
- 246 8 Beat Pop2
- 247 8 Beat Soul2
- 248 8 Beat Rock2
- 249 60's Vintage Pop
- 250 16 Beat Ballad2
- 251 70's Pop Ballad
- 252 EP Ballad

Style List

- 253 Power Ballad
- 254 Guitar Ballad
- 255 New R&B Ballad
- 256 Guitar Serenade
- 257 Organ Ballad
- 258 Pop Mambo
- 259 Latin Party Pop
- 260 80's Pop
- 261 British Pop2
- 262 70's Chart Ballad
- 263 Romantic Ballad
- 264 90's Cool Ballad
- 265 Alp Ballad1
- 266 Alp Ballad2
- 267 Schlager Polka
- 268 J-Pop Hit
- 269 Detroit Pop1
- 270 Detroit Pop2
- 271 Worship Med
- 272 Worship Fast
- 273 12-8 Ballad
- 274 Norteno
- 275 60's 8 Beat Ballad1
- 276Laff
- 277 Ober Walzer
- 278 Bhangra
- 279 Zouk
- 280 German March
- 281 Enka
- 282 Bolero Lento
- 283 Sherif fReggae
- 284 Beguine
- 285 Pop Classics
- 286 Live 8 Beat
- 287 Power Rock
- 288 Acoustic Rock
- 289 Cool 8 Beat
- 290 Uptempo 8Beat
- 291 90's Rock Ballad
- 292 60's Guitar Pop
- 293 70's 8 Beat
- 294 90's Guitar Pop
- 295 Soft Rock
- 296 Chart Guita rPop
- 297 Gujjira
- 298 Modern Pop Bld
- 299 Soul
- 300 Skiffle
- 301 6-8Soul
- 302 Soul Brothers
- 303 6-8Slow Rock Dance1
- 304 Trance Pop
- 305 Mellow Hip Hop
- 306 Classic Hip Hop
- 307 New Hip Hop
- 308 Duranguense
- 309 70's Disco1
- 310 70's Disco2
- 311 Latin Disco
- 312 Brazilian Samba
- 313 Brit Pop Swing
- 314 Grupera
- 315 Danzon
- 316 Dream Dance
- 317 US Chart Hit
- 318 Soul R&B
- 319 R&B Soul Ballad
- 320 Euro Hip Hop
- 321 Trip Hop
- 322 Saeidy
- 323 Bhajan
- 324 Hip Hop Groove
- 325 Euro Trance
- 326 6-8 Trance
- 327 Latin DJ's
- 328 Bomba
- 329 Club House
- 330 House
- 331 Disco Teens Latin1
- 332 Happy Reggae
- 333 Pop Latin
- 334 Fast Bossa
- 335 6-8 Modern
- 336 6-8 Orchestral
- 337 Schlager Shuffle
- 338 Schlager Pop
- 339 Schlager Rumba
- 340 Euro Pop Organ
- 341 70's French Hit
- 342 Italian Mazurka
- 343 Jig2
- 344 Hawaiian2
- 345 Latin Rock2
- 346 Schlager Samba1
- 347 Schlager Samba2
- 348 Scand Slow Rock
- 349 Schlager 6-8
- 350 Schlager Fox Country1
- 351 Country Ballad
- 352 Country Two Step
- 353 Kool Shuffle
- 354 Easy Country
- 355 Country Hits
- 356 Country 8 Beat
- 357 Mod Cntry Bld1
- 358 Country Ballad2
- 359 Scand Country1
- 360 Scand Country2
- 361 Country Ballad2
- 362 Orch Big Band2
- 363 Big Band Fast2
- 364 Midnight Swing
- 365 Fusion2
- 366 Funk Shuffl 2
- 367 Fusion Shuffl 2
- 368 Swing Fox
- 369 Slow Fox
- 370 Organ Cha Cha
- 371 Organ Quick Step
- 372 Piano Boogie
- 373 Lovely Shuffle
- 374 Jazz Gtr Club
- 375 Modern Jazz
- 376 Acoustic Jazz
- 377 Cool Jazz Ballad
- 378 Modern Jazz Bld
- 379 Easy Listening
- 380 Bebop
- 381 Orch Big Band1 March1
- 382 Kool Funk
- 383 Blueberry Blues
- 384 Shuffle Blues
- 385 Mambo 3
- 386 Mambo 4
- 387 Big Band Fast1
- 388 Orchestra Swing1
- 389 Orchestra Swing2
- 390 70's Chart Cntry
- 391 Jazz Waltz Med
- 392 Mariachi Waltz
- 393 US March
- 394 Guitar Rumba
- 395 Slow Blues
- 396 Jazz Waltz Fast
- 397 70's Country Pop
- 398 Dixieland
- 399 40's Big Band

Style List

Pop2	Rock2	469 6-8 Orchestral2
400 Schlager Alp	435 Blues Rock	470 Slow Soul2
401 Chart Pop1	436 Ibiza 2004	471 Piano Ballad2
402 Organ Groove	437 60's Rock & Roll2	472 Hip Hop Groove2
403 Chart Pop2	438 Acoustic Rock2	473 Hip Shuffle2
404 Modern Shuffle	439 Club Pop3	474 Organ Groove2
405 8 Beat Ballad1	440 Power Rock2	475 Chart Pop3
406 Bubblegum Pop	441 Rock'n Roll 3	Latin2
407 Rock Shuffle	442 Cool8 Beat2	476 Mambo5
408 West Coast Pop	443 British Pop3	477 Mambo6
409 Classic 16 Beat	444 British Pop4	478 Disco Latin2
410 8 Beat Ballad2	445 8 Beat Soul3	479 Fast Bossa2
411 Chillout	446 Brit Pop2	480 Fox Trot2
412 16 Beat Ballad1	447 Brit Rock Pop2	481 Pasodoble2
413 Epic Ballad	448 Blueberry Blues2	482 Highland Waltz2
414 Easy Ballad	449 Guijira2	483 Schlager Polka2
415 Cuban Son	450 Rock Ballad2	484 Grupera2
416 16 Beat Ballad3	451 Soul2	485 Danzon2
417 Contemp Rock2	452 Classic 8Beat2	486 Schlager Alp2
418 EP Ballad2	453 Bolero2	487 Saeidy2
419 Cat Groove2	454 Soul Brothers2	488 6-8 March
420 Guitar Serenade2	455 Happy Reggae2	489 Bluegrass
421 Organ Ballad2	456 6-8Slow Rock2	490 Pop Latin2
422 Pop Ballad2	Ballroom2	491 Show Tune2
423 Norteno2	457 Bolero Lento2	492 Scand Shuffle
424 Retro Pop2	458 Midnight Swing2	493 Worship Slow
425 Trance Pop2	459 French Jazz2	494 Bachata
426 Pop Gtr Ballad	460 Latin Party Pop2	Ballad2
427 Ibiza 2002	461 Tango5	495 Romantic Ballad2
428 Chillout Café	462 Tango6	496 Analog Ballad2
429 70's Glam Piano	463 Parranda2	497 Electro Pop2
430 French House	464 80's Pop2	498 Blues Rock2
431 Bhajan2	465 60's Soul2	499 90's Soul
432 16 Beat Pop3	466 Fusion Shuffl3	
433 16 Beat Pop4	467 Fusion Shuffl4	
434 Enka2	468 6-8 Modern2	

OWNER'S MANUAL