

POWER RELAXOR FEATURES AND INFORMATION

FEATURES

- 110V WALL PLUG – NO CHARGING REQUIRED
- USB PORT LOCATED AT TOP OF THE CONTROL BOX
- POWER MECHANISM ALLOWS A SMOOTH RECLINE TO ANY POSITION WITH THE TOUCH OF A BUTTON
- INDEPENDENT SWITCHES ALLOW FOR INDEPENDENT ADJUSTMENTS
- SOLID WALNUT FRAME

INFORMATION

250 POUND MAXIMUM WEIGHT LIMIT

DIMENSIONS

OVERALL W28 D36 H43

INSIDE W22 D21 H27

SEAT HT 17

ARM HT 26

DEPTH AT REST POSITION 56

DISTANCE FROM WALL (REST) 7

DEPTH AT FULL RECLINE 65


DISTANCE FROM WALL (RECLINE) 18

WARRANTY

- 3 YEAR WARRANTY ON MECHANISM FROM DATE OF PURCHASE
- 5 YEAR WARRANTY ON MOTOR, SWITCH AND TRANSFORMER FROM MANUFACTURE DATE
- LIFETIME WARRANTY ON THE FRAME

WARRANTY MAY BE VOIDED WITH MISUSE, ABUSE, OR IMPROPER SERVICE BY CONSUMER.

FOOTREST AND BACKREST RECLINE

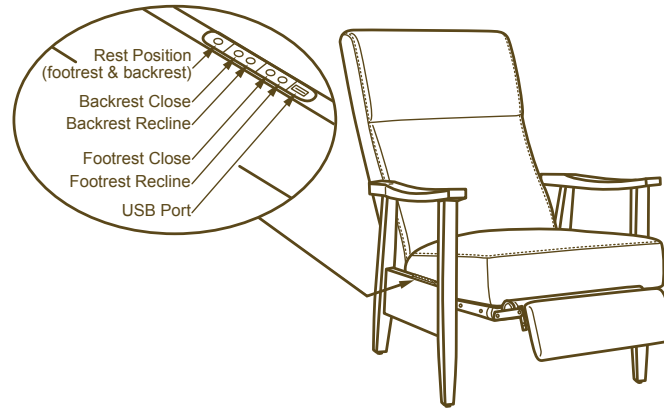

BOTH FOOTREST AND BACKREST HAVE INFINITE STOPPING POSITIONS

TO RAISE THE FOOTREST, PRESS THE FOOTREST RECLINE BUTTON LOCATED NEXT TO THE USB PORT. ONCE DESIRED POSITION OF FOOTREST HAS BEEN FOUND, RELEASE THE BUTTON TO REST IN POSITION. TO CLOSE FOOTREST, PRESS FOOTREST CLOSE BUTTON.

TO RECLINE THE BACKREST, PRESS THE BACKREST RECLINE BUTTON. RELEASE THE BUTTON ONCE DESIRED POSITION HAS BEEN FOUND. TO CLOSE BACKREST, PRESS BACKREST CLOSE BUTTON UNTIL BACKREST RETURNS TO UPRIGHT POSITION.

TO CLOSE BOTH FOOTREST AND BACKREST QUICKLY, PRESS THE REST POSITION BUTTON. HOLD UNTIL RELAXOR IS IN FULL UPRIGHT POSITION.

POWER MECHANISM

YOUR POWER RELAXOR IS EQUIPPED WITH A POWER CABLE CORD, 2 MOTORS AND A TRANSFORMER.

TO KNOW IF YOUR POWER RELAXOR IS ON, A GREEN LIGHT WILL APPEAR BELOW THE TRANSFORMER. IT WILL FLASH BLUE WHEN OPEN AND ORANGE/GREEN WHEN CLOSED.

THE FOLLOWING INSTRUCTIONS WILL HELP YOU IN THE EVENT THAT THE CABLE CORD BECOMES DISCONNECTED FROM THE TRANSFORMER.

1. FULLY OPEN (RECLINE) THE FOOTREST

2. UNPLUG POWER CORD FROM OUTLET



3. TIP THE POWER RELAXOR ONTO ITS BACK

4. LOCATE THE TRANSFORMER UNDER THE BASE OF THE CHAIR

5. LOCATED ON THE RIGHT OF THE TRANSFORMER IS A FIGURE 8 POWER OUTLET

6. CONNECT POWER CORD TO THE FIGURE EIGHT OUTLET

7. PLUG POWER CORD BACK INTO POWER OUTLET AND CLOSE (RETRACT) FOOTREST TO RESTING POSITION

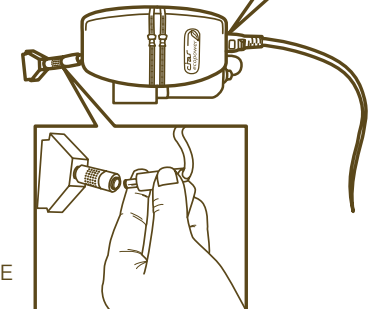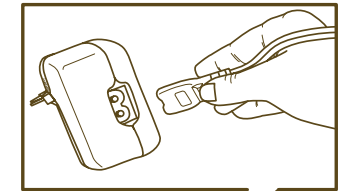

**CONGRATULATIONS ON YOUR
PURCHASE OF THE POWER RELAXOR
FROM LEE INDUSTRIES**

PLEASE REVIEW THE INSTRUCTION MANUAL
BEFORE USING YOUR POWER RELAXOR.
THIS PRODUCT IS INTENDED FOR
HOUSEHOLD/RESIDENTIAL USE ONLY.

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE
USING THE POWER RELAXOR. WHEN
USING AN ELECTRICAL APPLIANCE, BASIC
PRECAUTIONS SHOULD BE FOLLOWED.

DANGER

TO REDUCE THE RISK OF ELECTRIC
SHOCK, ALWAYS UNPLUG THE POWER
RELAXOR FROM THE ELECTRICAL OUTLET
BEFORE CLEANING.

WARNING

RISK OF INJURY. KEEP CHILDREN AWAY
FROM MOVING PARTS.

CAUTION

DO NOT ALLOW CHILDREN TO PLAY ON
POWER RELAXOR OR OPERATE THE POWER
RELAXOR MECHANISM. THE LEG REST FOLDS
UNDER WHEN CLOSING AND COULD POSSIBLY
CAUSE INJURY TO A CHILD. ALWAYS LEAVE
POWER RELAXOR IN UPRIGHT AND CLOSED
POSITION WHEN UNOCCUPIED. KEEP HANDS
AND FEET CLEAR OF MECHANISM. ONLY
THE OCCUPANT SHOULD OPERATE THE
MECHANISM. DO NOT OPERATE POWER
RELAXOR IF IT IS DAMAGED OR IF CORD
OR PLUG IS DAMAGED. UNPLUG CAREFULLY
AND IMMEDIATELY IF THIS OCCURS.



POWER RELAXOR



MADE IN THE USA
WWW.LEEINDUSTRIES.COM

**A GUIDE TO RELAXING WITH
THE TOUCH OF A BUTTON**