



**STYLE IN
MOTION**
BY AMERICAN LEATHER

**YOUR GUIDE TO OPERATING THE
ULTIMATE IN POWER MOTION SEATING**

AMERICANLEATHER.COM

Congratulations on your purchase of a power Style in Motion® product by American Leather®.

Following are helpful hints and important safety information regarding the use and care of your Style in Motion® product.

Please review this instruction manual thoroughly before using your power Style in Motion® product.

*This product is intended for household/
residential use only.*

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the power Style in Motion® system. When using an electrical appliance, basic precautions should always be followed, including the following:

DANGER! To Reduce the Risk of Electric Shock:

Always unplug the power Style in Motion® product from the electrical outlet before cleaning.

WARNING! Risk of Injury:

Keep children away from the extended foot support and any moving parts.

CAUTION! Do not allow children to play on the power Style in Motion® product or operate the power Style in Motion® mechanism. The leg rest pulls in when closing and could possibly cause injury to a child. Always leave the power Style in Motion® product in an upright and closed position when not in use. Keep hands and feet clear of mechanism. Only the occupant should operate it.

Safety or Recall Notices:


Register your Style in Motion® warranty at americanleather.com. This will ensure that American Leather® can contact you in the event of a safety notice or product recall. Please contact your American Leather® retailer if you did not receive warranty registration information with your power Style in Motion® purchase.

POWER CORD SAFETY

WARNING!

UNPLUG AND REMOVE THE POWER CORD FROM THE WALL AND THE POWER SOCKET AT THE REAR OF THE POWER STYLE IN MOTION® PRODUCT WHEN NOT IN USE AND STORE THE CORD OUT OF REACH OF CHILDREN.

 Figure 1

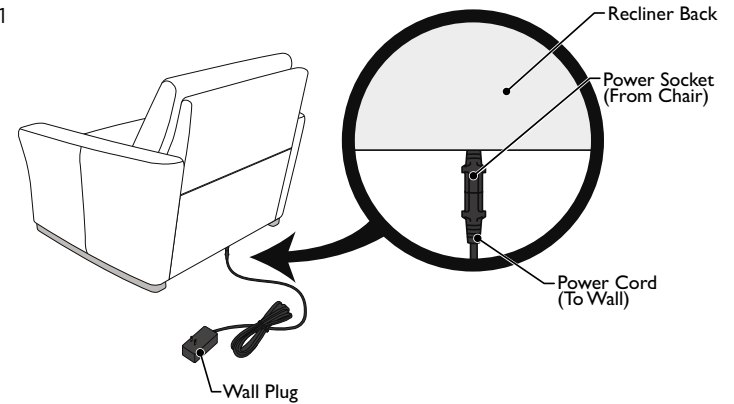

Take care when moving any power Style in Motion® product to ensure that the power cord is not under the legs or the cord may get damaged.

Never operate a power Style in Motion® product if it has a damaged cord or plug.

IMPORTANT SAFETY INSTRUCTIONS

Footrest Entrapment

In the Event of an Obstruction:

- Immediately stop the power Style in Motion® product.
- Carefully open the power Style in Motion® product and free the obstruction.

WARNING!

To Reduce the Risk of Burns, Fire, Electric Shock, or Injury to Persons:

- Use the power Style in Motion® product only for its intended use as described in this manual.
- Only operate the power Style in Motion® product when seated.
- Never press or activate the control switch if you are not actually sitting in the power Style in Motion® product.
- Only the occupant should activate the control switch.
- Operation is designed for one person only.
- Never operate the power Style in Motion® product with more than one person sitting on an individual seat.
- Never sit or stand on the footrest.
- Each power Style in Motion® seat can accommodate an occupant of up to 300 pounds maximum.
- Do not race, play with, or abuse the power Style in Motion® mechanism.


- Never operate a power Style in Motion® product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Contact your local retailer for examination and repair.
- To unplug the power, return the power Style in Motion® product to an upright and closed position and then remove plug from the wall outlet or power socket at the rear of the power Style in Motion® product.
- Unplug from outlet before putting on or taking off parts.
- Close supervision is necessary when a power Style in Motion® product is used by or near children or disabled persons.
- Keep cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

IMPORTANT SAFETY INSTRUCTIONS

POWER SUPPLY

Voltage in: 100-120V – 50/60 Hz Line in: 1.2A
Voltage out: 29Vdc Line out: 1.8A
Duty Cycle 2 min ON/20min OFF
Class 2 Power Supply

Servicing of Double-Insulated Products:

All power Style in Motion® products are double-insulated products. In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words “DOUBLE INSULATION” or “DOUBLE INSULATED.” The symbol (square within a square ) is also able to be marked on the product.

BATTERY SAFETY (optional)

If battery operation was purchased as an optional accessory to your power Style in Motion® product there are additional safety instructions to be followed.

DANGER! Risk of Physical Injury:

Power Style in Motion® products have a control box that is located remotely from the battery that must be secured before servicing. (See Figure 2)

WARNING!

Unplug and remove power cord from the wall and from the power socket at the rear of the power Style in Motion® product when not in use and store out of reach of children. Also, unplug the power cord between the battery and the control box (See Figure 2) to prevent use when the optional battery is mounted in the Style in Motion® power system.

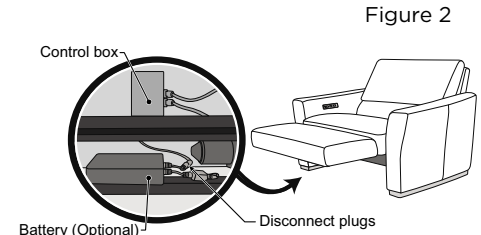 


Figure 2

WARNING!

Only use an identical replacement battery supplied by your local American Leather® retailer. The battery is matched to the charging system in all power Style in Motion® products. Use of a non-identical battery could cause risk of burns, fire, electric shock, or injury to persons.

Replacement batteries can be ordered from your local American Leather® retailer.

- **Do not** use a non-rechargeable battery
- **Do not** mix old and new batteries
- **Do not** mix non-rechargeable and rechargeable batteries
- Use only one battery – **Do not** chain batteries together

USER MAINTENANCE INSTRUCTIONS

Unplug the outlet cord before cleaning a power Style in Motion® product.

If the power Style in Motion® product is equipped with an optional battery, also unplug the power cord between the battery and the control box before cleaning or performing maintenance. (See Figure 2)

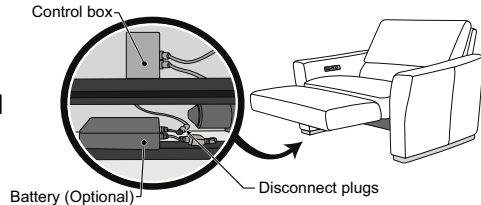 


Figure 2

Do not use any liquids or spray cleaners on any electrical components.

Follow the cleaning code located on the swatch label under the footrest or in your warranty booklet to clean the upholstery cover.

It is not necessary to lubricate any components of a power Style in Motion® product.

None of the electrical components are user-serviceable. Any other servicing should be performed by an authorized service representative.

If the power cables or transformer are ever damaged, replacements can be ordered from your American Leather® retailer.

OVERLOAD PROTECTION

The power Style in Motion® system has both electronic and thermal overload protection. If the weight limit of a power Style in Motion® product is substantially exceeded or an obstruction keeps a power Style in Motion® product from being able to open or close, an electronic overload sensor will prevent the motor from operating. In addition, the transformer is equipped with a thermal fuse. If the motor or transformer is overworked, this thermal fuse is tripped, which shuts off the motor and transformer. The thermal fuse will automatically reset approximately 10-15 minutes after the transformer has cooled down. The power Style in Motion® system may then be used normally.

STORAGE

If the power Style in Motion® product will not be used for an extended period of time, remove the power cord from the power socket and wall outlet and store the cord out of reach of children. If the power Style in Motion® product is equipped with an optional battery, also unplug the power cord between the battery and control box. (See Figure 2)

Store the power Style in Motion® product in a dry interior location.

SAVE THESE INSTRUCTIONS

Style in Motion®

 
by American Leather®

YOUR GUIDE TO OPERATING THE ULTIMATE POWER MOTION SEATING

CONTROL PANEL ATTACHED TO SEATING

Operating Control Panel:

The control buttons are backlit with LED lights that turn on automatically when a button is touched, and will turn off automatically after four to five seconds. (See Figure 3)

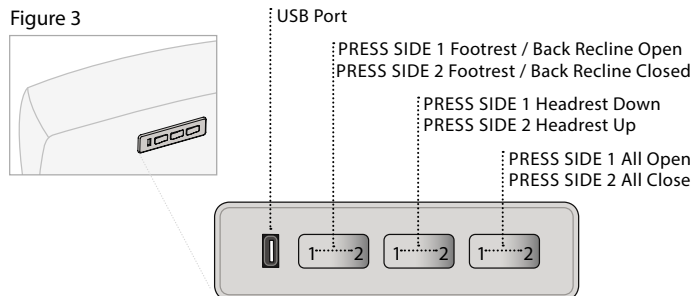

FOOTREST & BACK RECLINE

To raise the footrest and recline the back recline, press the raised area of the front toggle switch, located next to the USB port. Once the footrest is fully deployed, the back rest will then begin to recline. The back rest has infinite stopping positions. Simply release the button to stop the back recline in any position. To close the footrest and restore the back to its full upright position, press the rear area of the same toggle switch. (See Figure 3)

ADJUSTING HEADREST

The headrest operates independently of the footrest and back recline, and has infinite stopping positions. To operate the headrest, press the raised area of the middle toggle switch. When you have reached your desired position, simply release the button to stop the headrest in any position. To return the headrest to its full upright position, press the rear area of the same toggle switch.

ADJUSTING FOOTREST, BACK RECLINE & HEADREST

To operate both footrest and back recline, as well as the headrest at the same time, press the raised area of the third toggle switch. This will open the footrest, recline the chair all the way, and tilt the headrest to its maximum articulation. To close footrest, back recline and return the headrest to its upright position, press the rear area of the third toggle switch closest to the backrest. This will close the footrest, and return the backrest and headrest to the full upright position.

OPTIONAL BATTERY POWER

The purchase of the optional battery for use with a power Style in Motion® product allows it to be operated either with the cord plugged into the wall, or with battery power only. This allows you to float a power Style in Motion® product in the room without cords attached.

Battery Life:

The optional battery is a 1.8 Amp hour Lithium Ion (1.8 A/h Li-ion) battery in a fully enclosed case. The minimum life expectancy of the battery is 500 complete charge/discharge cycles.

A fully charged battery will provide about 100 complete open/close cycles before it needs to be recharged.

When the battery needs charging, the power Style in Motion® product will begin to operate more slowly, indicating the battery is running out. If the battery gets to about 10% of capacity, a beeping tone will sound when any of the control buttons are pressed, indicating that the power Style in Motion® battery needs to be recharged immediately.

Please note that for optimal battery life, the battery should not be used to its capacity, or used until the power Style in Motion® product stops working. It is recommended that the battery be charged once per month if it is not going to be used for an extended period of time.

Battery Recharging:

To recharge the battery in the power Style in Motion® product, plug the cord from the power supply into the power socket at the rear of the power Style in Motion® product and then plug the power supply into an electrical outlet as shown in *Figure 1*.

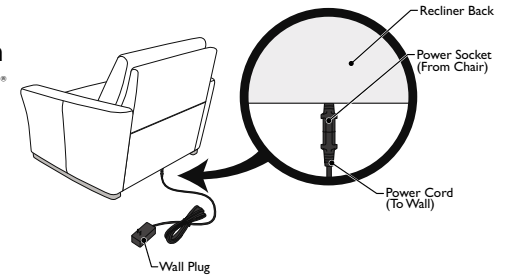 


Figure 1

The power system has an automatic power selector system that chooses battery power or power from the wall outlet, depending on whether the power Style in Motion® product is plugged in or not.

If the power Style in Motion® product is plugged in for recharging, the automatic power selector system will provide power to charge the battery and operate the power Style in Motion® product at the same time.

If the cord is plugged into the power Style in Motion® product continuously, the system will not overcharge the battery.


The charging time for the battery is about eight hours.

To determine if the battery is done charging, open the footrest and look under the power Style in Motion® footrest at the battery. The **LED** light on the battery will be a solid **GREEN** if it is fully charged and flashing **AMBER** if it is still charging.

Battery Replacement Instructions (OPTIONAL):

Your power Style in Motion® product may be equipped with optional battery power. Follow the instructions below for any power Style in Motion® product that is equipped with this feature.

 
Figure 4

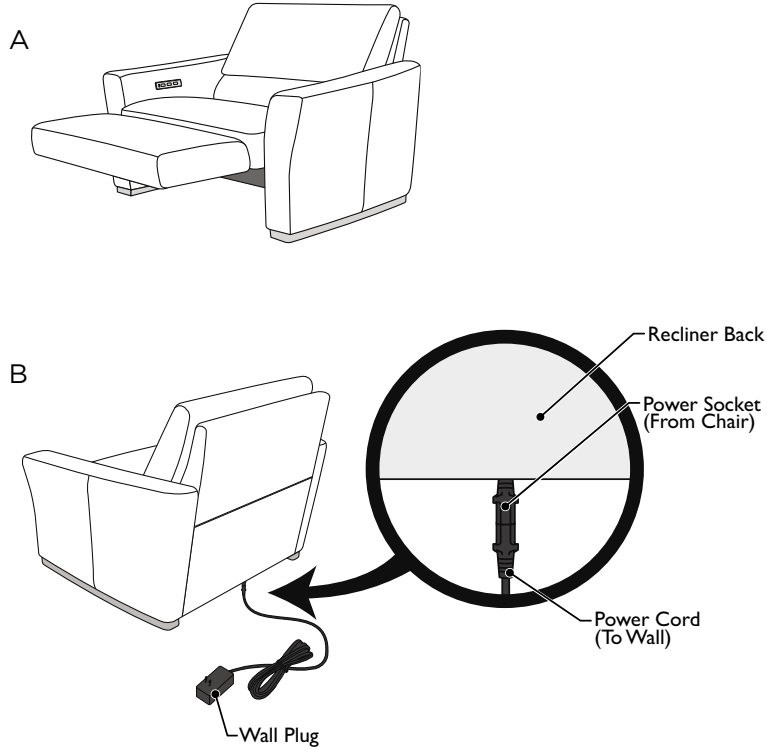

In the event that the battery needs to be replaced:
(See Figure 4 / A and B)

1. Fully open the footrest and backrest of the power Style in Motion® product.
2. Unplug the power socket from the rear of the power Style in Motion® product.
3. Locate the battery underneath, to the left of the motor.

 Figure 5

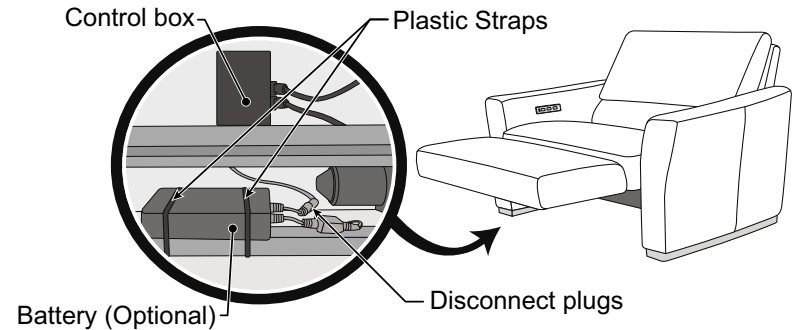

4. Disconnect both battery plug cords (See Figure 5)
5. Carefully cut the plastic straps holding the battery in place, and remove the battery. (See Figure 5)
6. Install replacement battery with the supplied plastic straps to hold the new battery in place.

7. Reconnect both battery plug cords.
8. Plug the cord back into the power socket at the back of the Style in Motion® product. Then plug the other end of the power cord into the wall outlet.
9. Look under the footrest at the battery; the **LED** at the front of the battery will be flashing **AMBER** when it is charging and solid **GREEN** when it is fully charged. Let the new battery charge up overnight. The power Style in Motion® product can be used normally when it is plugged in and the battery is charging.

We know you will enjoy your Style In Motion® by American Leather® and thank you for your purchase. Register your Style In Motion® warranty at americanleather.com.

**DESIGNED &
DELIVERED**
TO YOUR HOME IN
30 DAYS

**AMERICAN
LEATHER**

AMERICANLEATHER.COM

V12.2018