

Ford Mustang Bumper Removal Guide

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper



Flat
Screwdriver



Power Tool



1/4 Ratchet
1/4 Extension



8 mm
7/32 mm
10 mm
13 mm




Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.


STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.

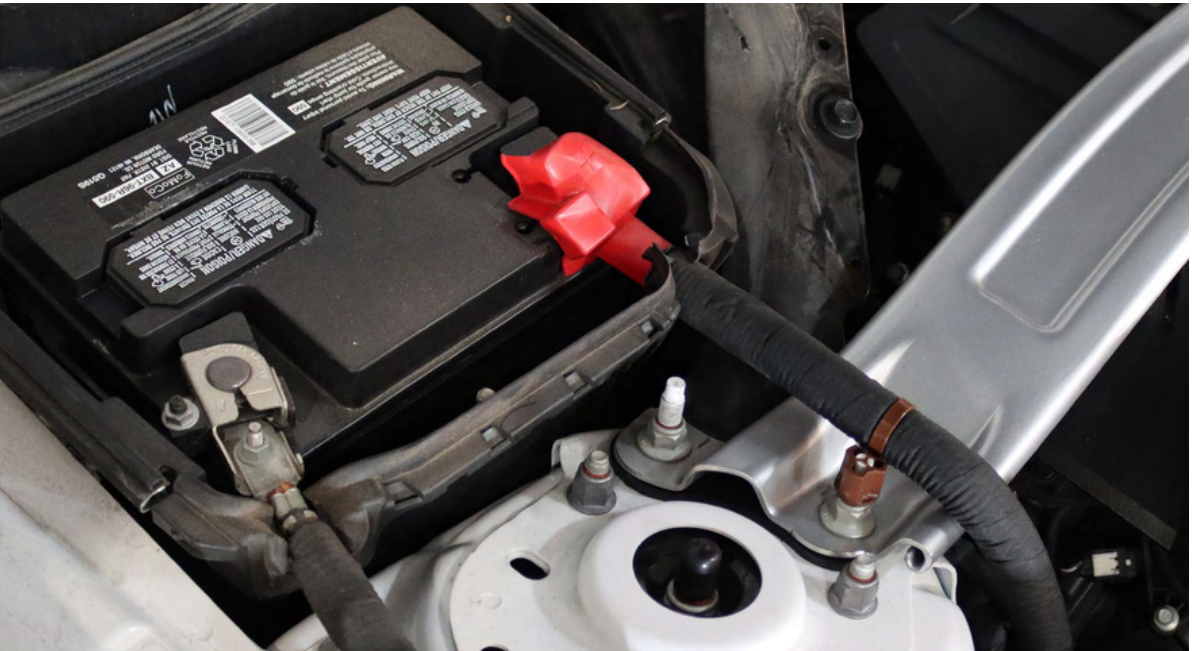

STEP 2. REMOVE THE RADIATOR SHROUD

Utilize a panel popper to begin by removing the plastic push pins that are holding up the radiator shroud cover.

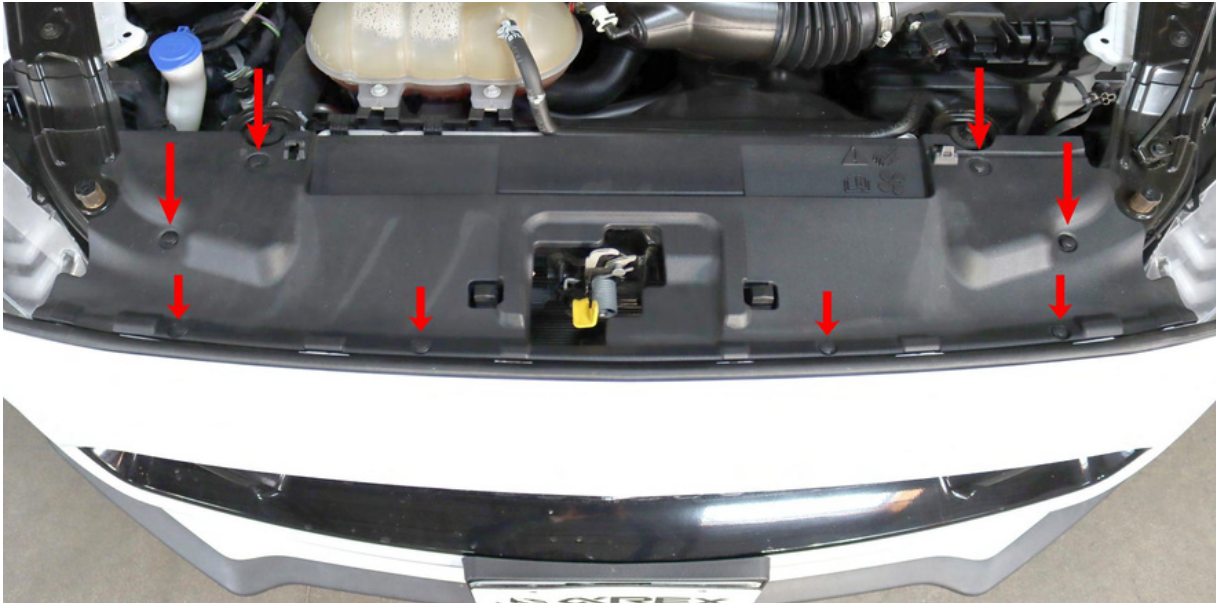


Remove the radiator shroud cover and set it aside for re-installation later.



STEP 3. REMOVE THE FRONT BUMPER

First, remove the six 8mm bolts and two (7/32 inch) bolts from the top of the grille.

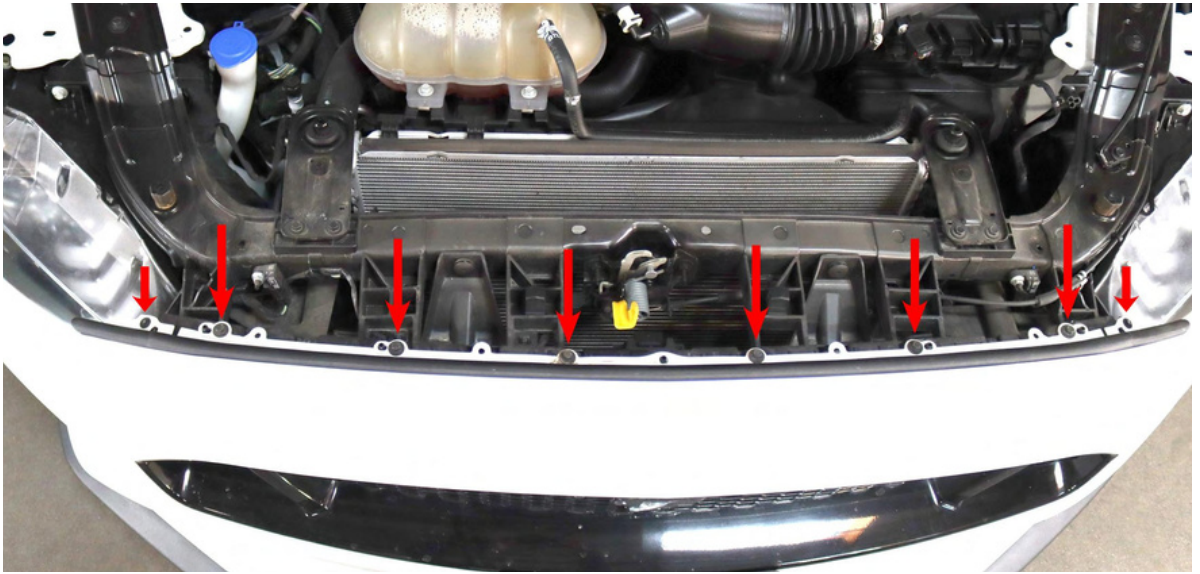

Next, remove the bolts and nuts from the back of the bumper, securing the inner bumper.



Use the panel popper to remove the three plastic retainers.



Lift and open the plastic cover to access the inner bumper nuts and bolts.



For the 15-17 Mustang model, remove two 8mm bolts from the inside.
For the 18-22 Mustang model, remove two 10mm bolts from the inside.



Follow the same steps for the other side of the bumper




Starting from the upper corner, gently pull down and then outward to release the bumper cover. Ensure to use a piece of cloth to protect the vehicle's paint during the removal process.




Repeat the same steps on the other side of the bumper.



Next, lift up the top center of the front grille and pull it outward to release it.

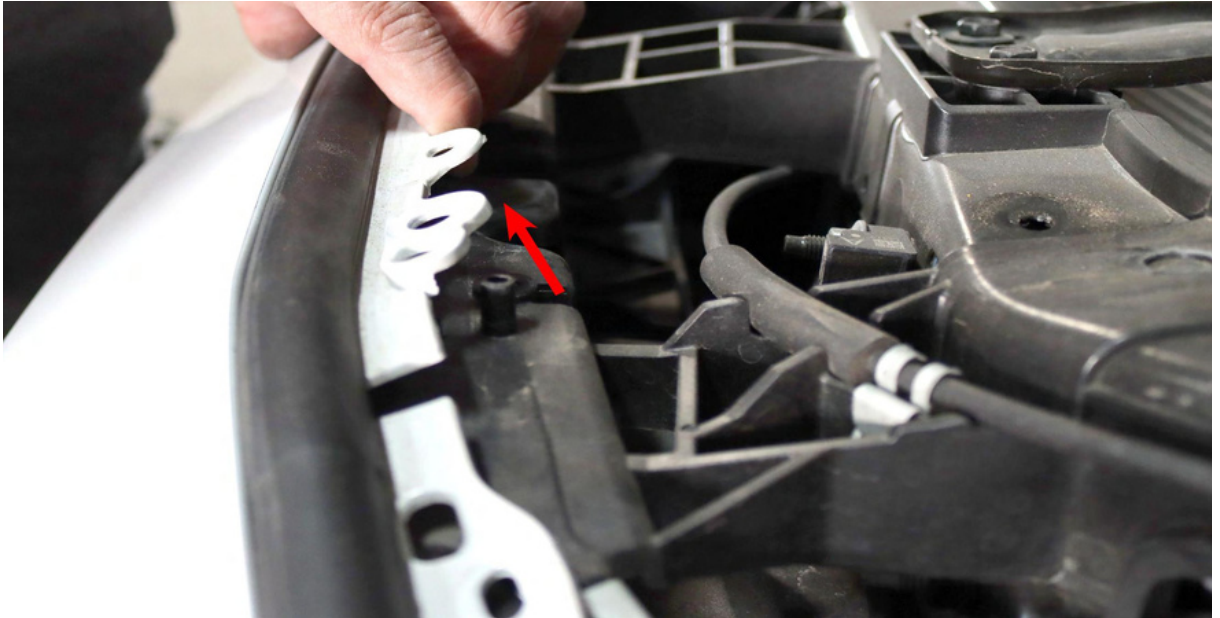


Loosen the entire front bumper by pulling it outward, creating ample space to access the bolts securing the headlights.

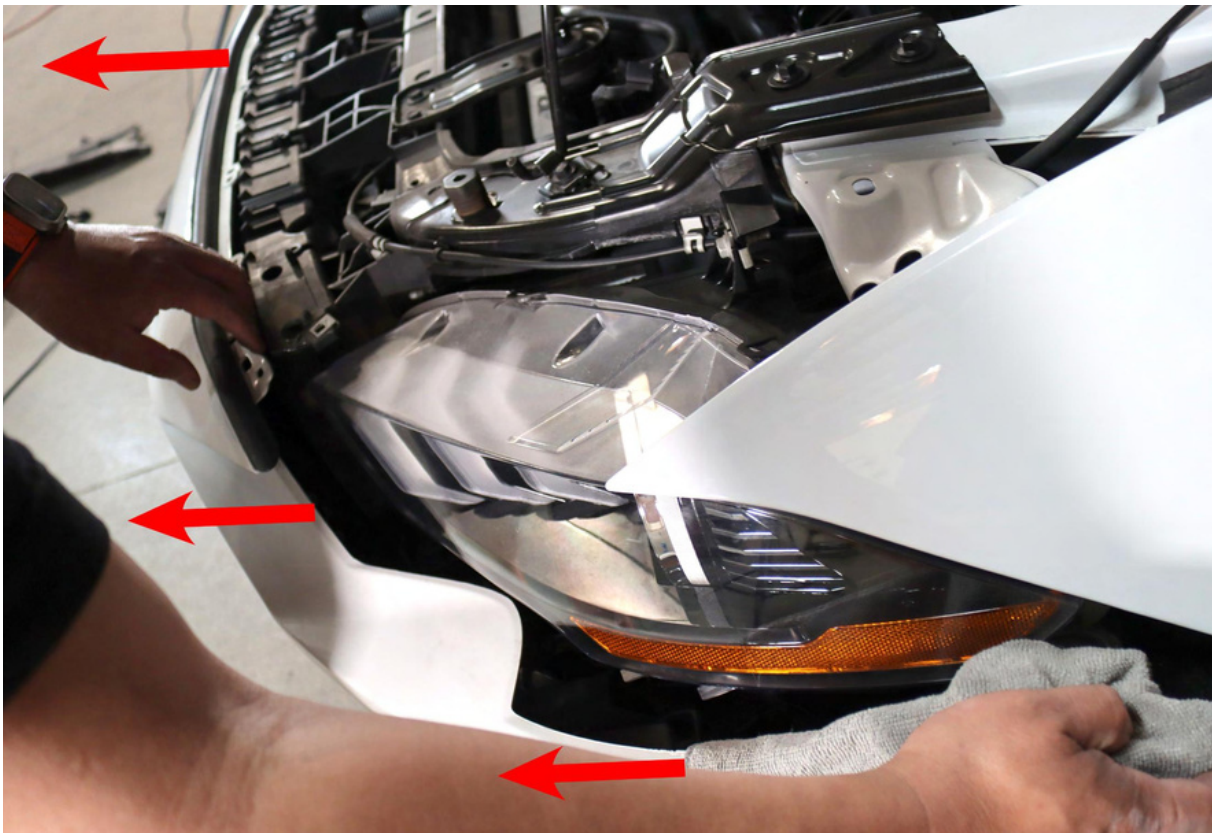



STEP 4. REMOVE THE HEADLIGHTS

Begin by removing the two 10mm bolts, one from the top and one from the bottom of the headlight.

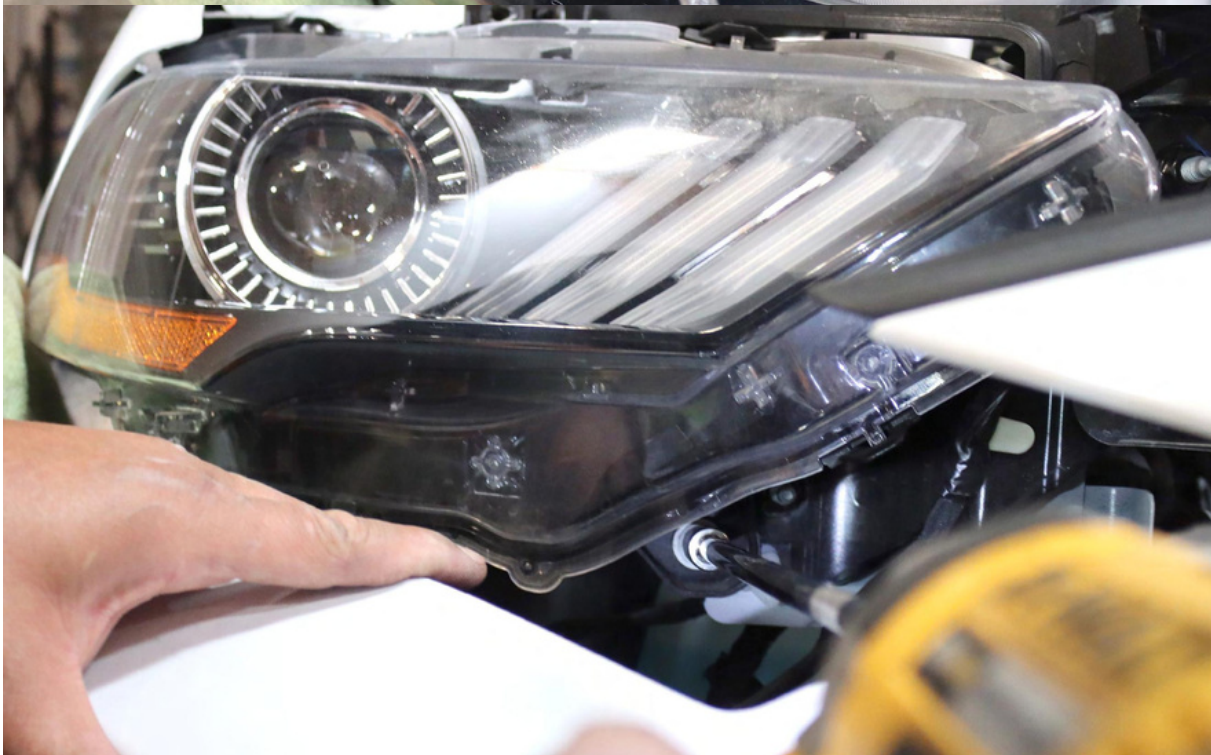

Proceed by removing the 13mm bolt located on the side of the headlight.



Remove the headlight housing and disconnect the wires by unplugging them.





Finally, disconnect the turn signal socket from the car's turn signal lamp.



Repeat the same steps for the other headlight.

