

## 2016-21 Honda Civic | 2017-21 Civic Type-R FK8 Bumper and Headlight Removal Guide

### INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal  
Panel  
Popper



Flat  
Screwdriver



Power Tool



Wrench



1/4 Ratchet



1/4 Extension

10mm



Hex 5



*NOTE: Whenever using a power tool, please make sure do not overtighten the bolts.*




### STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.




## STEP 2. REMOVE THE FRONT BUMPER

Start by extracting the push-in pins from the radiator shroud, then carefully remove and set it aside for future reinstallation.

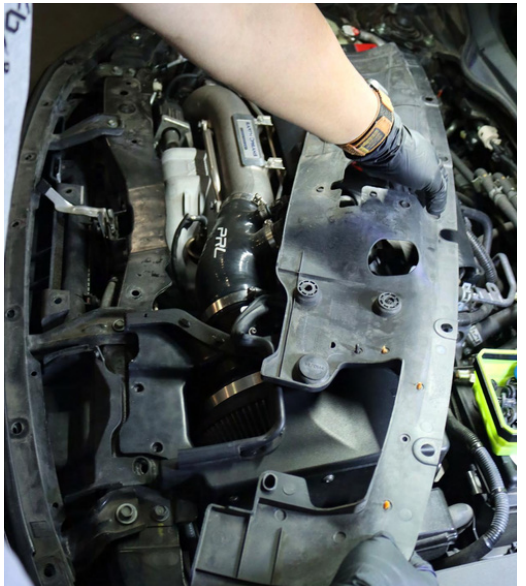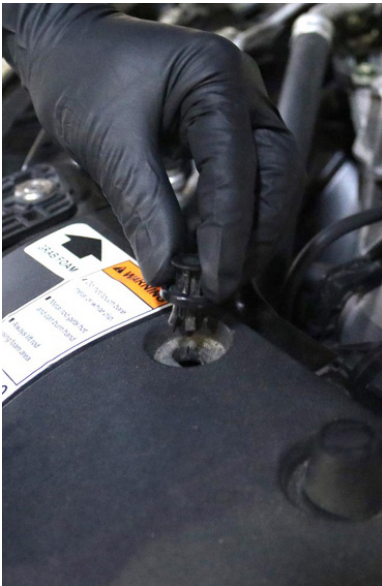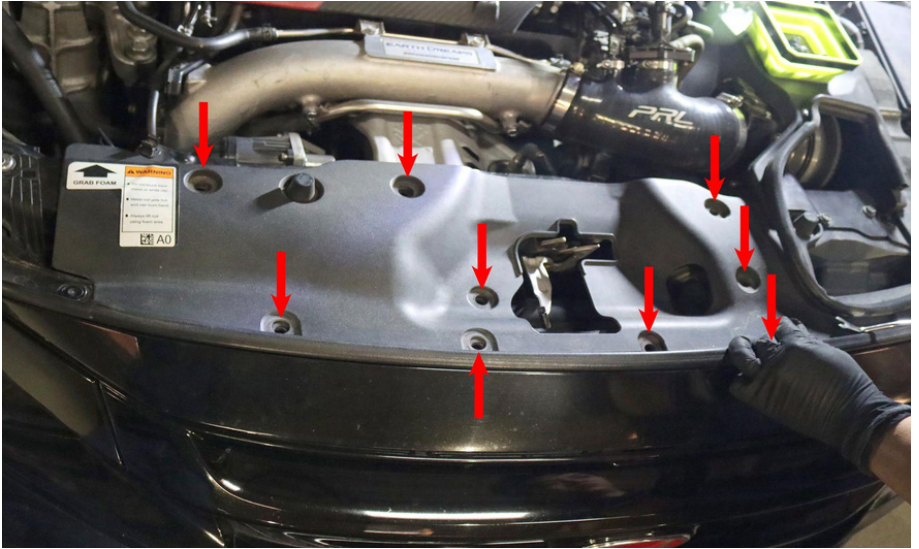

Remove the push-in pins securing the upper bumper retainer and proceed to remove it.

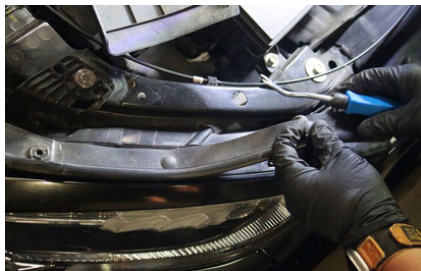


Remove the 2 screws from both sides of the wheel fender.






Gently detach the front bumper by pulling outward from the side, disengaging it from the mounting clips.



Next, use a flat screwdriver to disengage the insert clips that secure the upper bumper trim. Repeat these steps on the opposite side to completely free the upper portion of the bumper.

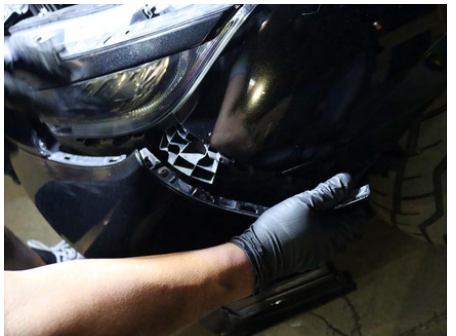

To detach the entire bumper, uninstall the bolts, hex screws and push-in pins located beneath the front bumper that are securely fastened. Make sure to disconnect the fog light connections then proceed to remove the front bumper entirely. Set it aside for later reinstallation.

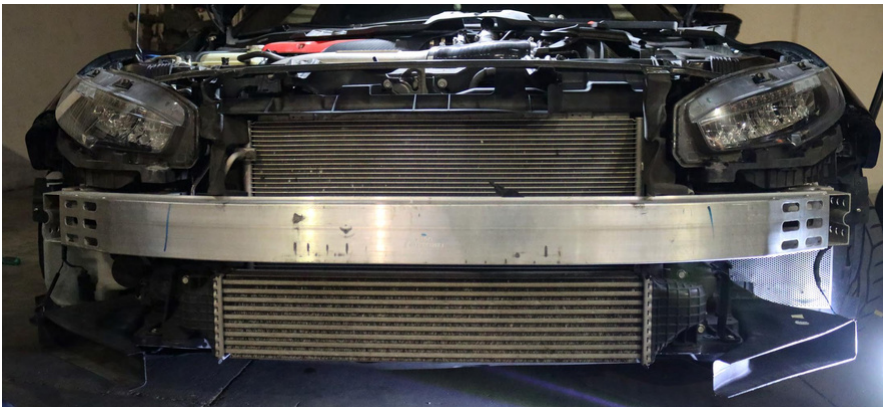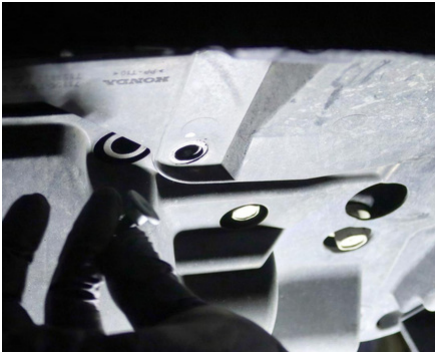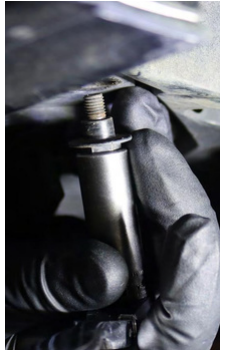

### STEP 3. REMOVE THE HEADLIGHT BOLTS

Remove the 5 X 10mm bolts from the headlight assembly. Follow the same steps for the other side.



## STEP 4. REMOVE THE HEADLIGHTS

Gently pull the headlight assembly outward to disengage.  
Unplug the headlight's sockets to complete the headlights removal.





Follow the same steps to remove the other side of the headlight.

