



 
KitchenAid

Corded Hand Blender
5KHBV53A





PARTS AND FEATURES

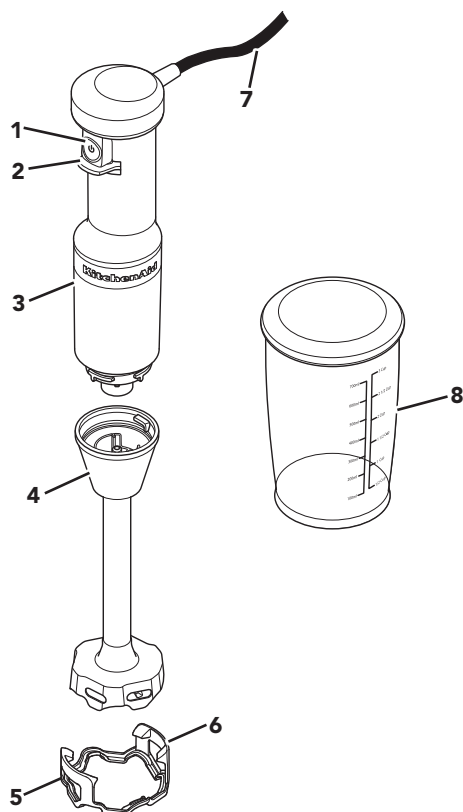

- 1 Variable Speed Controller
- 2 Speed Controller Guard
- 3 Motor Body
- 4 Blending Arm 20.3 cm (8 inch)

- 5 Pan Guard - Use the Pan Guard to avoid damage to cookware while using the Hand Blender
- 6 Mounting Clips
- 7 Power Cord (5 ft.)
- 8 700 ml (3 Cup) BPA-free Blending jar with lid





PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock do not put Motor Body, cord, or electrical plug of this Hand Blender in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance should not be used by children and care should be taken when used near children.
6. Avoid contacting moving parts.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
9. Turn the appliance OFF, then unplug from the outlet if it is left unattended and before, assembling, disassembling, cleaning or when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the Power Cord.
10. Do not use the appliance outdoors.




PRODUCT SAFETY

11. Do not let cord hang over edge of table or counter.
12. Do not let cord contact hot surfaces, including the stove.
13. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
14. Be careful if hot liquid is poured into the Food Processor or Blender as it can be ejected out of the appliance due to a sudden steaming.
15. Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
16. Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
17. Blades are sharp. Handle carefully.
18. Refer to the "Care and Cleaning" section for instructions on cleaning the surfaces in contact with food.
19. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, or other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

ELECTRICAL REQUIREMENTS

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 VAC

Frequency: 50 - 60 Hz

Wattage: 180 W

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician to install an outlet near the appliance.

The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTE: Maximum rating is based on the chopper accessory, included with KitchenAid model 5KHBV83A. Other attachments may draw different power or current.






PRODUCT USAGE

Before first use, clean all parts (see "Care and Cleaning" section).

ASSEMBLING THE BLENDING ARM

 
IMPORTANT: Always unplug the Hand Blender, before attaching or removing parts.

1



Insert the Blending Arm into the Motor Body and twist until it clicks to lock in place.

2

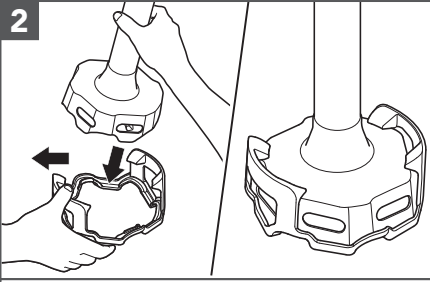


If using a Pan Guard, place it on a flat surface.
To insert the Pan Guard, angle the Blending Arm to one side of the mounting clip. Then, gently pull the other mounting clip outward and push down the Blending Arm. Ensure the Mounting Clips are secured into place.

NOTE: U.S. patent pending removable Pan Guard to help protect your cookware.

USING THE BLENDING ARM

 
Use for smoothies, milkshakes, soup, cooked vegetables, frosting, or baby food, etc.

⚠ WARNING



Electrical Shock Hazard
Plug into an earthed outlet.
Do not remove earth prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

1

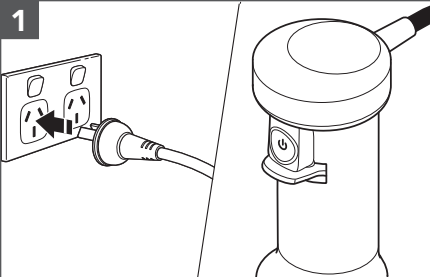

Plug the Hand Blender into an earthed electrical outlet.

 




PRODUCT USAGE

2

Blending

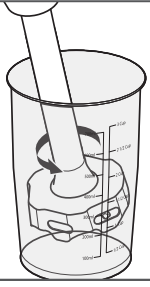


Insert the Hand Blender into the mixture. Press the Variable Speed Controller to start. Use your free hand to cover the top of the blending jar for better stability and avoid splashing.

NOTE: Do not immerse Motor Body into liquids or other mixtures.

3

 
Drawing up

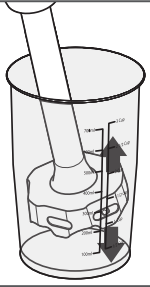

Use the draw up motion with the Hand Blender to move the ingredients within the jar. Slowly draw it upwards against the side of the jar. Repeat the process until the ingredients are at the desired consistency.


4

 Wrist movement

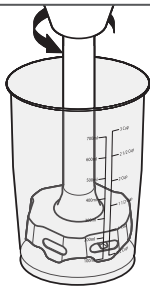

With your wrist, make a circular motion to draw the Hand Blender up slightly and let it blend again into the ingredients.

 5

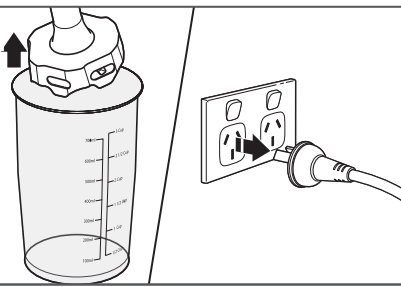

Release the Variable Speed Controller to stop; then remove Hand Blender from mixture. Unplug the Hand Blender before removing or attaching the parts.

 
NOTE: Chopper and Whisk accessories included with KitchenAid Model 5KHBV83A can be used on this model.






CARE AND CLEANING

IMPORTANT: Always unplug the Hand Blender before attaching or removing parts.

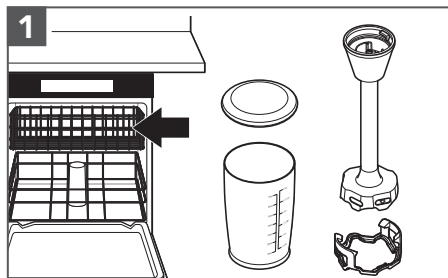

 Dishwasher safe parts - top rack only:
Blending jar, Blending Arm, Lid, and Pan Guard in the top rack.

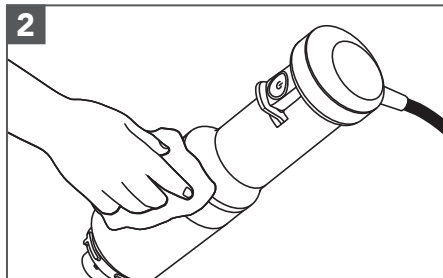

Wipe the Motor Body with a damp cloth. Mild dish soap may be used, but do not use abrasive cleansers.


For detailed information on the Hand Blender:

Visit www.KitchenAid.com.au for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Corded Hand Blender.

TROUBLESHOOTING GUIDE

⚠ WARNING

Electrical Shock Hazard



Plug into an earthed outlet.

Do not remove an earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Problem	Solution
If the Hand Blender fails to start:	Check to see if the Hand Blender is securely plugged into an earthed electrical outlet. If you have a circuit breaker box, check to make sure that the circuit is closed.
If the Hand Blender stops while blending:	When overloaded or jammed, it will automatically shut off to prevent motor damage. Divide contents into smaller batches. For certain recipes, adding liquid in the Jar may also reduce the load.
If the problem cannot be corrected:	See the "Customer Service" section. Do not return the Hand Blender to the retailer. Retailers do not provide service.





CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 02 49026500

Address Australia:

KitchenAid Australia Pty Ltd
6-8 Billbrooke Close
Cameron Park NSW 2285, Australia
Phone: 1-800-990-990
Mobile: 0249026500
Email: enquiries@kitchenaid.com.au

In New Zealand:

Website: www.kitchenaid.co.nz
Email: enquiries@kitchenaid.co.nz
Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.com.au

©2020 All rights reserved.











KitchenAid

©2020 All rights reserved.

W11419342B

09/20

