

KitchenAid

SHAVE ICE ATTACHMENT 5KSMSIA OWNER'S MANUAL

EN	Owner's Manual	2
DE	Bedienungsanleitung	10
FR	Le manuel d'utilisation	18
IT	Manuale del proprietario	28
NL	Gebruikershandleiding	35
ES	El manual del propietario	42
PT	Manual do proprietário	49
EL	Εγχειρίδιο Κατοχού	57
SV	Användarhandbok	65
NO	Brukerhåndbok	72
FI	Omistajan Opas	79
DA	Brugervejledning	86
IS	Notandahandbók	93
RU	Руководство Пользователя	100
PL	Instrukcja Obsługi	116
CS	Uživatelská Příručka	124
TR	Kullanıcı Kilavuzu	131
UK	Посібник з експлуатації	138
AR	دليل المالك	1

PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. European Union Only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
3. European Union Only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT SAFETY (CONTINUED)

5. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Never leave the appliance unattended while it is in operation.
8. Turn the appliance OFF (0), unplug from outlet, and detach the Shave Ice Attachment from appliance before cleaning and when not in use. Turn the appliance off and make sure the motor stops completely before putting on or taking off parts.
9. The use of accessories/attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
10. Do not use the appliance outdoors.
11. Avoid contacting moving parts. Keep fingers out of discharge opening.
12. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
13. Also see the Important Safeguards section included in the Stand Mixer “Owner’s Manual”.
14. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
15. Blades are sharp. Handle Carefully.
16. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.

PRODUCT SAFETY (CONTINUED)

17. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit www.KitchenAid.co.uk or www.KitchenAid.eu. This may save you the cost of a service call. To receive a free printed copy of the information online, call 00 800 381 040 26.

GETTING STARTED

The Shave Ice Attachment is compatible with all household KitchenAid Stand Mixers. Set the Blades to Shave Ice as per requirement.

NAME	INTENDED USE	SPEED
Coarse Shave Blade	For coarser ice shaving / ice chips.	10
Fine Shave Blade	For a fine, fluffy, snow-like ice shaving texture.	

NOTE: For detailed instructions on swapping blades, please see “CHANGING THE BLADE” section.

TEMPERING THE ICE PUCKS

Tempering Ice means allowing the ice to adjust at room temperature until it develops a glossy, wet look and is clear from all sides. Tempering is an important step for producing the lightest and fluffiest shave ice. Many factors determine the amount of time it takes to temper. In most cases, your ice puck should be ready to use in 10 minutes or less.

NOTE: Ice pucks made with plain water require tempering. For mixed base recipes, refer to the recipe details for tempering instructions.

The Ice Molds are used for best performance for both coarse and fine shaving. It's easy to get shave ice from tempered ice out of the molds.

TIP: For the fluffiest shave ice, we recommend tempering the ice puck for 10 minutes, and then using the Fine Shaving Blade.

PRODUCT USAGE

ICE PUCK PREPARATION

1. Fill the ice mold with water or flavoured ice base mixture of your choice.
NOTE: To keep the mold from overflowing while freezing, be sure not to fill past the fill line visible just below the rim of the mold.
2. Affix the lid to the top of the mold and place it in the freezer for 12 to 24 hours.
NOTE: Freezing time may vary and will depend both on the temperature of your freezer as well as the sugar or alcohol content of your mixture.

NOTE: See “Tips for Great Results” sections in Product Guide Online for more details on Ice Puck Preparation.

SET UP & ASSEMBLY - PREPARING TO MAKE SHAVE ICE

Before using your Shave Ice Attachment, clean it by following the detailed instructions in “CARE & CLEANING” section.

1. After removing the ice molds from the freezer, press firmly on the bottom and sides to help release the puck from the mold.
2. For Plain Ice recipes, allow ice to rest for up to 10 minutes - this is called “Tempering” and is recommended to achieve ideal Shave Ice results.
3. Turn the Stand Mixer OFF (0) and then unplug.
4. **For Stand Mixer with a hinged attachment hub cover:** Flip up to open.
For Stand Mixer with a removable attachment hub cover: Turn the attachment knob counterclockwise to remove the attachment hub cover.
5. Insert the Main Housing into the attachment hub, make sure the power shaft fits into the square hub socket. If necessary, rotate the attachment back and forth for proper fitment. The pin on the attachment housing will fit into the notch of the hub rim when in the proper position.
6. Tighten the Stand Mixer attachment hub knob clockwise until the attachment is completely secured into the Stand Mixer.
7. Ensure that the upper lever of the housing is rotated all the way to left. If not, rotate it to the left until it clicks into place. This will ready the attachment for use and must be completed before loading the Ice Puck into the Ice Cup and attaching it to the housing.
8. Remove the Ice Cup from the housing by rotating it to the right and pulling downward. Take note of the small indicator arrow which must line up with the Lock and Unlock symbols on the housing.
OPTIONAL: If you wish to change the blade, grip the blade from the bottom and rotate it to right to unlock and remove.

ASSEMBLY


1. Grip the blade from the bottom and slowly insert it into the bottom of the Ice Cup by aligning the interlocking tabs. Once inserted, rotate the blade to the left until you hear a “Click”, to properly lock the blade in place.
NOTE: Each of the interlocking tabs is unique size, ensuring the blade can only be installed in the correct position.
2. Insert the Ice Cup Sleeve into the Detachable Ice Cup, then insert a prepared Ice Puck. Be sure to insert the ice puck with the cross hatches facing upward.
3. Attach the Detachable Ice Cup to the bottom side of the main housing, rotating it to the left to lock it in place.
NOTE: The small indicator arrow on the Detachable Ice Cup that should line up with the Lock and Unlock symbols on the main housing.

PRODUCT USAGE (CONTINUED)

4. Release the top lever by gently rotating it to the right. The spring will engage as the Ice Pusher clamps down on the ice puck. The Shave Ice Attachment is properly loaded and ready to use.

SHAVING ICE

1. Place a serving dish of your choice beneath the Shave Ice Attachment. Do this before starting the mixer.

	⚠ WARNING
	Electrical Shock Hazard Plug into an earthed outlet. Do not remove earth prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock.

2. Plug the Stand Mixer into an earthed outlet Set the mixer to the highest speed to begin shaving.
NOTE: For best results, consider rotating the dish as the ice shaves to create a more even, cone-shaped mound of ice.
3. Once shaving is complete, turn off the mixer and return the upper lever to the leftmost locked position.
4. Remove the Ice Cup from the housing by rotating it to the right and pulling downward. Discard any remaining ice.
5. Finish your Shave Ice dessert with a variety of flavourings or toppings of your choice.

Refer to Online Product Guide for additional tips, tricks, and recipes to help make the most of your Shave Ice experience.

For even more recipes and inspiration, visit [KitchenAid.com](https://www.kitchenaid.com).

CHANGING THE BLADE

1. Grip the blade from the bottom and rotate to the right to remove, or to the left to install. Once inserted, rotate the blade to the left until you hear a “Click”, to properly lock the blade in place.
2. Each of the interlocking tabs is unique size, ensuring the blade can only be installed in the correct position.

CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.


NOTE: Disassemble the unit properly before cleaning. For instructions, refer to the SET UP & ASSEMBLY section steps 7, 8, and optional.

CARE AND CLEANING (CONTINUED)

1. **The following parts are dishwasher-safe, top rack only:** Detachable Ice Cup, Fine and Coarse Blades, Plastic Ice Molds, Ice Cup Pusher, Ice Cup Sleeve and Lids.
2. Do not immerse Housing in water or other liquid. Wipe clean with a warm, damp cloth, and dry thoroughly with a soft cloth before re-use or storing. Or, clean them thoroughly in warm sudsy water and rinse completely before drying.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

DECLARATION OF CONFORMITY

FOR UNITED KINGDOM

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

FOR EUROPEAN UNION

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 2014/35/EU, 2014/30/EU and 2011/65/EU (RoHS Directive) and following amendments.

TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

Covering U.K. - Ireland - South Africa - UAE

KitchenAid Europa, Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.