




2051 Feed Tire Replacement to replace blue feed wheel

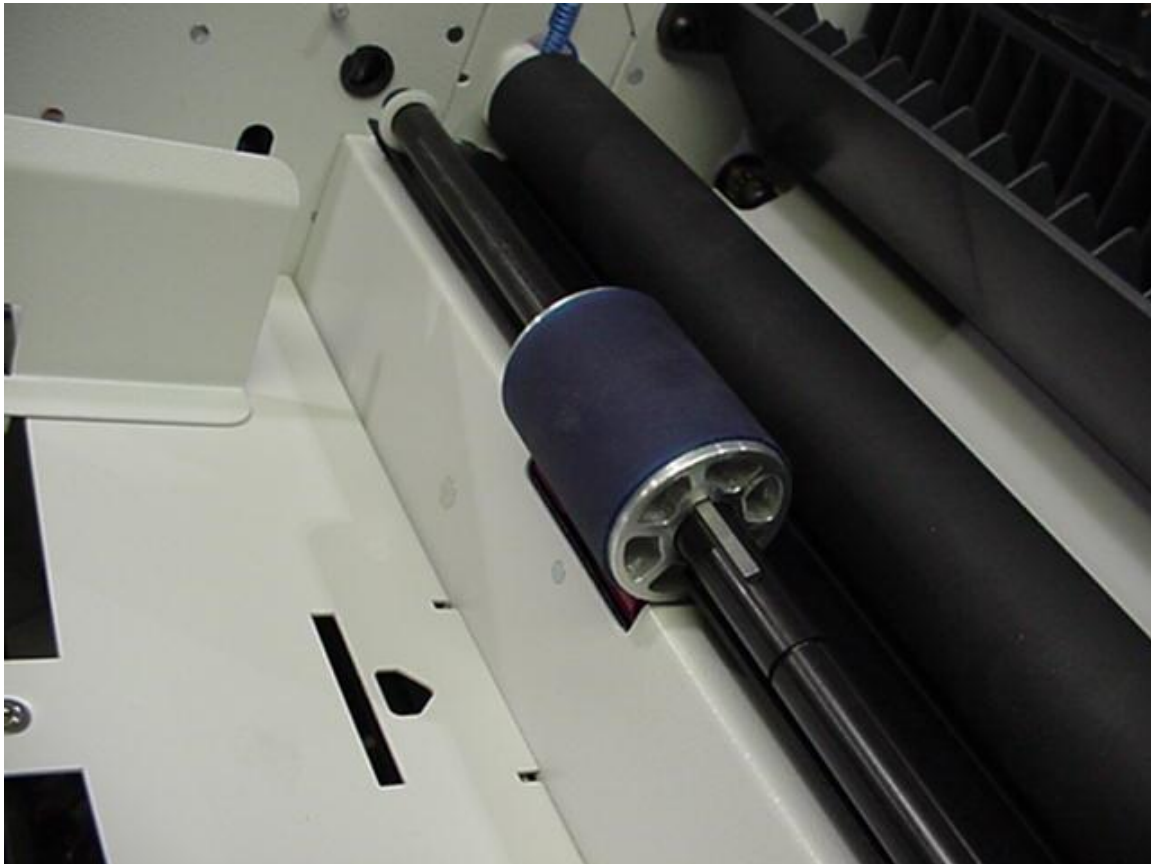

Lift top cover and remove the two E clips from the feed roller shaft on each side of the feed wheel and two E-clips from the ends of the shaft

Slide the feed shaft toward the operator side while holding the feed wheel in the center. Insure key does not fall into the machine. Retain the key and install with new feed wheel.

Note: the old retarders are white-the new retarders are red.
Either will work with the blue feed wheel


Install blue feed wheel by inserting the key into the slot on the shaft.
Hold the feed wheel in the center and slide the shaft and key into the feed wheel.



There is one white plastic spacer on each end of the shaft.
There is an E clip on each end of the shaft and on each side of the feed wheel that need to be reinstalled.



E- Clips

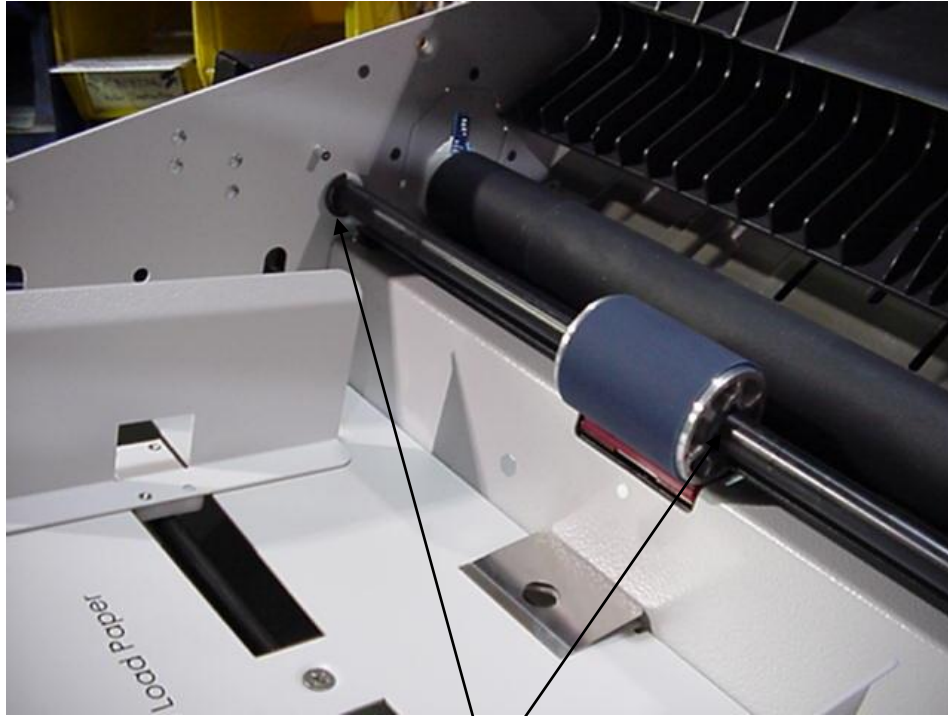

E clips

If you have any questions, feel free to call tech support at 800-225-5644 option 2