

 
## 6 mm CS-mount lens

A low-cost 6 mm lens is available for the High Quality Camera. This lens is suitable for basic photography. It can also be used for macro photography because it can focus objects at very short distances.




## Fitting the lens to the camera

The lens is a CS-mount device, so it has a short back focus and does not need the C-CS adapter that comes with the High Quality Camera. Rotate the lens clockwise all the way into the back focus adjustment ring.

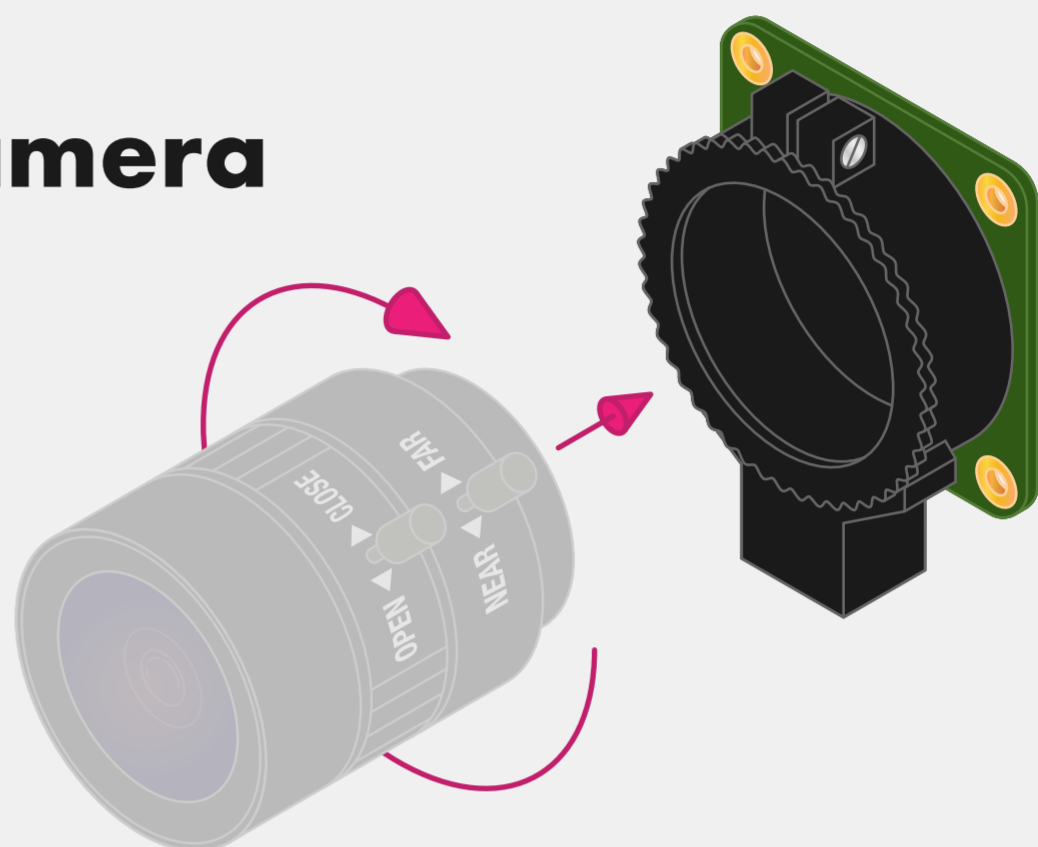


## Back focus adjustment ring and lock screw

 The back focus adjustment ring should be screwed in fully for the shortest possible back-focal length. Use the back focus lock screw to make sure it does not move out of this position when adjusting the aperture or focus.

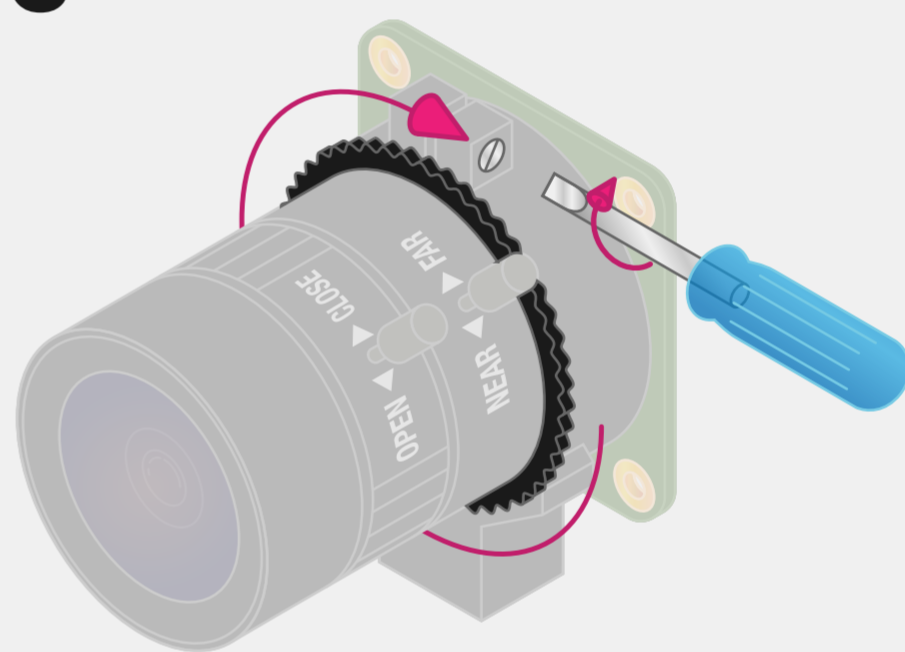

## Aperture

 To adjust the aperture, hold the camera with the lens facing away from you. Turn the middle ring while holding the outer ring, furthest from the camera, steady. Turn clockwise to close the aperture and reduce image brightness. Turn anti-clockwise to open the aperture. Once you are happy with the light level, tighten the screw on the side of the lens to lock the aperture.

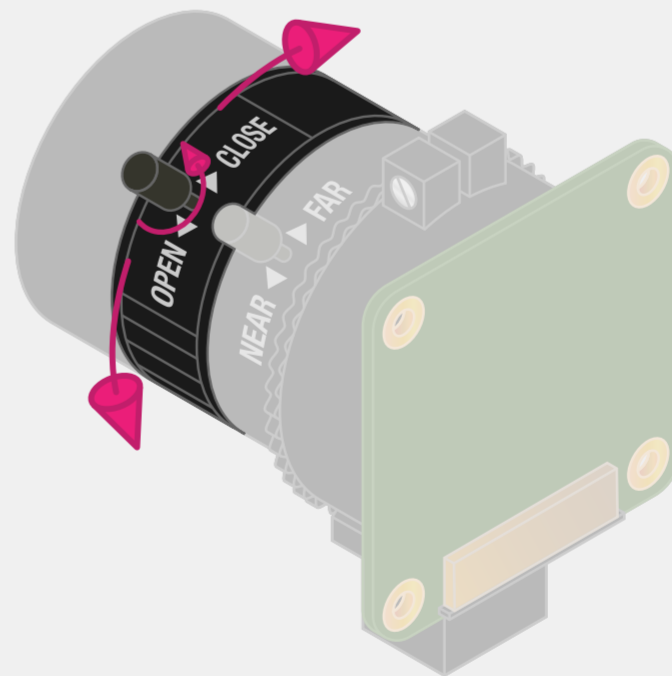

## Focus

To adjust focus, hold the camera with the lens facing away from you. Hold the outer two rings of the lens; this is easier if the aperture is locked as described above. Turn the camera and the inner ring anti-clockwise relative to the two outer rings to focus on a nearby object. Turn them clockwise to focus on a distant object. You may find you need to adjust the aperture again after this.

