




REPLACING THE NOMAD® BATTERY PACK (P/N 600-200-400)

FOR NOMAD® NOW, N32, AND N56 | APPROXIMATELY 4 MINS

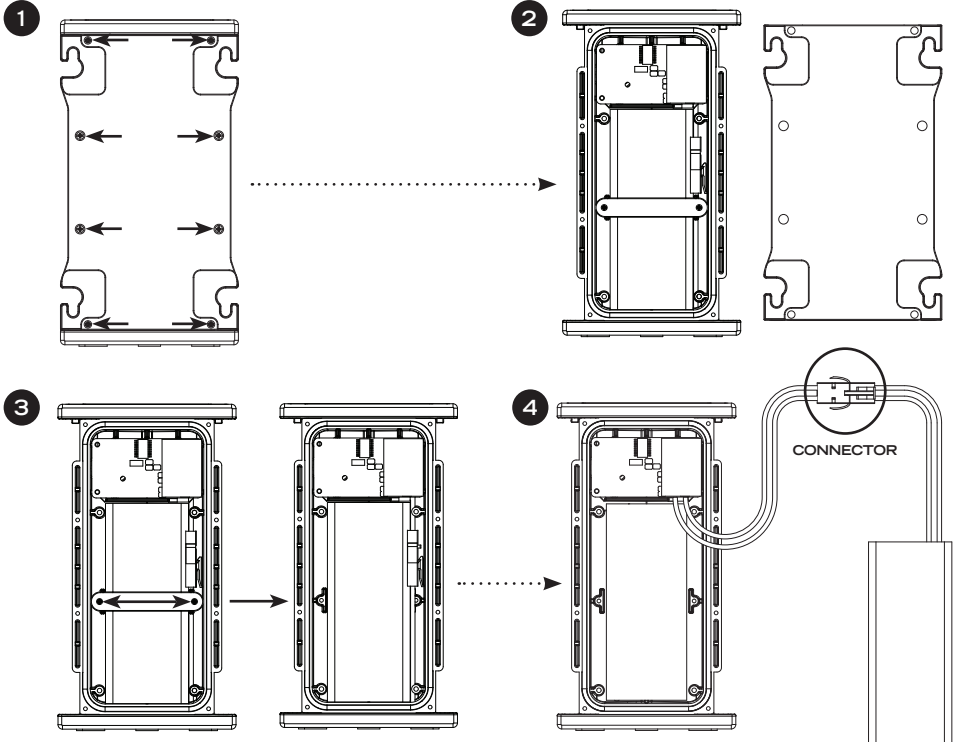

Make sure the Nomad® is turned OFF before starting.

- 1 Begin with the back of the Nomad® facing you. Locate the eight (8) screws on the rear panel.
- 2 Use a Phillips Head screwdriver to unscrew and remove the eight (8) screws. Then, remove the rear panel.
- 3 Once the rear panel is removed, notice a black strap, which holds the Battery Pack in place. There is one (1) screw on each side of the strap. Remove both using the same Phillips Head screwdriver. This will then release the Battery Pack strap.
- 4 Pull the Battery Pack out of the Nomad® Body. Then, detach it from the light by unclipping the Connector.

FOR RE-INSTALLATION: Repeat steps 1-4 in reverse order.

WARRANTY

LIMITED LIFETIME WARRANTY

FoxFury, LLC ("FoxFury") warrants this product to be free from defects in material for a lifetime of use except for batteries, LEDs, abuse, and normal wear. We will repair or replace this product should we determine it to be defective. This limited lifetime warranty excludes rechargeable batteries, chargers, switches, and electronics, which have a 2-year warranty with proof of purchase.

This limited lifetime warranty is given only to the original end user of the accompanying product. If you purchased a product from someone other than an authorized FoxFury reseller/distributor or if the product was used (including but not limited to demo models, show models or refurbished product by someone other than FoxFury) prior to your purchase, you are not the Original Purchaser and the product that you purchased is not covered by this warranty. This limited warranty is VOID if this Product has been altered or modified in any way (including but not limited to attempted warranty repair without authorization from Foxfury and/or alteration/removal of the serial number). To expedite warranty concerns, we encourage the end user to register their FoxFury Product at www.foxfury.com/pages/warranty-registration.

THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARE EXPRESSLY

DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW.

You may have other specific legal rights which vary by jurisdiction. Go to www.foxfury.com/pages/warranty for a complete copy of the warranty. Retain your receipt for proof of purchase.

CONTACT FOXFURY

FoxFury, LLC
Oceanside, CA 92056 USA

Toll-Free: 844-FOXFURY

Tel: 760.945.4231

Fax: 760.433.3650

Email: service@FoxFury.com

Web: FoxFury.com

All FoxFury products are designed in Oceanside, CA. All FoxFury products are manufactured with the highest quality USA and foreign parts. Products are assembled in either FoxFury's controlled plant in Asia or the USA, under strict quality control.