

# Daffodil<sup>®</sup> User Manual

HPC9070/B/W

**EN** Multi-Function Pedometer

**FR** Podomètre Multifonction

**DE** Schrittzähler

**IT** Podometro Multifunzione

**ES** Podómetro Multifunción

Digital Daffodil Ltd  
United Kingdom  
Tel: +44(0) 845 293 9358  
[www.digitaldaffodil.com](http://www.digitaldaffodil.com)

## User Manual

Thank you for buying our August product. You may already be familiar with using a similar product but please take time to read these instructions carefully. It is designed to familiarise you with the features of the product and to ensure that you get the very best from your purchase.

### 1. Introduction

#### 1.1 Main features

- 1) Pedometer: Step Counter, Distance Display and Calorie Counter
- 2) Time Display: 12-Hour Format, Hour and Minute

#### 1.2 Care and storage

- 1) Keep the item out of reach of children.
- 2) Clean the device with a soft dry cloth. Do not use any abrasive or volatile cleaners.
- 3) The item is not waterproof. Do not wash it or do not touch it with wet hands. Be careful water does not get into the unit.

- 4) Avoid exposure of the item to direct sunlight, high temperatures, high humidity, water and/or dust.
- 5) Do not drop or step on the device.
- 6) The operating environment of the device must be free from excessive vibrations, shocks, magnetic fields, electrical noise, etc.
- 7) Remove the battery if the item will not be used for three months or longer. Do not throw the battery into fire, it may explode.
- 8) Do not disassemble the device, as this will invalidate the warranty.

 
### 2. Overview

#### Front of the unit



MODE: Step Counter / Distance Display / Calorie Counter / Time Shift  
SET: Change settings

### Back of the unit

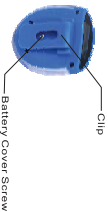

## 3. Settings

### 3.1 First time using the device

#### Set to metric or Imperial format

When first time using the device, take out the battery insulator from the back of the device.

The display will show  , if you prefer using the

cm  
 kg

Metric format, press SET to confirm, otherwise press MODE to change to Imperial and the screen will show  in  lb , press SET to confirm.

**Note:** If you need to switch to a different format after the format has already been set, please take out the pedometer battery up to one minute and then put it back in again, the device will then go back to the initial status, then follow the instruction above to set the format.

### 3.2 Time setting

The device will go to Time and show "12:00A", once the Metric or Imperial format has been set, press and hold SET for 3 seconds, the hour flashes on the screen, press MODE to change the hour, press SET to confirm, the minute flashes, press MODE to change the minute, press SET to confirm.


### 3.3 Step counter

When the device shows time, press MODE,  will appear, which means Step Counter is at zero, if the display is not zero, press SET to return to zero.

### 3.4 Stride length setting

**Setting range:** 10-80 inch (30-200 cm),  
**default:** 24 inch (60 cm).

When the device is in Step Counter, press **MODE**,

 Will appear, press and hold **SET** for 3 seconds,


the stride length flashes on the screen, press **MODE** to change it by increment of 5 cm, press **SET** to confirm the stride.

When the stride reaches 200 cm, it will start from 5 cm after pressing **MODE**.

### 3.5 Weight setting

**Setting range:** 70-250 lb (30-120 kg),  
**default:** 130 lb (60 kg).

When the device is in Distance Display, press **MODE**,

 will appear, press and hold **SET** for 3 seconds, the

weight flashes on the screen, press **MODE** to change it by increment of 2 kg, press **SET** to confirm the weight.

When the weight reaches 120 kg, it will start from 30 kg after pressing **MODE**.

## 4. Attaching the step counter

### 4.1 How to attach the step counter

Attach the device to your belt or the top of your waistband. Try to position the device so that the display is upright.

#### Note:

- Do not place the device in the back pocket of your pants.
- The clip may cause scratches to the belt if it is attached or removed roughly, depending on the belt quality.

## 5. Using the step counter

- 1) Attach the device to your body, please refer to 4.1
- 2) Start walking
- 3) Press **MODE** to display the data.
- 4) The default mode of the device is Time, when there is no operation for 2 mins, the device will go to the default mode.

The unit may not count steps correctly under the following conditions:

- 1) Incorrect unit position
- 2) Make sure the unit is placed at vertical position.
- 3) Walking at an inconsistent pace
- 3) Irregular movement

## 6. Battery installation

### 6.1 How to replace the battery

An AG3 1.5V battery is installed in the device when this unit is purchased.

If the display turns faint, please replace the battery with a new one immediately. When the battery is removed from the unit all the setting will be erased, please refer to 3. to reset the device.

- 1) Remove the clip as shown below



- 2) Use a small screwdriver to remove the screw on the battery cover, then remove the battery cover.



- 3) Remove the old battery

Caution:

- Dispose of the device, batteries and components according to applicable local regulations.
- Do not throw the batteries into fire. The battery may explode.

- 4) Place the new battery in the direction shown on the device.

- 5) Replace the battery cover, tighten the screw on the battery cover.

- 6) Slide and push the clip back into the slot.

## 7. Trouble shooting

Phenomenon	Cause	Solution
No or faint display	Battery low or exhausted.	Replace with a new battery immediately.
Displayed values are incorrect.	The unit is attached incorrectly.	Refer to 4. 1
	You are walking at inconsistent pace.	Walk at consistent pace all the time.
	Settings are wrong.	Change settings.

## 8. Technical data

Product name	August Multi-Function Pedometer
Model no.	HPC907
Power supply	AG3 1.5V x 1

Display range	Number of steps: 0 to 99,999 steps Consumed calories: 0 to 99,999 kcal Walking distance: 0 to 99,999 km
Setting range	Time: 0:00 to 12:59 (12-hour display) Weight: 70 to 250 lb in units of 5 lb, 30 to 120 kg in units of 2 kg Stride length: 10 to 80 inch in units of 2 inch, 30 to 200 cm in units of 5cm
Dimensions	43 (W) x 50 (H) x 24 (D) mm
Weight	20 g inc. battery
Accessories	1 x AG3 1.5V battery User manual

**In the interest of product improvement, specifications are subject to change without notice.**

## 10. Warranty

This product is guaranteed for 12 months from the date of the original purchase. The product will be either

replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The warranty only covers the main unit, and does not cover battery, packaging, and accessories.
- The warranty does not cover the damage caused by misuse (such as dropping or physical misuse), negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

**Customer Service:**

Telephone: +44 (0) 845 250 0586

Email: [service@augustint.com](mailto:service@augustint.com)