

# Daffodil<sup>®</sup> User Manual

LEC005

LED Headlight with Adjustable Brightness

Lampe Frontale à DEL avec Luminosité Réglable

LED-Stirnlampe mit verstellbarer Helligkeit

Lampada Frontale LED con Luminosità Regolabile

Lámpara LED frontal con luminosidad ajustable

EN

## Quick Start Guide

### Parts and Functions:



### 1. Batteries

Turn the Battery Cover anticlockwise so the ◀OPEN symbol aligns with the bottom of the torch and remove. Slide out the battery holder and insert 3 AAA batteries taking note of polarity on the base of the holder. Insert the battery holder back into the torch, contacts first. Replace the Battery Cover and turn clockwise so the ◀CLOSE symbol aligns with the bottom of the torch and ensure it is secure.

### 2. LED Torch

Press the Mode button on the side of the torch to turn on. Repeatedly pressing the Mode button cycles through low power, medium power, high power, flashing red LEDs, OFF.

### 3. Headband

Adjust the headband for a comfortable fit. The headlight can be angled for optimum illumination.

### 4. Specifications:

Batteries	3 x AAA
Headlight:	
Low Power	1 LED
Medium Power	8 LEDs
High Power	21 LEDs
Red LED	2 Flashing LEDs