GEORGE & WILLY®

A-FRAME SIGN

A simple and functional take on the traditional sandwich board, the A-Frame Sign will help you stand out in your chosen streetscape, displaying your cafe or store's branding on the sidewalk

Signs are provided blank and made from powder-coated aluminum. We recommend branding with vinyl decals which your local sign-writers will be equipped to make.

If the sign is placed in a windy environment, we recommend using the Sand Bags (available through our website) to better support the sign.

Thank you for your purchase,


George & Willy

COMPONENTS


2 x Legs
1 x Horizontal Brace
1 x Display Board
2 x Leg Sex Bolts
4 x Display Board Bolts
2 x Brass Straps
2 x Black or White Straps

COMPONENTS

<u> </u>	⊐	2 x Main Bolts
· —		4 x Display Board Bolts
	4 x	Display Board Washers
₽		2 x Display Board Nuts
	•	1 x Allen Key

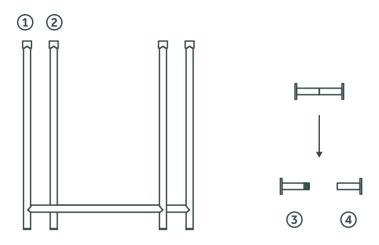


To assemble your A-Frame, take the two legs 1 2 and unthread the sex bolts 3 4 .

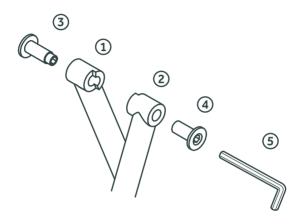

Place both of the legs 1 2 together with the stepped faces on the inside, and the flat faces on the outside.

Insert the sex bolts 3 4 making sure that the bolt with the countersunk end 4 is facing the outside of the frame. Tighten using the allen key. 5

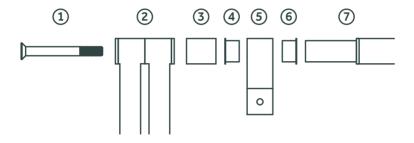


Next, thread the main bolt ① through the legs ② spacer ③ first plastic bushing ④ strap ⑤ second plastic bushing ⑥ and horizontal brace. ⑦

Do this on both sides, making sure that the bolt 1 is nice and tight.



Apply your decals or vinyls to the display board. For a custom look you can even paint the display board.

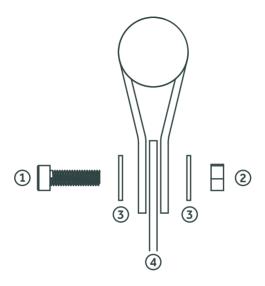


Attach the display board 4 using the bolt 1 and nut 2 with a washer 3 in between on either side of the strap.

Do this on both sides of the display board.



The A-Frame Sign is now ready to be used. To store or move the sign with ease, simply push the legs together.

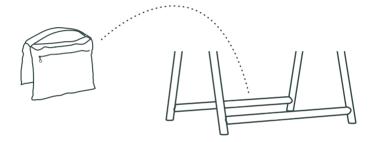

In the case of extreme conditions, our sandbags can be filled and saddled over both bottom bars for additional support.

Sand bags are available through our George & Willy website.

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



www.pinterest.com/georgeandwilly/

sales@georgeandwilly.com

www.georgeandwilly.com