

GEORGE & WILLY[®]

A-FRAME SIGN

A simple and functional take on the traditional sandwich board, the A-Frame Sign will help you stand out in your chosen streetscape, displaying your cafe or store's branding on the sidewalk.

Signs are provided blank and made from powder-coated aluminum with vegetable tan leather straps. We recommend branding with vinyl decals which your local sign-writers will be equipped to make.

If the sign is placed in a windy environment, we recommend using the Sandbags, which are available through our website, to better support the sign.

Thank you for your purchase,

George & Willy

CARE GUIDE

Where you install your product depends on its material/s.

Wooden and Steel Products: We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

Aluminum Products: These products are non-corrosive and suitable for use outside.

Chalk Products: You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.

Transportable Outdoor Signage: If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

COMPONENTS



..... 2 x Legs



..... 1 x Horizontal Brace



..... 1 x Display Board



..... 2 x Leather Straps



..... 2 x End Caps



..... 2 x Main Bolts



..... 2 x Display Board Bolts




..... 4 x Display Board Washers




..... 2 x Display Board Nuts

1

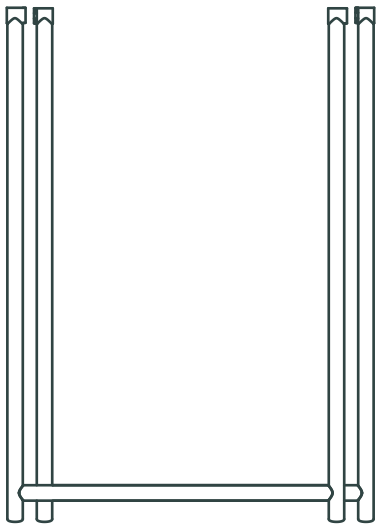

Begin assembling your A-Frame Sign by getting the two legs and placing them opposite each other so that the keyed legs face each other.


2

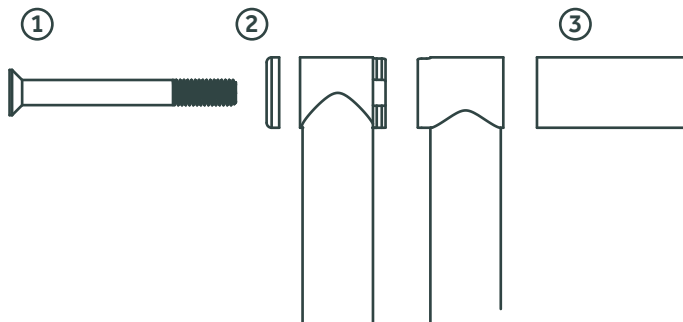

Thread the main bolt ① through the end cap ②, legs and horizontal brace ③. Do this on both sides and tighten firmly. The legs should open and close now. Make sure when they are open the bottom of the legs sit flat on the ground.


Note: Firmly tighten to ensure the legs stay open.

3

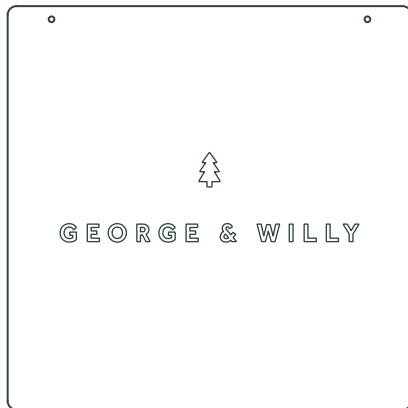


Apply your decals or vinyls to the display board. For a custom look you can even paint the display board.

4

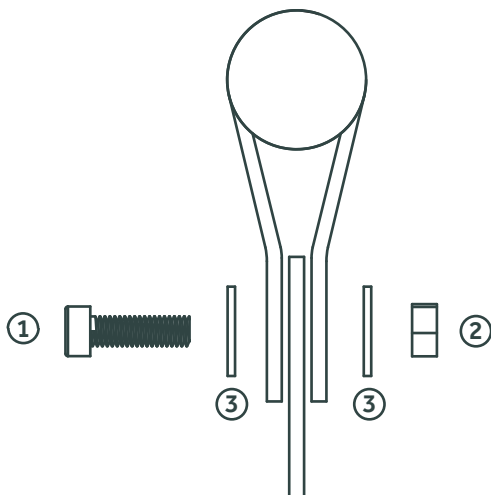


Place one leather strap over the horizontal brace and use the display board bolt ① and nut ② to fix the display board in place. Make sure there is a washer ③ on each side of the leather strap. Do this on both sides of the display board. The leather straps will sit in the grooves of the horizontal brace.

5

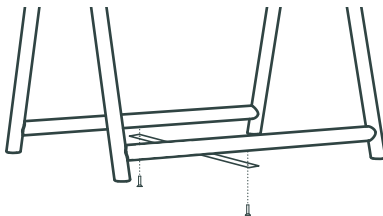


If your sign has to endure windy conditions, we have included a stabilizing bar to help it from being blown over. This goes between the legs and screws in from the underside. The sign can be used with or without this feature.

6

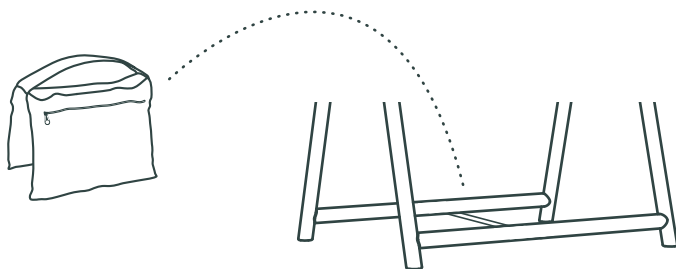

In the case of extreme conditions, a sandbag can be filled and saddled over the stabilizing bar for additional support.

7

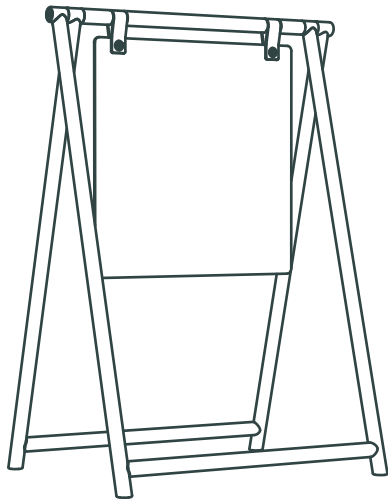

The A-Frame Sign is now ready to be used. To store or move the sign with ease, simply push the legs together.

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



@georgeandwilly



www.pinterest.com/georgeandwilly/



sales@georgeandwilly.com



www.georgeandwilly.com