GEORGE & WILLY®

CEILING MENU BOARD

The Ceiling Menu Board is a simple and functional magnetic display system for your cafe, gallery, or business.

The Ceiling Menu Board is easily reversible so you can swap between two menus or messages.

Signs are provided blank and made from powder-coated steel and aluminum with anodized aluminum brass hooks. We recommend using the Ceiling Menu Board with our magnet letter packs or using the magnets provided to hold pieces of paper in place. You can also write on the board with chalk, or using vinyl decals that your local sign-writers will be well equipped to make.

Thank you for your purchase,

George & Willy

CARE GUIDE

Where you install your product depends on its material/s.

Wooden and Steel Products: We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

Aluminum Products: These products are non-corrosive and suitable for use outside.

Chalk Products: You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.


Transportable Outdoor Signage: If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

COMPONENTS


	1 x Display Board
<u>l. </u>	1 x Hanging Frame
	4 x Rod Extensions
©	2 x Ceiling Mounts
	4 x Hooks
[] 	
)	
0	



If you want a vinyl application, we recommend sorting this first. Your local signwriter will be able to apply your branding/message to the sign. You can also write on the board with chalk, or use the magnets provided for printed pieces of paper.

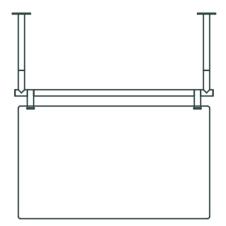

It is advised that you use a builder for installing the Ceiling Menu Board to reduce the risk of getting the installation wrong.

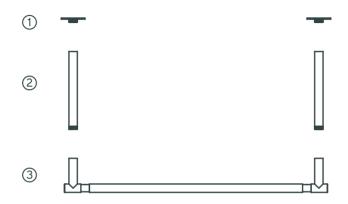

Thread the ceiling mounts (1), rod extensions (2), and hanging frame together (3).

The number of rod extensions ② you use depends on how heigh your ceiling is. If you have a low ceiling, you can also use no rod extensions ② and thread the ceiling mounts ① directly to the hanging frame ③.




You have the option of brass hooks and black/white hooks, pick your color preference and place them in the hook grooves on the mounting bar.

Gently fasten the 2 smaller bolts in through the top to hold them in place.




Use a pencil to mark where the ceiling mounts will be installed.

Screw each of the ceiling mounts to the ceiling with a screwdriver or powered drill. Make sure the mounts are nice and secure before proceeding to step 6.

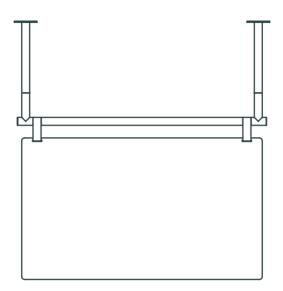

You are ready to hang your board on the hooks! If you haven't already, you can add your messaging to the board. Get creative and enjoy!

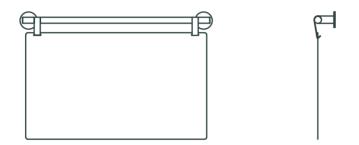

The Ceiling Menu Board isn't just for hanging from the ceiling! You can also mount it on your wall. If you are mounting onto a drywall, it will need to be fixed into a wooden stud to make sure it is properly fixed.

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. We recommend using a qualified builder to complete the installation to reduce the risk of damage or injury. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



@georgeandwilly



www.pinterest.com/georgeandwilly/



sales@georgeandwilly.com



www.georgeandwilly.com