

**GEORGE & WILLY®**

# HANGING SIGN

Make your space stand out with the Hanging Sign, designed with a focus on quality, functionality, and longevity to be used as a better way to display.

This sign is made from powder-coated aluminum and is not compatible with magnets. We recommend branding it using vinyl decals that your local sign-writers will be well equipped to make.

Thank you for your purchase,

George & Willy

# CARE GUIDE

Where you install your product depends on its material/s.

**Wooden and Steel Products:** We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

**Aluminum Products:** These products are non-corrosive and suitable for use outside.


**Chalk Products:** You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.

**Transportable Outdoor Signage:** If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

# COMPONENTS



..... 1 x Sign Board

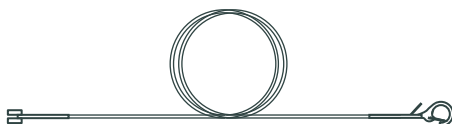

..... 2 x 4m Wires



..... 2 x Sex Bolts



..... 2 x Ceiling Mounts




..... 8 x Ceiling Mount Screws

1




The first step is to get your sign branded with your desired messaging. We recommend finding a local signwriter to apply your vinyl decal.

1

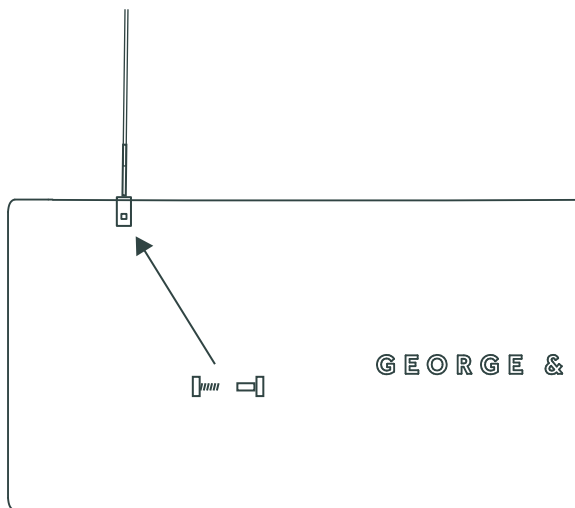

Screw the sex bolt through the shackle to connect each of the wires through the holes at the top of your Hanging Sign. Use the allen key to ensure the bolts are nice and tight.


2

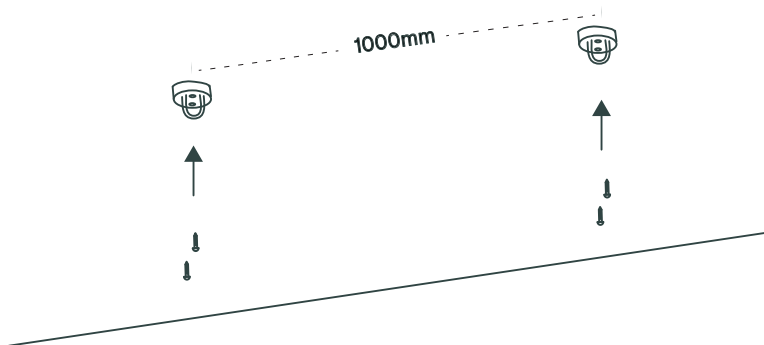

Use a pencil to mark where the ceiling mounts will be installed. Ensure there's a 100cm distance between the ceiling mounts.

Screw each of the ceiling mounts to the ceiling with a screwdriver or powered drill. Make sure the mounts are nice and secure before proceeding to step 3.

3

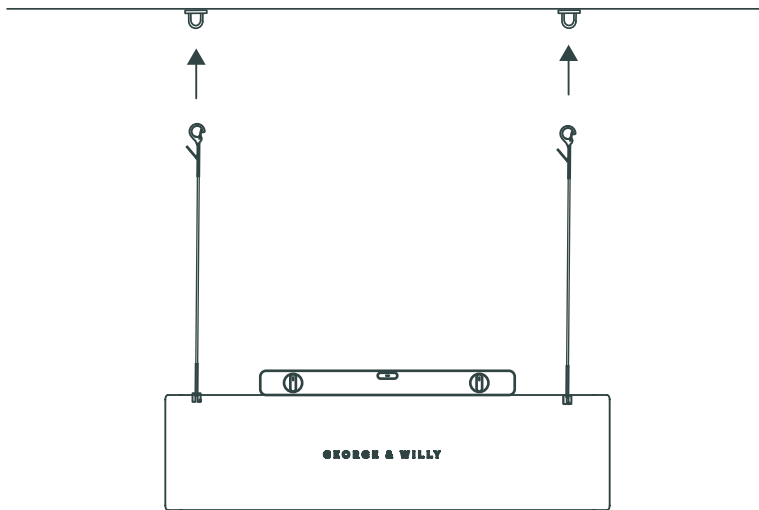


Clip the hooks (connected to the 4m wire) through each of the loops on the ceiling mounts.  
Pull the wire coming out of the hook to alter the level and get your Hanging Sign to its desired height.

Use a level to make sure it is hanging straight.



4

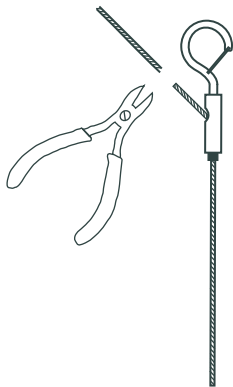

Once you are happy with where your sign is sitting, carefully trim the excess wire with a pair of wire cutters.

# DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

# CONTACT US



@georgeandwilly



[www.pinterest.com/georgeandwilly/](http://www.pinterest.com/georgeandwilly/)



[sales@georgeandwilly.com](mailto:sales@georgeandwilly.com)



[www.georgeandwilly.com](http://www.georgeandwilly.com)