GEORGE & WILLY®

MENU CASE

A beautiful way to display your menu or message inside your space. The Menu Case can be fastened to the wall of your restaurant, cafe, or office for customers to easily see your message or menu.

Ask your local printer to print your design, menu or artwork on paper or card to place in your Menu Case.

Thank you for your purchase,

George & Willy

CARE GUIDE

Where you install your product depends on its material/s.


Wooden and Steel Products: We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

Aluminum Products: These products are non-corrosive and suitable for use outside.

Chalk Products: You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.


Transportable Outdoor Signage: If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

COMPONENTS

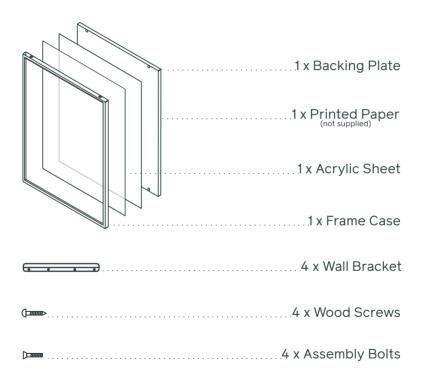



Start by choosing where to install the Menu Case. Using a level, to ensure the board is perfectly in line, mark this area with a pencil. The screws supplied are appropriate to use when mounting to a wooden surface. When mounting to concrete, tiles, or brick, you will require specific screws and tools that a local builder will have.

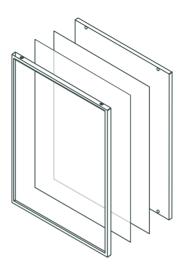

Once you have the mounting bracket fastened to the wall, you can then place the printed paper, clear acrylic, and frame together ready to bolt together.


Note: For printing/design reference, the visible area inside the frame is below.

592mm x 792mm or 235/16" x 313/16"

You should print on paper larger than this and cut to size.



Fasten the 4 x assembly bolts to the top and bottom of the frame to secure everything together.

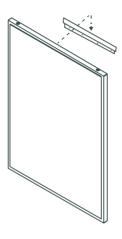

Once your poster has been bolted inside your frame, you are ready to lift it onto the wall bracket. If preferred, you can mount this landscape, follow the same directions but with the backing sideways.

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. We recommend using a qualified builder to complete the installation to reduce the risk of damage or injury. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



@georgeandwilly



www.pinterest.com/georgeandwilly/



sales@georgeandwilly.com



www.georgeandwilly.com