

GEORGE & WILLY®

MENU STAND

The Menu Stand is a freestanding sign that allows you to display beautifully printed menus, messages, or artwork. It is designed with a focus on quality, functionality, and longevity to be used as a better way to display any form of message in your business.

The Menu Stand is made from powder-coated aluminum, making it rust-proof. We recommend getting your graphic designer to design and print your menu or messages on paper to place in your Menu Stand.

Thank you for your purchase,

George & Willy

CARE GUIDE

Where you install your product depends on its material/s.


Wooden and Steel Products: We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

Aluminum Products: These products are non-corrosive and suitable for use outside.

Chalk Products: You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.

Transportable Outdoor Signage: If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

COMPONENTS

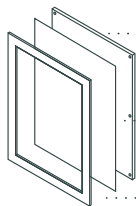

1 x Backing Plate

1 x Printed Paper
(not supplied)

1 x Frame Case Cover



4 x Bolts



1 x Angled Top Pole




1 x Bottom Pole




1 x Base Stand

1

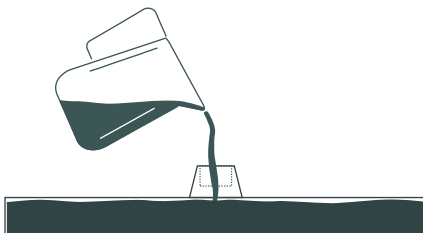


Begin assembling your Menu Stand by placing the base stand on an even surface and filling it with water. This gives your Menu Stand a more stable base of support. Fill until the water level is just below the upper 'roof' of the base plate to avoid overflow through the spout.

2

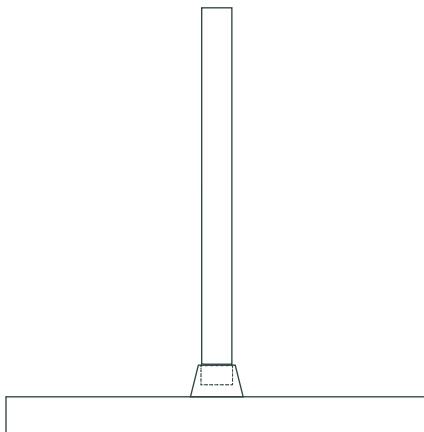


Place the bottom pole with threaded end into the base stand and turn clockwise. Keep turning until the tube is tightened firm into the base fitting.

 3

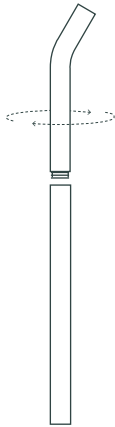


Carefully thread the angled top pole onto the top of the base stand pole and turn clockwise. Keep turning gently until the tube is tightened into the base fitting.

4

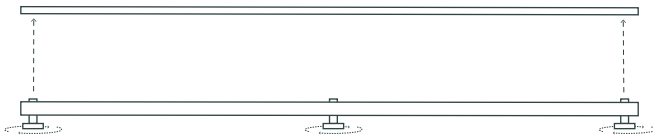


Unscrew the frame case cover from the backing plate.

5

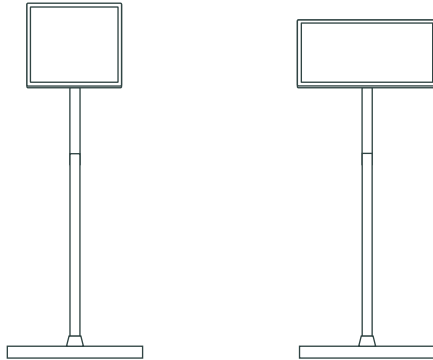


Decide if you would like your menu case to be displayed either portrait or landscape.

6

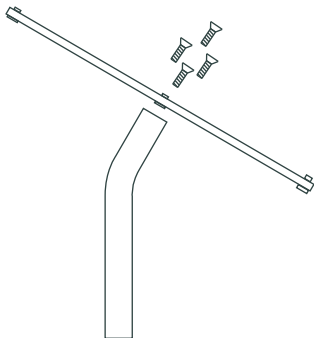


Once your backing plate is in your desired orientation, secure it to the angled top pole with all four bolts.

7

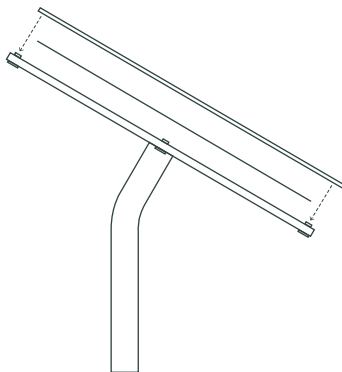


Insert your printed menu, making sure that all edges are inside the waterproof seal. Replace the frame case cover and screw to tighten.

8

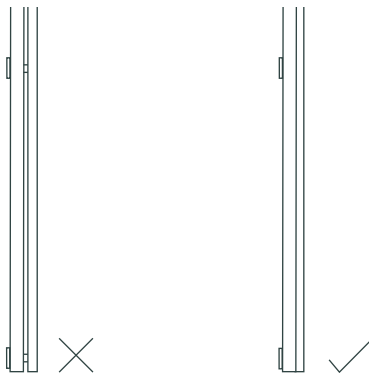

To ensure that your menu stand is waterproof, the screws need to be tightened so that there are no gaps between the two plates.

8

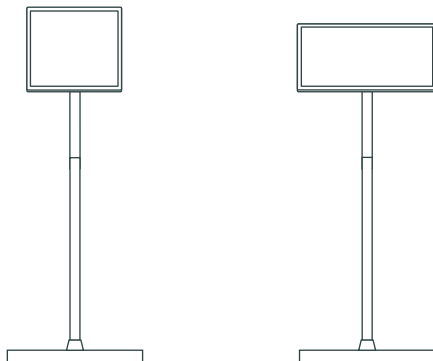

Your Menu Stand is ready to go!

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



@georgeandwilly



www.pinterest.com/georgeandwilly/



sales@georgeandwilly.com



www.georgeandwilly.com