GEORGE & WILLY®

SCOUT LETTER BOARD

The Scout Letter Board is a mini changeable wooden menu board designed for cafes, restaurants, and homes to share coffee menus, inspirational wallboard quotes, or important messages.

The scrabble-inspired letter tiles are a reminder of fond childhood memories.

Thank you for your purchase,

George & Willy

CARE GUIDE

Where you install your product depends on its material/s.

Wooden and Steel Products: We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

Aluminum Products: These products are non-corrosive and suitable for use outside.

Chalk Products: You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.

Transportable Outdoor Signage: If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

COMPONENTS

 
0	
	1 x Spacer
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 1 2 3 4 5 6 7 8 9 0 & \$	1 x Letter Pack
A B C D E F G H I J K L M N O P Q R S T U V W X Y Z 1 2 3 4 5 6 7 8 9 0	Extra Stickers
	26 x Wood/Drywall Screws

1





Horizontal




Choose a configuration for your Scout Letter Board. The rails can be installed below one another, or side-by-side.



Select a wall space to install the Scout Letter Board. The rails should be fixed into studs or a solid wall. Insert the first screw in the left hole on what will be your bottom rail.



Using a level, position the first rail (the one that will sit the lowest) on the wall. Fasten the screws to ensure the rail is securely fixed to the wall.

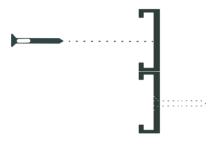

Place the next rail directly above the first rail. Using this as a guide, position and fix the second rail onto the wall. Continue this method for the remaining rails. Continue to use a level to make sure the rails remain parallel through this process.



It is time to create your messaging. Then slide the letter blocks one by one onto the rails from either end.



If extra letters are needed you can apply stickers which are provided with the letter packs - found under the lid. Hint: Use a kraft knife to lift stickers off the sheet.

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



@georgeandwilly



www.pinterest.com/georgeandwilly/



sales@georgeandwilly.com



www.georgeandwilly.com