GEORGE & WILLY®

WOODEN BLOCK LETTER BOARD

Inspired by traditional counting frames and a nostalgic reminder of our childhood toys, the Wooden Block Letter Board is a number and letter display designed to be easily changeable and updated with the use of wooden cubes which slide on and off the rails.

The Wooden Block Letter Board is designed with a focus on quality, functionality and longevity to be used as a better way to display messages in your business.

Thank you for your purchase,

George & Willy

CARE GUIDE

Where you install your product depends on its material/s.

Wooden and Steel Products: We recommend using these products inside or under a shelter where they are protected from any exposure to rain or water.

Aluminum Products: These products are non-corrosive and suitable for use outside.

Chalk Products: You should use traditional dry chalk. We don't recommend using liquid chalk pens on our products.

Transportable Outdoor Signage: If there is exposure to wind, we recommend bringing signage inside to protect it from the extremes. We offer Sandbags to help support your product in moderate wind conditions.

COMPONENTS	
0 0 0 0 0 0 0 0 0 0 0 0 0	
• • • • • • • • • • • • • • • • • • •	2 x Brackets
	13 x Rails
o	Letter Blocks
A	Stickers
H	6 x Screws and Spacers



We recommend that you use a qualified builder to mount your Letter Board to get it done right and without damaging your wall.

It is recommended that when fixing the screws into a wooden or drywall wall that you have sufficient hold by screwing into a stud.





Using the top sticker jig or a measuring tape and a level, mark the center points of the side brackets that are exactly 108mm apart.

Place the top of the side bracket sticker jigs on center at these marks. Place a level on the side of the side bracket sticker jig so that the screw holes are perfectly vertical. It helps to have someone hold the level while doing this step.



Once the side bracket sticker jigs are in place, check to make sure these are vertical and each of the screw holes are 108mm apart from the centre point of the holes on the opposite bracket gig.

Then using a screw or sharp pencil, press the center point of the screw holes on each screw hole to mark the screw holes through the jig onto the wall. Press hard.

Then you can remove the jigs off the wall and insert the screws into the wall. Take care with the screws and ensure to install them straight and not at an angle.



Slide the bracket's keyholes onto the screws firmly.



Stickers are applied simply by selecting the letter or symbol you need. By matching the relief paper to the block, you will ensure the letter is straight and centered each time.

If you're running low on blocks, simply flip a block with a letter on it and use the other side. This is super handy for when you're wanting to swap menus or messages throughout the day, too.



Slide the letter blocks on from either side.



Slide the rods into the keyholes on the inside of each bracket. The specially milled end caps for these are made to fit perfectly.

DISCLAIMER

George & Willy products have a lifetime warranty. This covers faulty workmanship and/or materials when the product is used in normal, domestic, or commercial conditions and following the care and use instructions provided.

It does not cover normal wear and tear, accidents, or misuse of the product. If the defect was caused by a manufacturing fault, the faulty product will be replaced free of charge. If the original product is no longer in production, it will be replaced with the most similar product.

Please keep all parts out of reach of small children as they may pose a choking risk.

CONTACT US



@georgeandwilly



www.pinterest.com/georgeandwilly/



sales@georgeandwilly.com



www.georgeandwilly.com