




Member's Mark™

Assembly Manual

Lancaster 5pc Fire Chat Set

Model Number: GC-8976-5PC

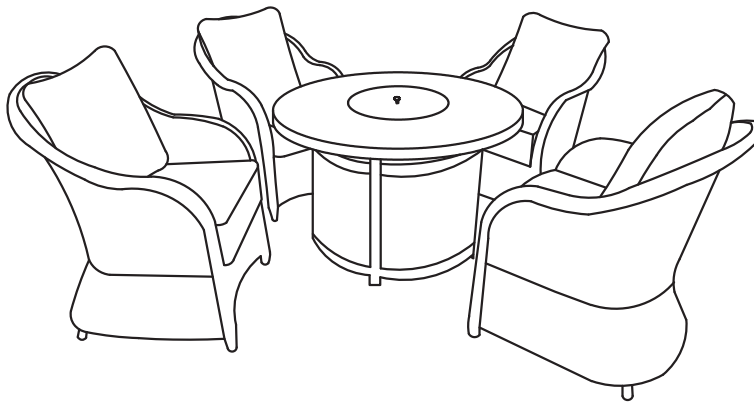

DANGER: **FIRE OR EXPLOSION HAZARD**

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, leave the area immediately.
4. After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



WARNING: Do not store or use gasoline or other flammable liquids vapors and liquids, in the vicinity of this or any other appliance.
An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



WARNING: For Outdoor Use Only.
Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

DANGER

CARBON MONOXIDE HAZARD



This appliance can produce carbon monoxide which has no odor.
Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.



WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at:
samsclub.com/membersmarkhelp

Important Safety Information

- *Please read all instructions carefully before assembling this furniture.*
 - *For your safety, assembly by two or more adults is strongly recommended.*
 - *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
 - *Hardware may loosen overtime. Periodically check that all connections are tight.*
 - **NOTICE:** *To prevent injury and property damage from unexpected tipping of furniture, we highly recommend installation of the anti-tip kit included with this product.*
-

Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
 - *The shipping box provides an ideal work surface.*
 - *To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
 - *Use the parts and hardware lists below to identify and separate each of the pieces included.*
 - *The use of power tools for assembly is not recommended. Power tools can damage the hardware and/or split the wood.*
 - **Note:** *Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.*
-

Care and Cleaning


- *Dust often and use a vacuum cleaner crevice tool to clean seams. To maintain the leather appearance, gently clean soiled areas with a soft cloth dampened with a mild, water based detergent. Remove all lather and wipe with a clean damp cloth. Dry with another soft cloth by blotting the damp surface (do not rub).*
 - *Do not place furniture in direct sunlight and keep furniture at least 60 cm / 2 ft from heat sources to avoid fading.*
-

Components


- A.....Table top.....1
- B.....Table base....1
- C.....Burner Cover.....1
- G.....8kg Glass beads.....1



A

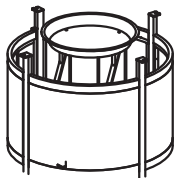

B

 




C



 
G

Hardware

<p>(D) Hex Head Bolt M6x20mm Qty: 4</p> 	<p>(E) Washer Qty: 4</p> 	<p>(F) Hex Wrench Qty: 1</p> 
--	---	---


Step 1

(D) Hex Head Bolt M6x20mm Qty: 4	(E) Washer Qty: 4	(F) Hex Wrench Qty: 1
--	--------------------------------	------------------------------------

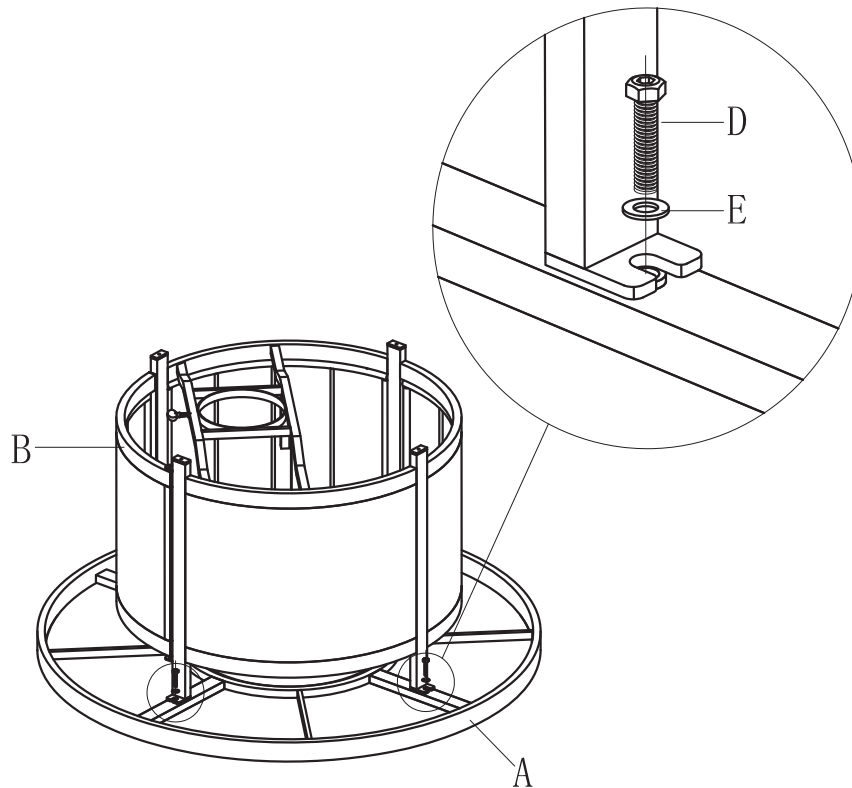


Carefully place the table top (A) upside down on a non-abrasive surface.
Assemble the table base(B) to the table top(A) with bolts (D) and washer (E) by using Allen wrench (F).
Tighten all bolts with Allen wrench.the hex bolts until assembling is completed

Step 2

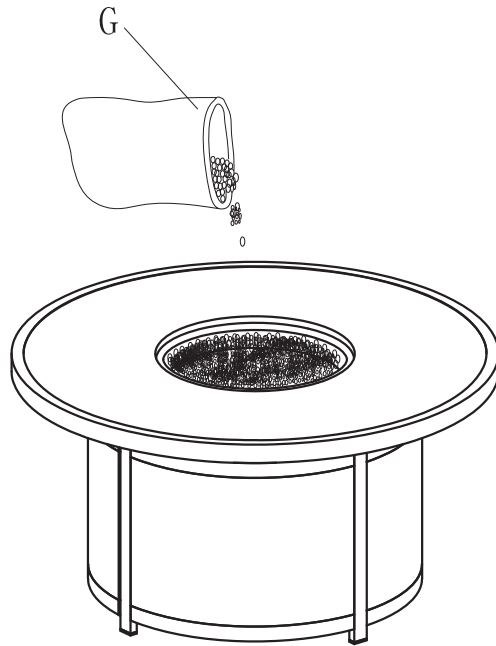

Carefully Place the glass beads (G) around the burner.


Step 3

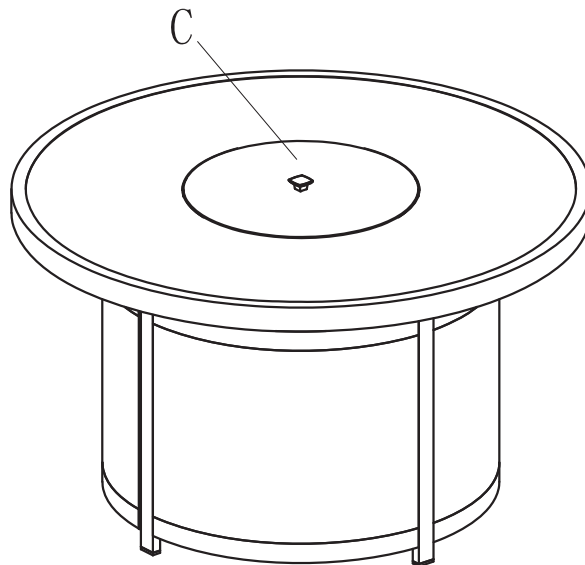

Place Burner Cover onto the fire bowl.

NOTE: Glass beads is not included. When the fire pit is not in use and has cooled COMPLETELY, cover it with the Burner Cover. DO NOT USE BURNER COVER ON A HOT FIRE PIT OR WHEN IN USE.

Loading the propane

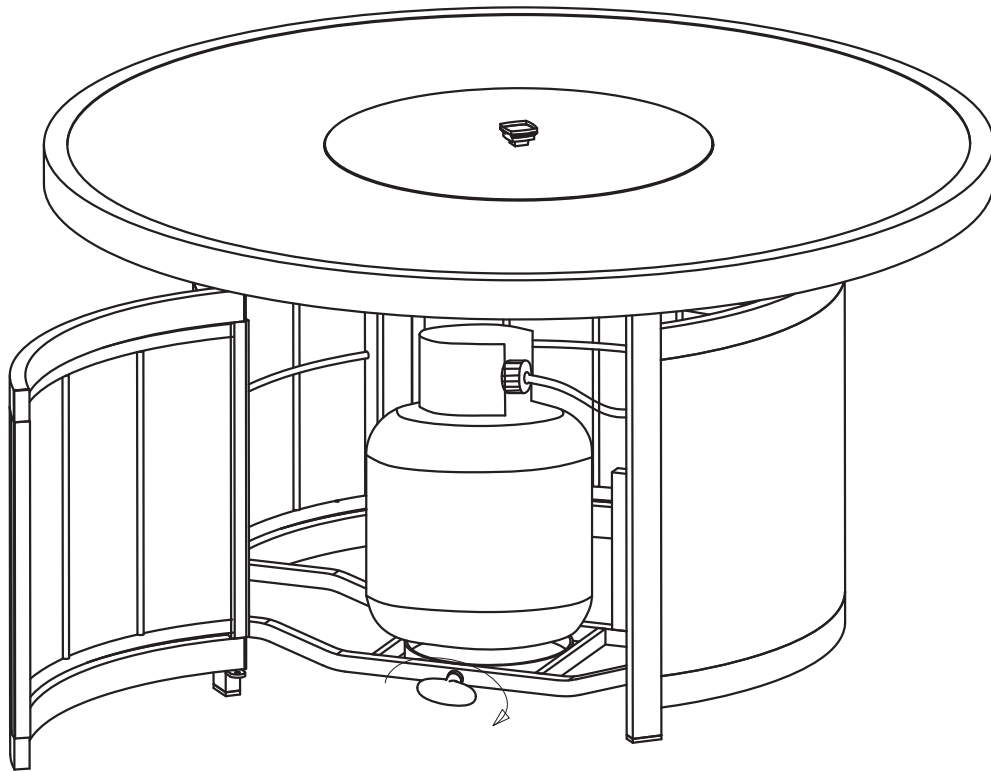

Open the door

Carefully place the cylinder into the tank rack. Tighten the bolt to hold the cylinder in place

Safety Warning




CAUTION

- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or prevent clothing ignition.
- Young children should be carefully supervised when they are in the area of the appliance.
- Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.
- Any guard or other protective device removed for servicing the appliance must be replaced prior to operating the appliance



CAUTION

- Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners, and circulating air passageways of the appliance are kept clean.
- **Do not use the appliance if any part has been under water.** Immediately call a qualified technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- LP gas supply cylinder to be used must be constructed and marked in accordance with the **specifications for LP gas cylinders of the U.S. Department of Transportation (DOT)**. See page 16.
- The cylinder supplies system must be arranged for vapor withdrawal and the cylinder must include a collar to protect the cylinder valve.
- **Use only 20 lb (9 kg) LP gas cylinders.**
- **Do not burn wood or any other materials in this appliance.**

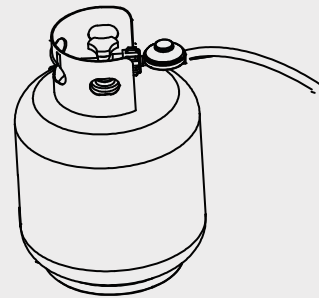

- The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. The replacement burner must be the same as the part specified by manufacturer.
- To clean the appliance including the burner, please refer to Cleaning and Clearing [page 17](#).
- **Do not try to cool glass beads with water soon after shutting off the gas appliance or they will get broken.**
- We recommend you not using the gas appliance in strong wind and/or heavy rain.

Safety Warning



CAUTION

- When the appliance is connected to a fixed-gas system, the installation must conform with local codes, or in the absence of local codes with the National Fuel Gas Code, ANSI Z223.1/NFPA54; International Fuel Gas Code, Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, B149.2, as applicable.



CAUTION

- The LP gas supply cylinder used must be:
 1. Constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339 as applicable.
 2. Provided with a listed overfill prevention device.
 3. Provided with cylinder connection device compatible with the connection for the appliance.




CAUTION

- Always place the appliance on a firm and level surface.
- Solid fuels shall not be burned in this gas appliance.
- The appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed area.
- When in use, keep the appliance area clear and at least side 8" (21.9cm) and top 72" (182.9cm) from combustible materials, gasoline and other flammable liquid and vapors.
- Do not use the appliance under combustible surfaces. Certain items or materials, when stored under the appliance or nearby, will be subjected to radiant heat and could be damaged.
- Inspect the hose assembly and burner prior to each use. If there is evidence of excessive abrasion or wear, or if the hose or burner is damaged, it must be replaced by an appropriate part from the manufacturer.
- Inspect the gas connections of the appliance prior to each use. Do not operate the unit if there is a gas leak. Have the appliance inspected annually by a qualified service person.
- The pressure regulator and hose assembly provided with the appliance must be used. The replacement part must be the same as specified by the manufacturer.
- To attach the LP gas cylinder please refer to the Gas Connection section page 14 and perform the leak test on page 15.



Loading the battery

□

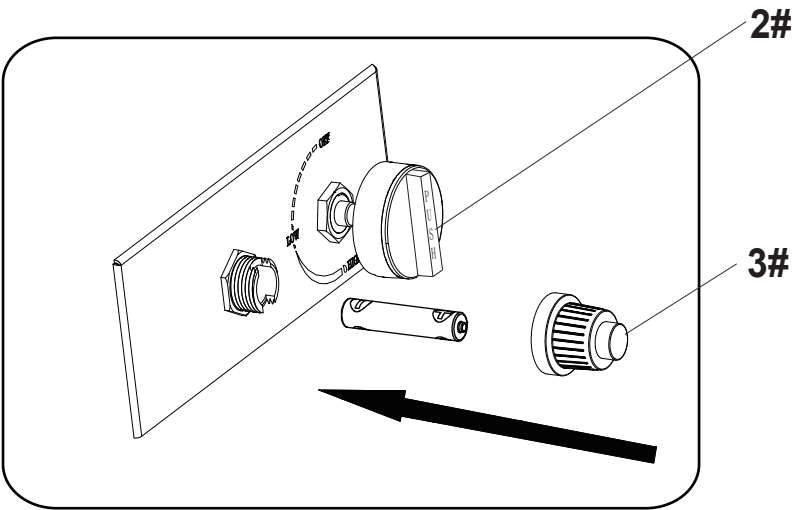

Unscrew the battery box, insert the negative electrode side of the battery into the bottom of the battery box
Note: Please follow the above instructions to replace the battery when needed.


Gas connection

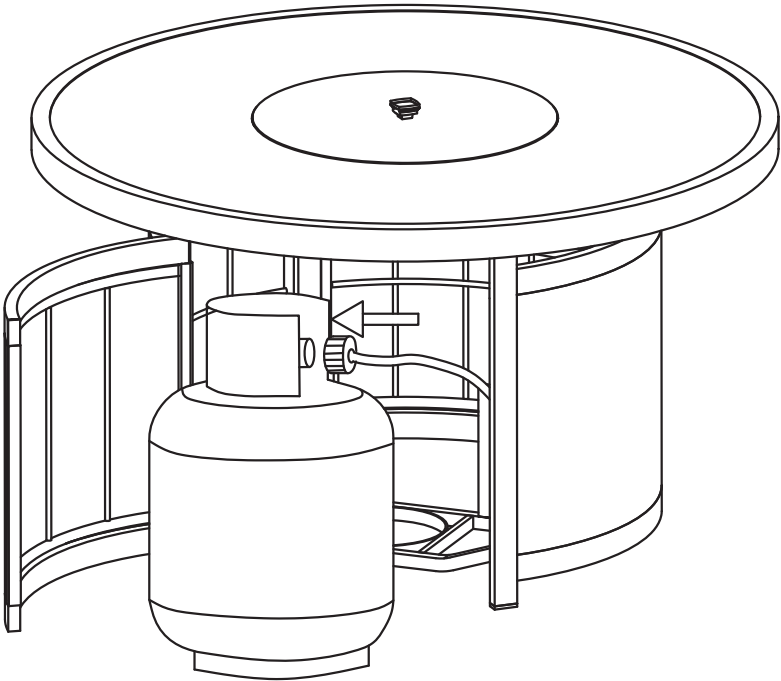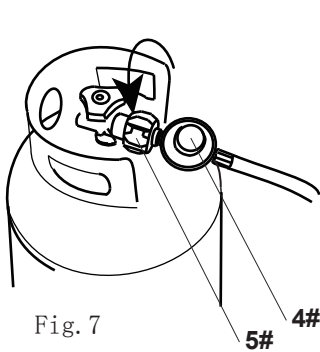

Connect the pressure regulator (4#) to the cylinder by rotating the knob(5#) clockwise until it is fully secured.
Make sure there is no leakage or damage.
Close the left access door and lock it in position with the plastic lock (1#).
IMPORTANT:
If the knob (5#) is not properly threaded to the outlet of the cylinder. Gas leak will possibly occur.


□

Leak Check



Do not use an open flame to check for leaks.
Do not smoke during testing.
Do not test indoors.

WARNING A leak check must be performed whenever the gas cylinder is replaced.






NOTE

1. Make sure the gas cntrol knob (2#) is on the “OFF” position. Open access doors.
2. Make sure the gas cylinder is correctly and securaly connected to the pressure regulator, with a tight fit.
3. Turn on the gas cylinder valve(7#). Apply 50% soap and 50% water solution to the gas hose at connections between the knob(5#) and the gas cylinder.
4. If there is a leak, you will see bubbles form. In the case of the leak, turn off the gas supply, unscrew the connections. Reconnect the gas hose and retest. If the leak persists, consult the customer sarvice canter for assistance.
5. If the connection is sound, continue to the next step.

LIGHTING


1. Make sure control knob (2#) is on the “OFF” position on the contral panel.
2. Open access doors. Turn on gas cylinder valve (7#) to fully opened position.
3. Push and turn the knob (2#) to “HEGH”.
4. Hold ignitor (3#) to light the burner. Release the knob afer 45 seconds.
If there is no fire turn the control knob to “OFF”, wait 5 minutes and repeat from step 3 on.
5. Adjust flame to desired flame with the control knob.

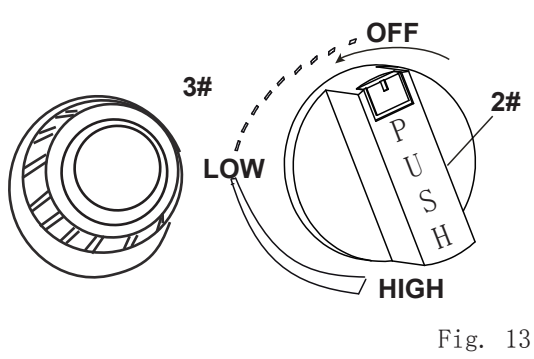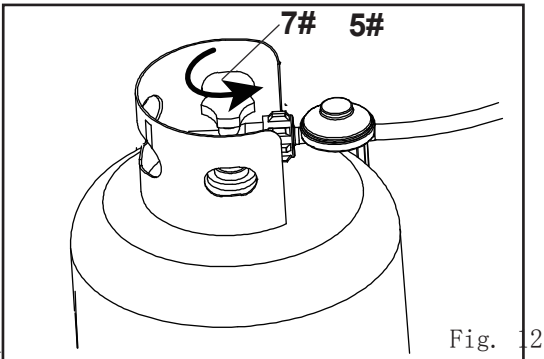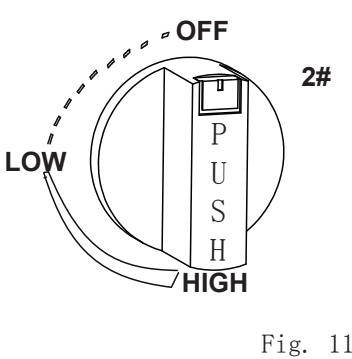



WARNING

Do not operate if there is a kink in the flexible gas hose as this could lead to a gas leak.



WARNING

Lighting the appliance improperly could lead to an unsafe condition.


SHUTTING DOWN THE GAS

1. Turn the gas control knob (2#) to “OFF” to shut down appliance.
 2. Turn the gas cylinder valve (7#) off when the gas appliance will not be in use.

WARNING




Do not try to cool glass beads with cold water right after shutting down the gas appliance or they will get crack.
Do not allow children to play with glass beads,

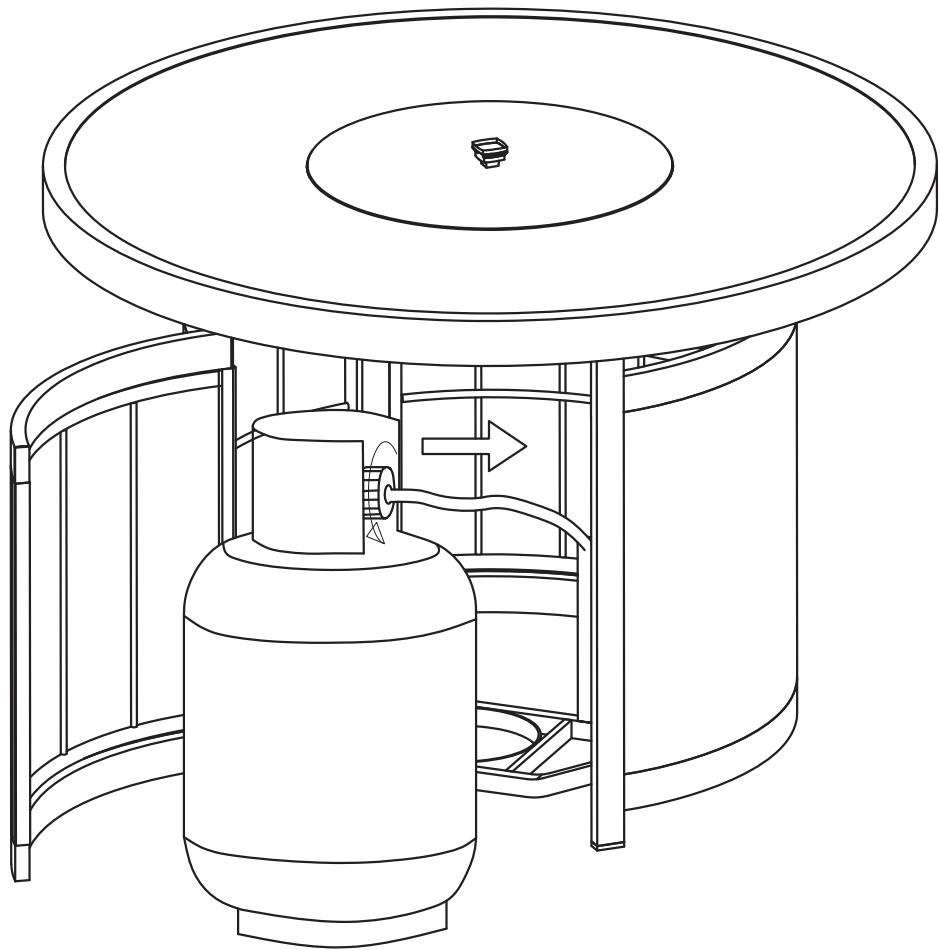

Need Assistance? Call us at 1-888-691-2824 from 8am to 5pm CST Monday-Friday

Gas Cylinder Required

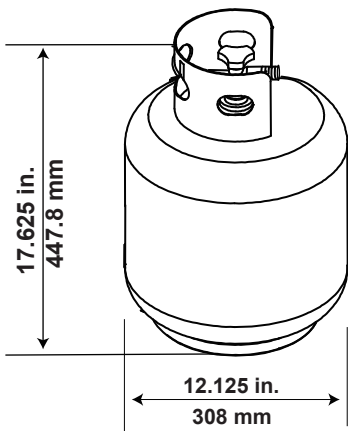

20lb QCC OPD Barbecue Tank
Diameter: 12.125 in. / 308 mm
Height: 17.625 in. / 447.8 mm
TW (Tare Weight): 16.6 lbs
WC (Water Capacity): 47.6 lbs

Other cylinders may be acceptable for use with the appliance provided they are compatible with the appliance retention means; provided with a listed overfilling prevention device; and provided with a cylinder connection device compatible with the connection for the appliance.

(Note : Cylinder is not included in this unit.)