




aspire® Zelos 50W Kit USER MANUAL

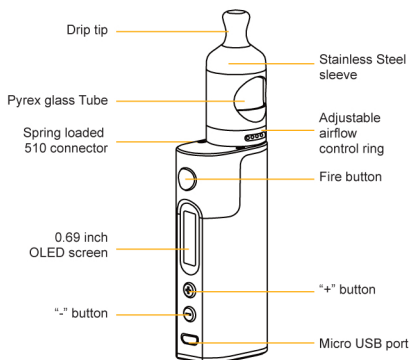

This product contains nicotine which is a highly addictive substance.

The above warning only applies when this device has been filled with nicotine containing e-liquid

Zelos Mod

Specifications

Output wattage: 1-50W
Output voltage: 0.5V-8.0V
Resistance Parameters:
VW/VV: 0.1-3.5ohms
Bypass: 0.2-3.5ohms
TC: 0.1-1.0ohms
Continuous firing time is 10 seconds
Firmware update: N/A
Screen: 0.69 inch OLED screen
Dimensions: 79*38*23mm
Battery Type: Built-in LiPo
Battery capacity: 2500mah

Instructions

- Pressing the fire button 5 times within 2 seconds to either lock or unlock the device. while the mod was locked, press the fire button for 3 seconds will turn the system off. To turn the mod back on press the fire button 5 times rapidly.
- Press the fire button 3 time rapidly when the mod is on will turn it into or out of stealth mode. While in stealth mode, the fire button still functions, but "+" and "-" buttons are all locked.
- Press "+" and "-" buttons simultaneously will allow you to sele between VW, VV, Bypass and TC(Ni,Ti, SS) modes. Pressing "+" or "-" button to select modes, fire button to confirm.
- Pressing "+" to increase wattage, voltage or temperature "-" button to decrease. Press "+" or "-" button longer will change the number faster.
- When the mod is in TC mode press fire button and "-" button simultaneously can go into wattage setting interface, in which users can adjust the output wattage under TC mode just by clicking "+" and "-" buttons, pressing the fire button to save the settings.
- When the mod is on, press fire button and "+" button simultaneously



kit Contents

- | | |
|---------------------|--------------------------|
| 1* Nautilus 2 tank | 1* Zelos 50W mod |
| 1* Extra drip tip | 1* Extra 0.7ohm BVC coil |
| 1* Extra glass tube | 8* O rings |
| 1* Micro USB cable | |

Nautilus 2 Tank

Coil installation

1. Unscrew and remove the stainless steel sleeve.
2. Remove the glass tube.
3. Unscrew to remove the used coil.
4. Attach a new coil onto the base hardware

Top fill

1. Unscrew and remove the stainless steel sleeve.
2. Add your preferred e-liquid into the glass tube.
3. Replace the stainless steel sleeve.



- When using a new atomizer, let the tank stand for 2 minutes, so the cotton can be saturated with juice before firing.
- Do not let the tank become completely empty. Refill the tank to avoid dry burning or damage to the atomizer.

Zelos Mod

will lock or unlock buttons. When the buttons are locked, wattage, voltage and TC settings can not be adjusted.

- To change temperature to Fahrenheit(F) or to Celsius(C), press the "+" or "-" button all the way to pass the temperature range, the temperature will switch over to either Celsius or Fahrenheit automatically.
- The Zelos will enter its sleep mode when being idle for 1 minutes, while in sleep mode press the fire button will wake the device.

Protection features

- Automatic Cut Off
- Short Circuit Protection
- Low Resistance Protection
- Overheat Protection
- Over charge Protection
- Over Discharge Protection

Charging Instructions

- Charging the Zelos via Micro-USB charging port, the maximum current can reach up to 1A.
- Connect your Zelos mod to the charger and the screen will show a flashing battery icon. When the battery charge reaches 4.2V or is fully charged, the mod will stop charging and the screen will remain off.

*Keep out of reach of children and minors

To learn more about your products and how to use, please visit: www.aspirecg.com

Manufactured By Eigate MADE IN CHINA

