

Notice for Use

Thank you for choosing Eleaf products! Please read this manual carefully before use so as to use correctly. If you require additional information or have questions about the product or its use, please consult your local agents, or visit our website at www.eleafworld.com.

Product Introduction

The iStick QC 200W comes with a massive 5000mAh built-in battery and has a powerful 50A/200W maximum output. Stylish, sustainable and powerful, the iStick QC 200W also features a 1.5A quick charge capability when using the Avatar Quick Charger. With a width of 25mm, it pairs with all tanks up to 25mm nicely without overhang. Moreover, the innovative RC adapter will convert the iStick QC 200W's 510 connection into a USB output for Power bank mode when necessary.

How to Use?



Power on/off: Press the fire button 5 times in quick succession to turn on/off the device. Keep holding the fire button to take a puff when the device is powered on.

Stealth on/off: Press the fire button and down button simultaneously when the device is powered on to switch between Stealth On and Stealth Off mode.

1 | iStick QC 200W | English

In Stealth On mode, you can vape with the OLED screen off and you can press the fire button once to see current setting.

Adjustment buttons lock/unlock: Keep pressing up button and down button simultaneously for two seconds when the device is powered on, then the up and down buttons will be locked and the screen will display "Lock". In the same way, the up and down buttons can be unlocked and the screen will display "Unlock". Through this operation, you can protect the buttons from unintentional presses and prolong their lifespan.

Switch display mode: Keep pressing up button and down button simultaneously for two seconds when the device is powered off, the screen display will rotate 180 degrees. You can view the screen from two different angles through this operation.

Switch display interfaces: In power-on state, choose VW mode; keep holding up and fire buttons till the current interface flashes; when it's flashing, press up or down button to switch among different interfaces; finally press fire button once to confirm the interface you chose.

Note: the interface can only be changed and selected under VW mode in

3 | iStick QC 200W | English

fire button to power on the device, and in USB Charge mode, press fire button once to start to charge other e-cigarette device.

Switch vaping modes: When the device is powered on, press the fire button 3 times in quick succession, the device will display current vaping mode. Press the up or down button to switch among VW, Smart, USB Charge (this mode appears only when "USB" is on), TC-Ni, TC-Ti, TC-SS, TCR-M1, TCR-M2, TCR-M3 modes and then press the fire button once or stay in the interface for about 10 seconds to confirm the vaping mode you chose.

1) VW mode:

When set in VW mode, the device can support a coil whose resistance is within the range of 0.1ohm-3.5ohm.

Adjust wattage: In this mode, the output wattage can be adjusted from 1W to 200W by pressing up button or down button, up button to increase and down button to decrease. Long press up button or down button can rapidly increase or decrease the wattage level.

2) Smart mode:

power-on state. And when one interface is selected under VW mode, the interfaces of TC (Ni, Ti, SS, M1, M2, M3) modes will change accordingly and automatically.

Preheat function: In power-off state, keep holding up and fire buttons till the M1 mode appears; press the fire button 3 times to "Power", and press up or down button to adjust the wattage of preheat; press the fire button again to "Time", and press up or down button to adjust the second of preheat or to turn off the preheat function.

Function of charging cell phone: Screw an RC adapter (not included) on the device and connect it with a cell phone by a USB cable. When the device is powered on, press the fire button once to start to charge the cell phone.

Function of charging other e-cigarette device: Screw an RC adapter (not included) on the device and connect it with another e-cigarette mod by a USB cable. In power-off state, keep holding up and fire buttons till the M1 mode appears; press the fire button 5 times to "USB" interface, and press up or down button to turn on or off this function. When the "USB" is turned on, 5 clicks of the

English | iStick QC 200W | 4

In Smart mode, the wattage can be adjusted from 1W to 200W by pressing up button or down button only when an atomizer is installed on the device. The Smart mode will save one output power setting for each resistance value and can totally save ten groups of such settings. Once you change the output power setting for a resistance, it will re-save the changed setting automatically. When the Smart mode has already remembered ten settings and you want to add another new resistance, the first saved setting will be deleted. When set in this mode, the device can support a coil whose resistance is within the range of 0.1ohm-3.5ohm.

3) TC-Ni/TC-Ti/TC-SS/TCR(M1, M2, M3) Mode:

When set in TC-Ni/TC-Ti/TC-SS mode, the device can separately support Nickel 200, Titanium, and Stainless Steel 316 coils. In TCR (Temperature Coefficient of Resistance) mode, the device can support different temperature control coils within different TCR value ranges and you can set the TCR at different values within proper range. (Resistance range of coil: 0.05ohm-1.5ohm)

The Setting of TCR Mode (M1,M2,M3): When the device is powered off, keep pressing the fire button and the up button simultaneously, then you will enter into the TCR (M1,M2,M3) set menu:

5 | iStick QC 200W | English

1. Press the fire button once repeatedly to choose among M1, M2 and M3 modes;
2. Press the up or down button to increase or decrease the TCR value according to the material of the coil you use;
3. Keep pressing the fire button or stay in the interface for about 10 seconds to confirm your setting.

Following are different TCR value ranges for different coils for your reference:

Material	Nickel	Titanium	NiFe	SS(303,304,316,317)
TCR Value Range	600-700	300-400	300-400	80-200

Note: 1. The TCR value in the sheet is 10³ multiplied of the actual TCR.
2. Our total range of TCR value is 1-1000.

Adjust wattage: In TC-Ni/TC-Ti/TC-SS/TCR(M1,M2,M3) mode, the output wattage can be adjusted from 1W to 200W. Press the fire button 4 times in quick succession to enter the wattage setting menu and press up or down button to increase or decrease the wattage level. Keep pressing up or down button without looseness to rapidly increase or decrease the wattage level.

English | iStick QC 200W | 6

Adjust temperature: In TC-Ni/TC-Ti/TC-SS/TCR(M1,M2,M3) mode, temperature can be adjusted from 100-315°C or 200-600°F by pressing up or down button, up button to increase and down button to decrease. Each press of the up or down button will increase or decrease the temperature setting by 5°C or 10°F. Keep pressing up or down button without looseness can rapidly increase or decrease temperature setting.

Shift between °C and °F: If you increase the temperature to 315°C, and continue to press the up button, the temperature reading will automatically change to the lowest Fahrenheit (200°F). Equally, if the temperature is set at the lowest Fahrenheit (200°F) and you continue to press the down button, the temperature reading will automatically change to the highest Celsius (315°C).

Lock/Unlock resistance: In TC-Ni/TC-Ti/TC-SS/TCR(M1,M2,M3) mode, when the device is powered on, keep pressing the fire button and up button simultaneously for two seconds to lock or unlock atomizer "base resistance". The lock sign will appear when resistance is locked and "Ω" symbol will come back when unlocked.

- Note:**
1. Please lock the resistance when the coil is at room temperature so that the device can display the correct "base resistance".
 2. In resistance lock mode, when you remove the coil and then put it back, the

7 | iStick QC 200W | English

device can maintain the same "base resistance" although the coil resistance may increase due to the rise of temperature. In resistance unlock mode, when you remove the coil and then put a coil back, the screen may display "New coil up same down" as the coil resistance may increase within certain range. If it is the same coil, press the down button and if it is a new coil, press the up button. But please unlock the resistance when you want to change an atomizer or a coil of different resistance.

3. When using a common coil or a coil whose resistance is above 1.5ohm in TC-Ni/TC-Ti/TC-SS/TCR(M1,M2,M3) mode by mistake, the device will automatically switch back to VW mode.

How to put custom logo in the device?

Download the file on our official website, plug the device in with USB cable to a computer, and double click the EleafUpdate.exe. Then click "LOGO" and open the image you choose to put it in the device. Finally press the fire button twice in quick succession when the device is powered on to enter logo on/off interface and press up or down button one time to turn on/off logo.

Note:
1. Please make sure the image you choose is a monochrome image of 96*16 pixels

English | iStick QC 200W | 8

1. in the format of bmp.
2. If you fail to put the custom logo in and the device shuts down, press the down button once to restart the device.

Functions of Micro USB Port

Charging: The battery power indicator on the screen of the iStick QC 200W will keep flashing when the remaining power of the battery is less than 10%. The device can be charged through USB port at the bottom of the device via wall adapter or a computer.

Firmware Upgrading: The firmware can be upgraded by connecting the device with a computer through the USB port via a micro USB cable.

Properties

Atomizer Protection: Each time when vaping time exceeds 10 seconds, the output shuts off automatically with "Over 10s" display on the screen.
Atomizer Low Alert: When the resistance of coil is lower than 0.1ohm in VW/Smart mode or lower than 0.05ohm in TC modes, the screen will display

9 | iStick QC 200W | English

"Atomizer Low"

Atomizer Short-circuit & No Atomizer Protection: When atomizer short-circuit occurs, the OLED screen will display "Atomizer Short". The screen will display "No Atomizer" when there is no atomizer connected.

Low-voltage Protection: When the voltage of the device is below 3.3V, the OLED screen will display "Lock" and the output will cut off automatically. Charge the device to reactivate it.

Temperature Protection: In TC-Ni/TC-Ti/TC-SS/TCR(M1,M2,M3) mode, when the actual temperature of coil reaches the set temperature, the screen will display "Temp Protection".

Temperature Alert: If the temperature of device is over alert temperature, the output will shut off automatically and the screen will display "Device Too Hot". You can continue to vape after it cools down.

Warranty

We are not responsible for any damages caused by human error. Legal warranty is applied.

English | iStick QC 200W | 10

Warnings

1. Please keep out of reach of children.
2. This product is not recommended for use by young people, non-smokers, pregnant or breast-feeding women, or persons who are allergic/sensitive to nicotine.

Contra-indication

1. Do not attempt to repair the product by yourself as damage or personal injury may occur.
2. Do not leave the product in high temperature or damp conditions, otherwise it may be damaged.
3. Do not use this product for other purposes except only for vaping and don't swallow the e-liquid.

Possible Adverse Effects

1. This product may be hazardous to health and contains nicotine which is addictive.
2. For people with adverse reaction after using this product, it is recommended to use the e-liquid with lower nicotine content or no nicotine.

11 | iStick QC 200W | English

English | iStick QC 200W | 12