

Notice for Use:

Thank you for choosing Joyetech.
Please read this manual carefully before use to ensure that your usage is correct. If you require any additional information or have any questions about the product or its use, please consult your local Joyetech agent, or visit our website at www.joyetech.com.

Product Introduction:

Being the all-in-one concept, eVic AIO box features an interchangeable plate which allows to replace the battery or atomizer easily. eVic AIO adopts the best anti-leaking structure with top refilling and top airflow control system. Large 0.96-inch OLED screen, colorful stickers and multiple coil options all make it more practical and attractive catering to your preference. Also, upgradable firmware always enables it up-to-date.



1 | eVic AIO | English

English | eVic AIO | 2

How to use

1. Power on/off

Press the fire button 5 times in quick succession, the screen will on. Then it's ready to use. In the same way, the device will be turned off by pressing another 5 times in quick succession.

2. Vaping

Hold the fire button and inhale through the mouthpiece. Release the fire button and exhale. (Note: Please adjust the wattage to a proper range according to your atomizer before use.)

3. Charging

Simply charge eVic AIO by connecting it with a wall adapter or a computer via USB cable. When it's fully charged, the display will go out.

4. Atomizer head replacement

Unscrew the top cap, the atomizer head is located on the cap, just unscrew it and replace and clean.

Note: 1. Please do not wash the atomizer head with water. Simply scrub it with cotton or clean dry cloth.
2. Please drip at least 5 drops of e-juice to the atomizer head and inhale a few times in power-off condition (with airflow widely open) before its first use to avoid dry burn.

5. E-juice filling

Remove the top cap and inject the e-juice into the side holes (not the vent hole in the middle). (Note: Please don't refill too much to avoid overflow.)

6. Air inflow adjustment

Simply rotate the airflow ring clockwise or counter-clockwise to adjust the airflow inlet.

7. Change the led color

When the device is on, hold the fire button and right regulatory button simultaneously to enter into Led Color interface where you can choose from Blue, Green, Yellow, Red, Purple, Cyan, White and off condition by pressing the Down button. Press the fire button to confirm your choice.

8. Set screen protection time

When the device is on, simultaneously hold the fire button and the right regulatory button (on the bottom) to enter into adjustment interface. Press the right regulatory button again to enter into screen protection time setting. Choose the protection time and press the fire button to confirm.



| Led Color | Screen |
|-----------|--------|
| Blue | 1 Min |
| Green | 2 Min |
| Yellow | 5 Min |
| Red | 10 Min |
| Purple | 15 Min |
| Cyan | 20 Min |
| White | 30 Min |
| Off | Off |

3 | eVic AIO | English

English | eVic AIO | 4

9. Apply the Atomizer Adapter

Simply unscrew the airflow ring and take it out of the tube. Install the atomizer adapter tightly with a coin, then you can apply multiple types of atomizers on it.

General functions

How to set the time

Press the fire button 3 times to enter into the setting menu. The first row will flash to. Press the left regulatory button to switch between Hour, Minute, Year, Month and Day. Press the right regulatory button to adjust the parameter. (Note: only Year can be reversed by pressing the left regulatory button when adjusting). Also the eVic AIO has two ways of time displaying: Dial Display and Numerical Display for your preference.



Switch among different modes

Press the fire button 3 times to enter into the setting menu. Press the right regulatory button to switch among TEMP, TCR, POWER and BYPASS modes. Press the fire button to confirm.

(1) Under TEMP or TCR mode, while flashing, press the left regulatory button to enter into its subsidiary menu to set: VT, PWR, COIL and AMP. When adjusting VT, press the right regulatory button to switch among Temp Ni, Temp Ti and Temp SS316/ M1, M2 and M3 modes. Press the fire button to confirm. When the AMP row is flashing, press the right button to switch among AMP, PUFF and TIME.

(2) Under POWER or BYPASS mode, while flashing, press the left regulatory button to enter into its subsidiary menu. When AMP row is flashing, press the right regulatory button to switch among AMP, PUFF and TIME.

Temp-SS316

The Temp-SS316 mode is especially designed for stainless steel 316 coil. We kindly recommend you Joyetech BF-SS316 atomizer head.

TCR (M1, M2, M3)

With the TCR (Temperature Coefficient of Resistance) function available on the eVic AIO, you can customize your temperature control coils (Ni, Ti, SS) on your won. Under TCR mode, when the mode indication is still flashing, press the left regulatory button and the sub-menu items (M1, M2, M3) will flash. Press the right regulatory button when it still flashing to switch among M1, M2 and M3. Press the fire button to confirm.

How to set the TCR?

In power-off condition, press the fire button and the right regulator simultaneously for about 5 seconds to enter into the TCR set menu:

- Press right/left regulator to choose between TCR M1, M2 or M3;
- Then press the fire button to select certain parameter;



5 | eVic AIO | English

English | eVic AIO | 6

(3) Press the regulator to set the parameter;
(4) Long press the fire button or leave it for about 10 seconds to confirm.

| Material | TCR Value Range |
|-------------------------|-----------------|
| Nickel | 600-700 |
| NiFe | 300-400 |
| Titanium | 300-400 |
| SS (303, 304, 316, 317) | 80-200 |

Here's the TCR Value Range for your reference as follows:

Note: 1. The TCR value in the above form is 10⁵ multiplied of its actual value.
2. The TCR value range is 1-1000.

Temperature settings

Under TEMP mode (including TCR), coil temperature can be adjusted (from 100-315° C, 200-600° F) with the regulatory button. Press right regulatory button to increase the temperature while left regulatory button to Down it. A momentary press of the regulatory button will increase/decrease the temperature by increments of 5°C (10°F). Long press the regulatory button will rapidly increase/decrease the temperature setting.



Logo Mode

Press the fire button and the right regulatory button simultaneously to enter into the setting menu. Continue to press the right regulatory button for two times, and you will enter into the Logo Mode. Simply choose on/off by pressing the right regulatory button. Press the fire button to confirm.

Supplementary functions

1. Lock/unlock the atomizer resistance under VT mode:

Press the fire button three times to enter into the menu. Then press the left regulatory button 2 times, and the second row where the resistance display will blink. Press the right regulatory button to lock or unlock the coil resistance. When the lock sign displayed, thus the resistance is locked.

Note: (1) Please lock the resistance only when the coil is used at room temperature. This will lock the correct "base resistance" of the atomizer. Temperature control will remain accurate, as long as the coil is not changed. Once the resistance is locked, you can remove the tank while the coils are hot or cold and it will function under the same parameter.
(2) Please unlock the resistance before you change to a different atomizer or temperature control will not work correctly. When the resistance is unlocked, please ensure any new coil is installed at room temperature when first used to retain temperature accuracy.

2. New coil, same coil

When replacing the atomizer, whose resistance is larger than the previous one to some degree, resetting of the atomizer "base resistance" may be required – this is the resistance of the atomizer coil when it is used at room temperature.

When the tank is detached, press the power button to initiate a reset. After fitting a new atomizer head and reinstall the tank, "New Coil, Same Coil" message with the ohm reading will appear



7 | eVic AIO | English

English | eVic AIO | 8

on the display. Press the right regulatory button to confirm that a new coil has been fitted.

Should you see this message for any other reason – especially when reinstalling the same coil that is still warm from recent use – press the left regulatory button so that the "base resistance" is not reset. Always do remember to choose correct operation mode to suit the coil that fitted to ensure that temperature control is accurate.

3. Wattage adjustment under VT mode:

Maximum initial wattage can be adjusted under VT mode. Press the fire button 3 times to enter the menu. Press the left regulatory button, and the second row will blink. Press the right regulatory button to increase the wattage. After that, press the fire button to confirm.

Note: (1) VT mode only supports a maximum of 1.5 ohm. The device will automatically switch to VW mode when the resistance is larger than 1.5 ohm.
(2) When Kanthal Wire is applied in VT mode, the device will also automatically switch to VW mode after working for 2 seconds.

Malfunction indication and protection

Over 10 Second Protection: When the power button is pressed for over 10 seconds, the output will shut off and the OLED Screen will display "Over 10s protection" .

Atomizer Short-circuit Protection:

When atomizer short-circuit occurs, the OLED Screen will display "Atomizer Short" .

Weak Battery Alert:

In VT/VW mode, when the device installed with an atomizer is working and the voltage of battery is below 2.9V, the device shows: Weak Battery. Meanwhile, the output power will be reduced accordingly.

Low Power Alert: When the voltage of battery is below 3.3V, the device shows: Battery Low. If you continue to press the fire button, the device shows: Battery low lock, and cannot work. Please recharge the battery to reactivate.

Unlocking Battery Low:

As soon as charging has commenced low-voltage protection will be unlocked.

Atomizer Low Alert: When the resistance of atomizer is lower than 0.1ohm in VW mode or lower than 0.05ohm in VT mode, the OLED screen will display "Atomizer Low" .

Temperature Protection: In VT mode, if the actual temperature of coil is higher than the set temperature, the device shows: "Protection".



9 | eVic AIO | English

English | eVic AIO | 10

Temperature Alert: If the temperature of device is over 70 C, the output will shut off automatically and the screen will display "Device Too Hot" .

Cautions:

1. Only have your eVic AIO repaired by Joyetech. Do NOT attempt to repair it on your own as it may lead to further damage to the item and/or personal injury.

2. eVic AIO should be operated in dry conditions between temperatures of -10°C (14°F) to 60°C (140°F) and charged between 0°C (32°F) to 45°C (113°F).

3. eVic AIO is designed with authentic Joyetech components. Applying eVic AIO with unauthorized components may cause the device to function improperly and/or lead to damage.

Warranty

Please consult your Joyetech product warranty card. We are not responsible for any damages caused by human error. Our warranty is not available for products purchased from third party vendors.

Joyetech agrees to provide repair under warranty pursuant to the following terms and conditions:

1. This warranty provides repair free of charge for defective Joyetech brand merchandise. Warranty period is 90 days from date of purchase by the end user.

2. This warranty may be void as a result of any of the following conditions:

- * Customer does not provide warranty card and original receipt of purchase.
- * Merchandise failure or damage is caused due to improper use or unauthorized repair.
- * Merchandise failure or damage as a result of excessive force such as dropping.
- * Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual).
- * Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions).
- * Merchandise failure or damage due to usage with non-Joyetech components (charger, battery, and power cable).

3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath.

4. This warranty does not cover any non-Joyetech brand products. This warranty is only valid for eligible Joyetech brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.

Joyetech reserves the right of final decision in all warranty cases. Joyetech may interpret and revise the content of this warranty terms.

Warning

- Keep out of reach of children.
- This product is NOT recommended for use by young people or non-smokers.
- This product is NOT suitable for use by child, pregnant or breast-feeding women, people who' re allergic/sensitive to nicotine.

11 | eVic AIO | English

English | eVic AIO | 10