


Notice for Use:
Thank you for choosing Joyetech. Please read this manual carefully before use to ensure that your usage is correct. If you require any additional information or have any questions about the product or its use, please consult your local Joyetech agent, or visit our website at www.joyetech.com.

Product Introduction:
eVic VTTwo Mini, a new version of eVic-VTC Mini, is more elegant and more handsome in appearance. It is with upgradable firmware and dual battery protection system. The new firmware supports RTC (Real Time Clock) display, clock screen protection and Custom Logo. The eVic VTTwo Mini combines unique and attractive styling with a super large OLED screen, supporting RTC/VW/VT/Bypass/TCR modes. In addition, there are various attractive colors for your choice catering to your preference.

Specification:
Size: 22.20*38.20*82.00mm
Output Mode: RTC/VW/VT(Ti, Ni, SS316)/Bypass/TCR(M1, M2, M3)
Output Wattage: 1-75W
Resistance Range: 0.05-1.5ohm for VT mode
0.1-3.5ohm for VW/BYPASS mode
Temperature Range: 100-315°C/ 200-600°F
Colors: Black, White, Red, Blue, Orange

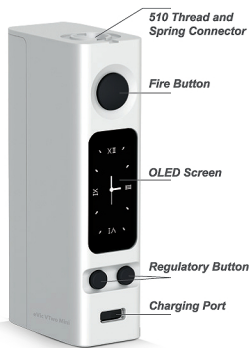

How to Use:
1. Power on/off:
Press the fire button 5 times in quick succession, the screen will on. Then it's ready to use. In the same way, the device will be turned off by pressing another 5 times in quick succession.

2. Vaping: Hold the fire button and inhale through the mouthpiece. Release the Fire button and exhale. Note: Please adjust the wattage to a proper range according to your atomizer before use.

3. Set Screen Protection Time: When the device is on, simultaneously hold the fire button and the Right button to enter into Led Color interface. Then press the Right button again to enter into Screen Protection setting, and press Left button to choose the time. Press the fire button to confirm your choice.

4. Key Lock Function: When the device is on, simultaneously press the two regulatory buttons. This will switch between Adjustment Lock and Adjustment Unlock function. While Key Lock is on, the regulatory button will not function to prevent accidental adjustments.


 
5. Switch the Display Mode: Press the two regulatory buttons simultaneously in power off state, the display will rotate 180 degrees.

Time Set and Shift Among Modes:

1. Time Set

A. Shift Between Dial Display and Numerical Display

eVic VTTwo Mini has two ways of time displaying: Dial Display and Numerical Display.

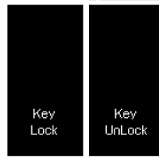

In numerical display condition, Press the fire button 3 times to enter the menu. The first will flash to indicate you enter into the menu. Press the Left regulatory button to Year-Month-Day set, and press the Right button to shift to Dial Display.

In dial display condition, Press the fire button 3 times to enter the menu. The first will flash to indicate you enter into the menu. Press the Left regulatory button to Hour-Second hand set, and press the Right button to shift to Numerical Display.



B. Time-setting

Press the fire button 3 times to enter the menu.

The first will flash to indicate you enter into the menu. Press the Left button to shift among Hour, Minute, Year, Month and Day; and press the Right button to adjust the parameter.

(Note: only Year can be reversed by pressing the Left regulatory button when adjusting) Long pressing the regulatory button will rapidly increase/decrease the setting.

2. Shift Among Modes

Press the fire button 3 times, the first row will flash to indicate you enter into the menu. Press the Right button to switch among TEMP, TCR, POWER and BYPASS mode. Press the fire button, or leave the display to flash 10 times on the current setting to confirm and exit the menu.

(A) Under TEMP or TCR mode, while flashing, press the Left regulatory button to enter into subsidiary menu: VT, PWR, COIL and AMP.

When adjusting VT, press the Right button to switch among Temp Ni, Temp Ti, and Temp SS316/ M1, M2 and M3 mode. Press the fire button to confirm.

When AMP row is flashing, press the Right button to switch among AMP, PUFF and TIME.


(B) Under POWER or BYPASS mode, while flashing, press the Left regulatory button to enter into subsidiary menu. When AMP row is flashing, press the Right button to switch among AMP, PUFF and TIME.

3.Temp-SS316: The Temp-SS316 mode is especially designed for SS316 coil. We kindly recommend you Joyetech BF-SS316 atomizer head.

4.TCR (M1, M2, M3)

The great TCR (Temperature Coefficient of Resistance) function is available on eVic VTTwo Mini, with which you can customize it on your won.

Under TCR mode, when the mode indication still flashing, press the left button then the sub-menu items (M1, M2, M3) will flash. Press the right button when still flashing to choose modes among M1, M2 and M3 and then press the fire button to confirm.

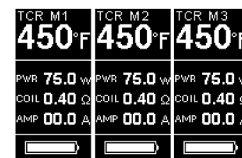


5. How to set the TCR?

In power-off condition, press the fire button and the right regulator simultaneously for around 5 seconds, then you enter into the TCR set menu:

- (1) Press the right or left regulator to choose between TCR M1, M2 or M3;
- (2) Then press the fire button to select the parameter;
- (3) Press the regulator to increase or decrease the parameter;
- (4) Long press the fire button or leave it for about 10 seconds to confirm.

 Here's the TCR Value Range for your reference as follows:



Material	TCR Value Range
Nickel	600-700
NiFe	300-400
Titanium	300-400
SS (303, 304, 316, 317)	80-200

Note: 1. The TCR value in the sheet is 10⁵ multiplied of the actual TCR.
2. The TCR value range for eVic VTTwo Mini is 1-1000.

6. Under TEMP or TCR mode, coil temperature can be adjusted (from 100-315°C, 200-600°F) with the regulatory button. Press right regulatory button to increase the temperature while left regulatory button to down it. A momentary press of the regulatory button will increase/decrease the temperature by increments of 5°C (10°F). Long pressing the regulatory button will rapidly increase/decrease the temperature setting.

7. Logo Mode

eVic VTTwo Mini is newly added with logo mode.

Press the fire button and the Right regulatory button simultaneously. You will enter into screen protection mode. Continue to press the Right regulatory button again, then you will enter into the Logo Mode. You can choose "Yes" or "No" by pressing the Left regulatory button, and press the Fire button to confirm.



Supplementary VT Mode Functions:

1. Lock/unlock the atomizer resistance under VT mode:

Press the fire button three times to enter into the menu. Then press the left regulatory button 2 times, and the second row where the resistance display will blink. Press the right regulatory button to lock or unlock the coil resistance. When the lock sign displayed, thus the resistance is locked.

Note: (1) Please lock the resistance only when the coil is used at room temperature. This will lock the correct "base resistance" of the atomizer. Temperature control will remain accurate, as long as the coil is not changed. Once the resistance is locked, you can remove the tank while the coils are hot or cold and it will function under the same parameter. (2) Please unlock the resistance before you change to a different atomizer or temperature control will not work correctly. When the resistance is unlocked, please ensure any new coil is installed at room temperature when first used to retain temperature accuracy.

2. New Coil, Same Coil:

When replacing the atomizer, whose resistance is larger than the previous one to some degree, resetting of the atomizer "base resistance" may be required – this is the resistance of the atomizer coil when it is used at room temperature.

When the tank is detached, press the power button to initiate a reset. After fitting a new atomizer head and reinstall the tank, "New Coil, Same Coil" message with the ohm reading will appear on the display. Press the right regulatory button to confirm that a new coil has been fitted. Should you see this message for any other reason – especially when reinstalling the same coil that is still warm from recent use – press the left regulatory button so that the "base resistance" is not reset. Always do remember to choose correct operation mode to suit the coil that fitted to ensure that temperature control is accurate.



3. Wattage adjustment under VT mode:

Maximum initial wattage can be adjusted under VT mode. Press the fire button 3 times to enter the menu. Press the

left regulatory button, and the second row will blink. Press the right regulatory button to increase the wattage. After that, press the fire button to confirm.

Note: (1) VT mode only supports a maximum of 1.5 ohm. The device will automatically switch to VW mode when the resistance is larger than 1.5 ohm. (2) When Kanthal Wire is applied in VT mode, the device will also automatically switch to VW mode after working for 2 seconds.

Malfunction Indication and Protection

Over 10 Second Protection:

When the power button is pressed for over 10 seconds, the output will shut off and the OLED Screen will display "Over 10s protection".

Atomizer Short-circuit Protection:

 
When atomizer short-circuit occurs, the OLED Screen will display "Atomizer Short".

Weak Battery Alert:

In VT/VW mode, when the device installed with an atomizer is working and the voltage of battery is below 2.9V, the device shows: Weak Battery. Meanwhile, the output power will be reduced accordingly.

Low Power Alert:

When the voltage of battery is below 3.3V, the device shows: Battery Low. If you continue to press the fire button, the device shows: Battery low lock, and cannot work. Please recharge the battery to reactivate.



Unlocking Battery Low: As soon as charging has commenced low-voltage protection will be unlocked.

Atomizer Low Alert: When the resistance of atomizer is lower than 0.1ohm in VW mode or lower than 0.05ohm in VT mode, the OLED screen will display "Atomizer Low".

Temperature Protection: In VT mode, if the actual temperature of coil is higher than the set temperature, the device shows: "Protection".

Temperature Alert: If the temperature of device is over 70°C, the output will shut off automatically and the screen will display "Device Too Hot".

Charging & Upgrading

Connect the micro USB port with a micro USB cable to charge or upgrade your device. Simply charge the device by connecting it with the wall adapter or a computer via USB cable. The battery is charged as shown in the picture. When it is fully charged, the charging bar will disappear.

Warning

1. Keep out of reach of children.
2. This device is not recommended for use by young people or non-smokers.

Precautions

1. Only have your eVic VTTwo Mini repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.



2. Do not leave the eVic VTTwo Mini in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0°C to 45°C while charging and -10°C to 60°C while in use.

3. Do not attempt to combine the eVic VTTwo Mini with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

Warranty terms

Please refer to your Joyetech product warranty card. We are not responsible for any damage caused by user error. Our warranty is not valid for products purchased from third party vendors.

Joyetech agrees to provide repair under warranty pursuant to the following terms and conditions:

1. This warranty provides repair free of charge for defective Joyetech brand merchandise. Warranty period is 90 days from date of purchase by the end user.
2. This warranty may be void as a result of any of the following conditions:
 - * Customer does not provide warranty card and original receipt of purchase.
 - * Merchandise failure or damage is caused due to improper use or unauthorized repair.
 - * Merchandise failure or damage as a result of excessive force such as dropping.
 - * Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual).
 - * Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions).
 - * Merchandise failure or damage due to usage with non-Joyetech components (charger, battery, and power cable).

3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath.

4. This warranty does not cover any non-Joyetech brand products. This warranty is only valid for eligible Joyetech brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.

Joyetech reserves the right of final decision in all warranty cases. Joyetech may interpret and revise the content of this warranty terms.