

Notice for Use:
Thank you for choosing Joyetech. Please read this manual carefully before use to ensure that your usage is correct. If you require any additional information or have any questions about the product or its use, please consult your local Joyetech agent, or visit our website at www.joyetech.com.

Product Introduction:
eVic-VTwo, a new version of eVic-VT, is more elegant and more handsome in appearance. It is newly added with upgradable firmware and dual battery protection. The new firmware supports Custom Logo, Game Mode, RTC (Real Time Clock) display with clock screen protection. The eVic-VTwo combines unique and attractive styling with a super large OLED screen, and supports RTC/VW/VT/Bypass/TCR modes. In addition, there are various attractive colors for your choice catering to your preference.

Specification:
Size: 47*25.5*85.6mm
Capacity: 5000mAh
Output mode: RTC/VW/VT(Ni, Ti, SS316)/Bypass/TCR (M1,M2,M3) Mode
Output Wattage: 1-80w
Resistance Range: 0.05-1.5ohm for VT mode
0.15-3.5ohm for VW mode
Temperature Range: 100-315°C/200-600°F



1 | eVic-VTwo | English

How to Use:
1. Power on/off:
Press the fire button 5 times in quick succession, the screen will on. Then it's ready to use. In the same way, the device will be turned off by pressing another 5 times in quick succession.

2. Vaping: Hold the fire button and inhale through the mouthpiece. Release the Fire button and exhale. Note: Please adjust the wattage to a proper range according to your atomizer before use.

3. Set Screen Protection Time: When the device is on, simultaneously hold the fire button and turn the control knob to the right to enter into Led Color interface. Then turn right of the regulator again to enter into Screen Protection setting, and turn left to choose the time. Press the fire button to confirm your choice.


 
4. Stealth function: While the device is on, simultaneously hold the fire button and turn the control knob to the left. This will switch between Stealth on and Stealth off function. In Stealth on Mode, you can vape with the OLED screen off. To quickly see your settings in stealth on mode, you can tap the fire button to display the settings.

Time Set and Shift Among Modes:

1. Time Set

A. Shift Between Dial Display and Numerical Display

eVic-VTwo has two ways of time displaying: Dial Display and Numerical Display. In numerical display condition, Press the fire button 3 times to enter the menu. The first will flash to indicate you enter into the menu. Turn the control knob to the left to

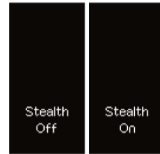

English | eVic-VTwo | 2

Year-Month-Day set, and turn the control knob to the right to shift to Dial Display. In dial display condition, Press the fire button 3 times to enter the menu. The first row will flash to indicate you enter into the menu. Turn the control knob to the left to Hour-Second hand set, and turn the control knob to right to shift to Numerical Display.



B. Time-setting

Press the fire button 3 times to enter the menu. The first will flash to indicate you enter into the menu. Turn the control knob to the left to shift among Hour, Minute, Year, Month and Day; and Turn the control knob to the right to adjust the parameter. (Note: only Year can be reversed by Turn the control knob to the left when adjusting) Long pressing the regulatory button will rapidly increase/decrease the setting.

2. Shift Among Modes

Press the fire button 3 times, the first row will flash to indicate you enter into the menu. Press the turn right of the regulator to switch among TEMP, TCR, POWER and BYPASS mode. Press the fire button, or leave the display to flash 10 times on the current setting to confirm and exit the menu.

(A) Under TEMP or TCR mode, while flashing, turn the control knob to the left to enter into subsidiary menu: VT, PWR, COIL and AMP.

When adjusting VT, press the turn right of the regulator to switch among Temp Ni, Temp Ti, and Temp SS316/ M1, M2 and M3 mode. Press the fire button to confirm.

When AMP row is flashing, turn the control knob to the right to switch among AMP, PUFF and TIME.

(B) Under POWER or BYPASS mode, while flashing, turn the control knob to the left to enter into subsidiary menu. When AMP row is flashing, turn the control knob to the right to switch among AMP, PUFF and TIME.

3 | eVic-VTwo | English


3. Temp-SS316: The Temp-SS316 mode is especially designed for SS316 coil. We kindly recommend you Joyetech BF-SS316 atomizer head.



4. TCR (M1, M2, M3)

With the new TCR (Temperature Coefficient of Resistance) function available on eVic-VTwo, you can customize it on your won.

Under TCR mode, when the mode indication still flashing, turn the control knob to the left, then the sub-menu items (M1, M2, M3) will flash. Turn the control knob to the right when still flashing to choose modes among M1, M2 and M3 and then press the fire button to confirm.

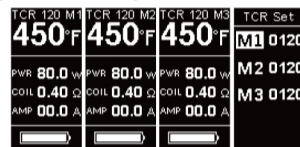

5. How to set the TCR?

In power-off condition, press the fire button and the right regulator simultaneously for around 5 seconds, then you enter into the TCR set menu:

- Turn the control knob to right or left to choose between TCR M1, M2 or M3;
- Then press the fire button to select the parameter;
- Turn the control knob to right or left to increase or decrease the parameter;
- Long press the fire button or leave it for about 10 seconds to confirm.

Material	TCR Value Range
Nickel	600-700
NiFe	300-400
Titanium	300-400
SS (303, 304, 316, 317)	80-200

Here's the TCR Value Range for your reference as follows:

English | eVic-VTwo | 4

Note: 1. The TCR value in the sheet is 10⁵ multiplied of the actual TCR.
2. The TCR value range for Cuboid Mini is 1-1000.

6. Under TEMP or TCR mode, coil temperature can be adjusted (from 100-315°C, 200-600°F) with the regulatory button. Turn the control knob to right to increase the temperature and left to decrease it. A momentary press of the regulatory button will increase/decrease the temperature by increments of 5°C (10°F). Long pressing the regulatory button will rapidly increase/decrease the temperature setting.

7. Logo Mode

eVic-VTwo is newly added with logo mode. Press the fire button and turn the knob to the right simultaneously. You will enter into screen protection mode. Continue to turn the knob to the right again, then you will enter into the Logo Mode. You can choose "Yes" or "No" by turning the knob, and press the Fire button to confirm.



8. Game Mode

eVic-VTwo is newly added with game mode. Press the fire button and turn the knob to the right simultaneously. You will enter into screen protection mode. Continue to turn the knob to the right for two times, and you will enter into the Game Mode. You can choose "Easy", "Normal", "Hard" and "Exit" by turning the knob to the left, and press the Fire button to play the game. Please press the fire button to keep the bird flying without hitting into beams.



Note: You can not vape under Game Mode.

5 | eVic-VTwo | English

Supplementary VT Mode Functions:

1. Lock/unlock the atomizer resistance under VT mode:

Press the fire button three times to enter into the menu. Then turn the control knob to the left 2 times, and the second row where the resistance display will blink. Turn the knob to right to lock or unlock the coil resistance. When the lock sign displayed, thus the resistance is locked.

 
Note: (1) Please lock the resistance only when the coil is used at room temperature. This will lock the correct "base resistance" of the atomizer. Temperature control will remain accurate, as long as the coil is not changed. Once the resistance is locked, you can remove the tank while the coils are hot or cold and it will function under the same parameter.

(2) Please unlock the resistance before you change to a different atomizer or temperature control will not work correctly. When the resistance is unlocked, please ensure any new coil is installed at room temperature when first used to retain temperature accuracy.

2. New Coil, Same Coil:

When replacing the atomizer, whose resistance is larger than the previous one to some degree, resetting of the atomizer "base resistance" may be required – this is the resistance of the atomizer coil when it is used at room temperature.

When the tank is detached, press the power button to initiate a reset. After fitting a new atomizer head and reinstall the tank, "New Coil, Same Coil" message with the ohm reading will appear on the display. Turn the knob to right to confirm that a new coil has been fitted.



Should you see this message for any other reason – especially when reinstalling the same coil that is still warm from recent use – turn the knob to left so that the "base resistance" is not reset. Always do remember to choose correct

English | eVic-VTwo | 6

operation mode to suit the coil that fitted to ensure that temperature control is accurate.

3. Wattage adjustment under VT mode:

Maximum initial wattage can be adjusted under VT mode. Press the fire button 3 times to enter the menu. Turn the knob to left, and the second row will blink. Turn the knob to right to increase the wattage. After that, press the fire button to confirm.

Note: (1) VT mode only supports a maximum of 1.5 ohm. The device will automatically switch to VW mode when the resistance is larger than 1.5 ohm.

(2) When Kanthal Wire is applied in VT mode, the device will also automatically switch to VW mode after working for 2 seconds.

Malfunction Indication and Protection

Over 10 Second Protection: When the power button is pressed for over 10 seconds, the output will shut off and the OLED Screen will display "Over 10s protection".

Atomizer Short-circuit Protection:

When atomizer short-circuit occurs, the OLED Screen will display "Atomizer Short".

Weak Battery Alert: In VT/VW mode, when the device installed with an atomizer is working and the voltage of battery is below 2.9V, the device shows: Weak Battery. Meanwhile, the output power will be reduced accordingly.




Low Power Alert: When the voltage of battery is below 3.3V, the device shows: Battery Low. If you continue to

7 | eVic-VTwo | English

press the fire button, the device shows: Battery low lock, and cannot work. Please recharge the battery to reactivate.

Unlocking Battery Low: As soon as charging has commenced low-voltage protection will be unlocked.

Atomizer Low Alert: When the resistance of atomizer is lower than 0.1ohm in VW mode or lower than 0.05ohm in VT mode, the OLED screen will display "Atomizer Low".

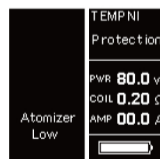


Temperature Protection: In VT mode, if the actual temperature of coil is higher than the set temperature, the device shows: "Protection".

Temperature Alert: If the temperature of device is over 70°C, the output will shut off automatically and the screen will display "Device Too Hot".

Charging & Upgrading

The micro USB port is on the top of the left side. Connect it with a micro USB cable to charge or upgrade your device. Simply charge eVic-VTwo by connecting it with the wall adapter or a computer via USB cable. The battery is charged as shown in the picture. When it is fully charged, the charging bar will disappear.

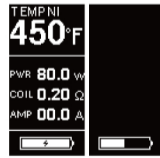

Warning

- Keep out of reach of children.
- This device is not recommended for use by young people or non-smokers.

English | eVic-VTwo | 8

Precautions

1. Only have your eVic-VTwo repaired by Joyetech. Do not attempt to repair the unit by yourself as damage or personal injury may occur.

2. Do not leave the eVic-VTwo in high temperatures or damp conditions, as this may damage the device. The appropriate operation temperature is within 0°C to 45°C while charging and -10°C to 60°C while in use.

3. Do not attempt to combine the eVic-VTwo with parts of other brands of e-cigarettes. Joyetech will not take responsibility and your warranty will be void if any damage caused by this way.

Warranty terms

Please refer to your Joyetech product warranty card. We are not responsible for any damage caused by user error. Our warranty is not valid for products purchased from third party vendors.

Joyetech agrees to provide repair under warranty pursuant to the following terms and conditions:

1. This warranty provides repair free of charge for defective Joyetech brand merchandise. Warranty period is 90 days from date of purchase by the end user.

- This warranty may be void as a result of any of the following conditions:
 - Customer does not provide warranty card and original receipt of purchase.
 - Merchandise failure or damage is caused due to improper use or unauthorized repair.
 - Merchandise failure or damage as a result of excessive force such as dropping.

* Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual).

* Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions).

* Merchandise failure or damage due to usage with non-Joyetech components (charger, battery, and power cable).

3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath.

4. This warranty does not cover any non-Joyetech brand products. This warranty is only valid for eligible Joyetech brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.

Joyetech reserves the right of final decision in all warranty cases. Joyetech may interpret and revise the content of this warranty terms.

9 | eVic-VTwo | English

English | eVic-VTwo | 10