



User Manual

www.KangerTech.com

Thank you for buying EMOW electronic cigarette under KangerTech brand! To enjoy EMOW electronic cigarette to the fullest, please read carefully this user manual before use.

Product Introduction:

EMOW electronic cigarette is smokeless electronic atomizer device that uses advanced micro electronic technique and supercritical atomizing technology to atomize nicotine dilutions with high purity extracted from nicotiana attenuate. With delicate shape and compact size, it is provided with mini replaceable heating wire components. When holding it, it can manifest elegant and noble quality as well as extraordinary taste.

Characteristics of the Product:

- Adopt advanced visual device and replaceable heating wire component.
- Beautiful and delicate shape in design!
- · Easy to carry with minimal space
- Soft effect of smoke and savor the flavor.
- Easy to operate and reusable.
- Easy to replace heating wire component and long service life of whole product.

The suit includes:

- 1 x EMOW Rechargeable Batteries
- 1 x EMOW Clear Atomizers
- 5 x Changeable Coils
- 1 x USB Charger
- 1 x Wall Charger 1 x Instruction Manual

-2-

Parameter Introduction:

Output: 4.2V

using other adapters)

• Capacity: 1.8ML; limit is required between 1.5 ohm and 3.3 ohm. · Replaceable cigarette holder; Atomizer · repeated liquid filling · replaceable heating wire component • Input: 100-240 VAC 50/60HZ Output: 5V Adapter 500MA (Please use KANGERTECH dedicated charger without using other adapters) · Input: DC 5V

-3-

400MA (Please use KANGERTECH dedicated charger without

Parameter Introduction:

- Output voltage:3.7V(Red light)\4.2V(Green light)\4.8V(White light) Press the switch 3 times in one second to chage voltage while the LED light will flash 3 times;
- · When press and hold switch for 10s, the battery LED will flash

three times to protect;

- · When the positive and negative pole of battery is short circuited, the battery LED will flash three times to protect;
- · When the battery LED flashes 15 times, it means the battery is power off. Please charge immediately
- If the battery is not charged immediately, leading to too big loss in battery, the battery will automatically shut down and not start again. In this case, please charge battery.

Method of use:

A. Fill liquid

USB

Charger









Before using, screw off the mouthpiece as picture (1) shows. Use a syringe or dropper to fill e-liquid in no more than 1.8 ml, as picture (2) shows. Screw mouthpiece on as picture (3) shows. Connect your clear cartomizer with the EMOW battery and press the button then enjoy smoking as picture (4) shows.

-5-

Method of use:

B. Battery

Battery



The battery comes with a cartomizer interface, a manual button with IED.

Usage of battery

The battery comes with a manual button. Simply screw a filled cartomizer onto the threaded end of the battery, press the button when inhaling and enjoy it.

Method of use:







When the battery power is low, the battery LED flashes 15 times when pressing to indicate the battery needs charging. To charge the battery, gently screw the battery into the USB charger. Plug the USB charger into the USB port of a AC-USB charger or a computer, as the picture shows. The indicator of the USB the battery is fully charged. It takes about 4 hours to charge the battery.

- You should use only the dedicated USB charger for the battery.
- Fully charge the battery before using to maintain a good battery li fe.

Method of use:

D. Replace cigarette holder



Directly plug cigarette holder to replace

E. Replace heating wire component



Screw it on in clockwise way and screw it off in counterclockwise way

Airflow Control

As shown: when the hole and groove are overlapped, rotate the hole from left to right to get bigger airflow which reaches the maximum on the rightest side. If the hole and the groove are not overlapped, the airflow is locked and no vapor comes out.

Troubleshooting:

- 1. When the battery LED flashes 15 times, it indicates the battery needs charging. Do not keep the battery unused for long. When the battery has low voltage, keep it properly.
- 2. When the smoke amount reduces or the flavor fails to meet the customer's needs, please replace heating wire component.
- 3. If atomizing device fails to work (during non-smoking), please check the battery and heating wire are screwed up in place!

If the problem can not be solved or if you feel uncomfortable when smoking it, stop using immediately and contact with sales agency or our company.

Cautions:

- 1. Do not use or store this product under high temperature. Keep battery in good condition. Avoid high temperature objects. Store the cartomizer in cool place.
- 2. If there is adverse effect after using this project, we suggest you using low nicotine or non- nicotine cartomizer.
- 3. Do not directly touch with nicotine in cartomizer, particularly the nose.
- 4. Do not mix charging battery with other medal objects in the working bag. Leather bag or bags of similar material will result in battery short-circuit.
- 5. Pull out the charger from jack socket when removing charger. Do not use charger outdoor or in humid environment.