

如何安装四脚餐桌型电动麻将桌

4-Legs Automatic Mahjong Table Installation Instruction

The packages that you receive will contain the following parts.

- Box A –Main machine & Table Legs
 - Box B –Table Frame
 - 2 Sets Mahjong Tiles(Blue& Green Each)
-
- 您收到的包裹裡有三大箱，包含
 - A箱主机和組裝桌腳， B箱-組裝桌框，2副麻将牌





Automatic Mahjong Table
Installation Instruction Easy Steps
(4 Legs)
第一部分: 四只桌脚安装指导




First, you need to open Box A
首先打開A箱，將零件取出



As picture shown, Box A
contents these parts. A箱包含
圖中的零件

- •4 Legs
 - •18 Bronze Screws with large nuts
 - •Power Cable
-

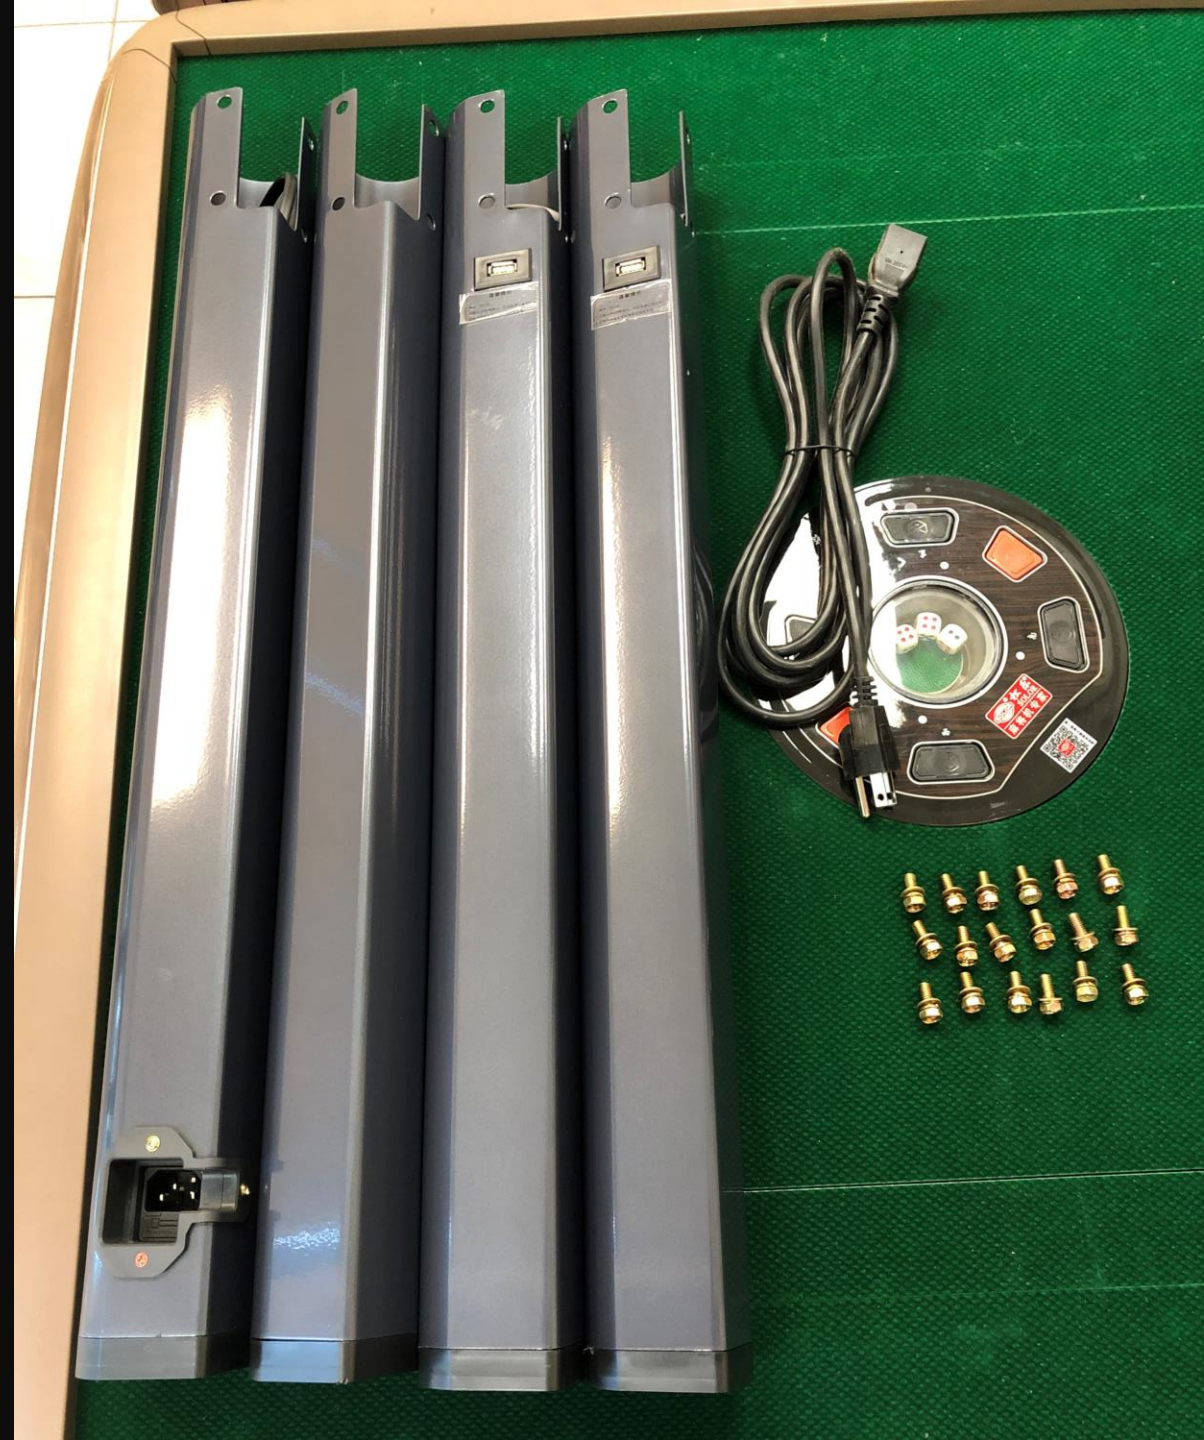




STEP 1

Distinguish 4 legs, one with power cord, two with USB socket


区分4条腿，一条带电源线，两条带USB插座

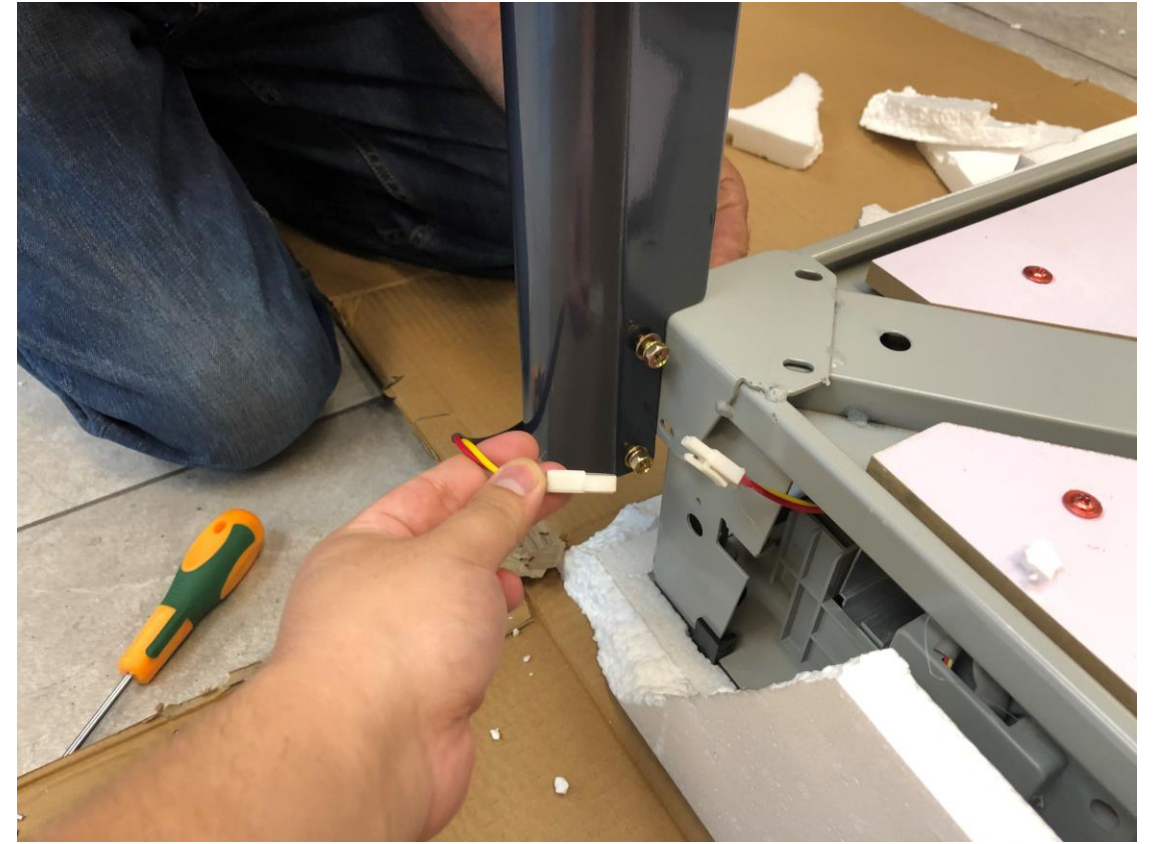

Step 2 Find the white power connector from the corner of the desktop, corresponding to the table leg with the power connector in the same color, and connect it
从桌面的一角找到白色的电源接口，对应相同颜色带有电源接口的桌腿，并接上

Step4

- After connecting, fix the table legs with 4 brass screws
 - 连接上以后，用4个螺丝固定好桌腿
-

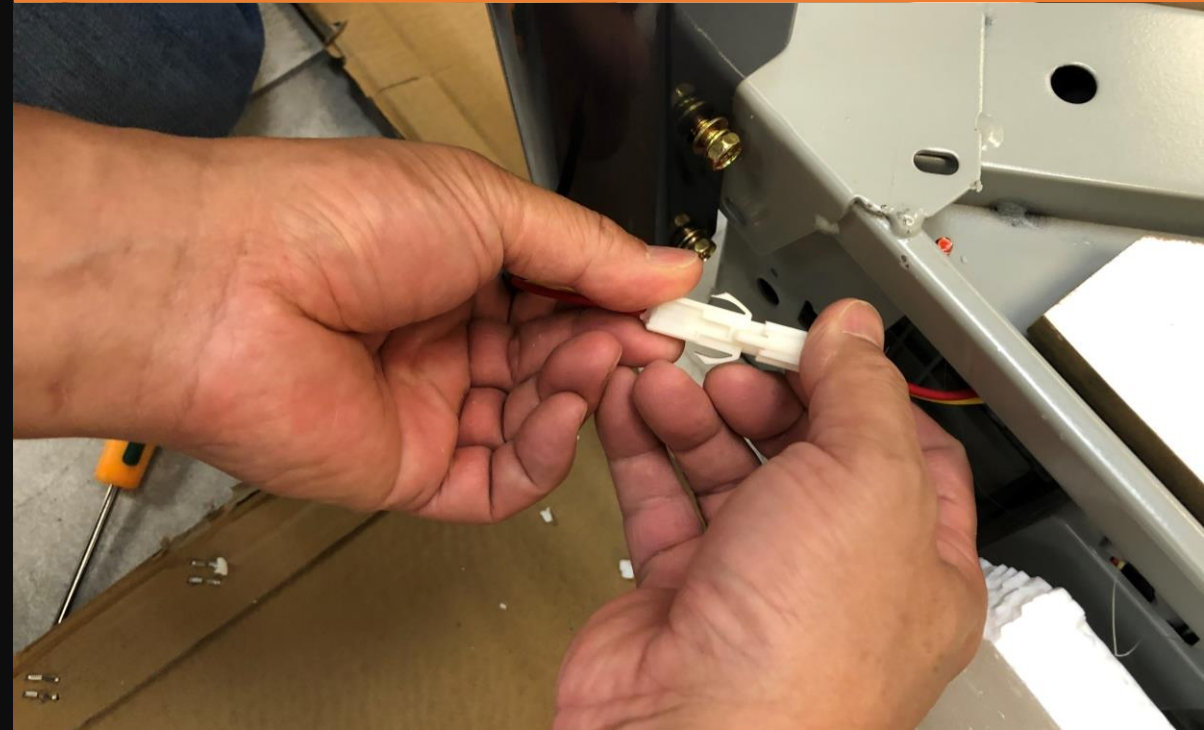



Step 3

Find the black power port from the other two corners of the desktop, corresponding to the two legs of the same color with USB ports, and connect them

找到其他的两个角落上带有与电源线相同颜色的两条腿相对应的黑色电源端口，然后将它们连接

After finishing step 3 ,which means you finish connection between tabletop and legs

完成步骤3后,就意味着桌面和桌腿已经连接好了





Automatic Mahjong Table Installation Instruction Easy Steps (Install Tabletop Frame)

第二部分:桌面边框的安装指导


Step 1 After
taking the table
out , you can find
these parts as
pictures

howninBox B打
开B箱,就会看到
如图的一些零部
件






These screws are
below:

- 8 Long Bronze screws without nuts
 - 4 Short brass screws
-

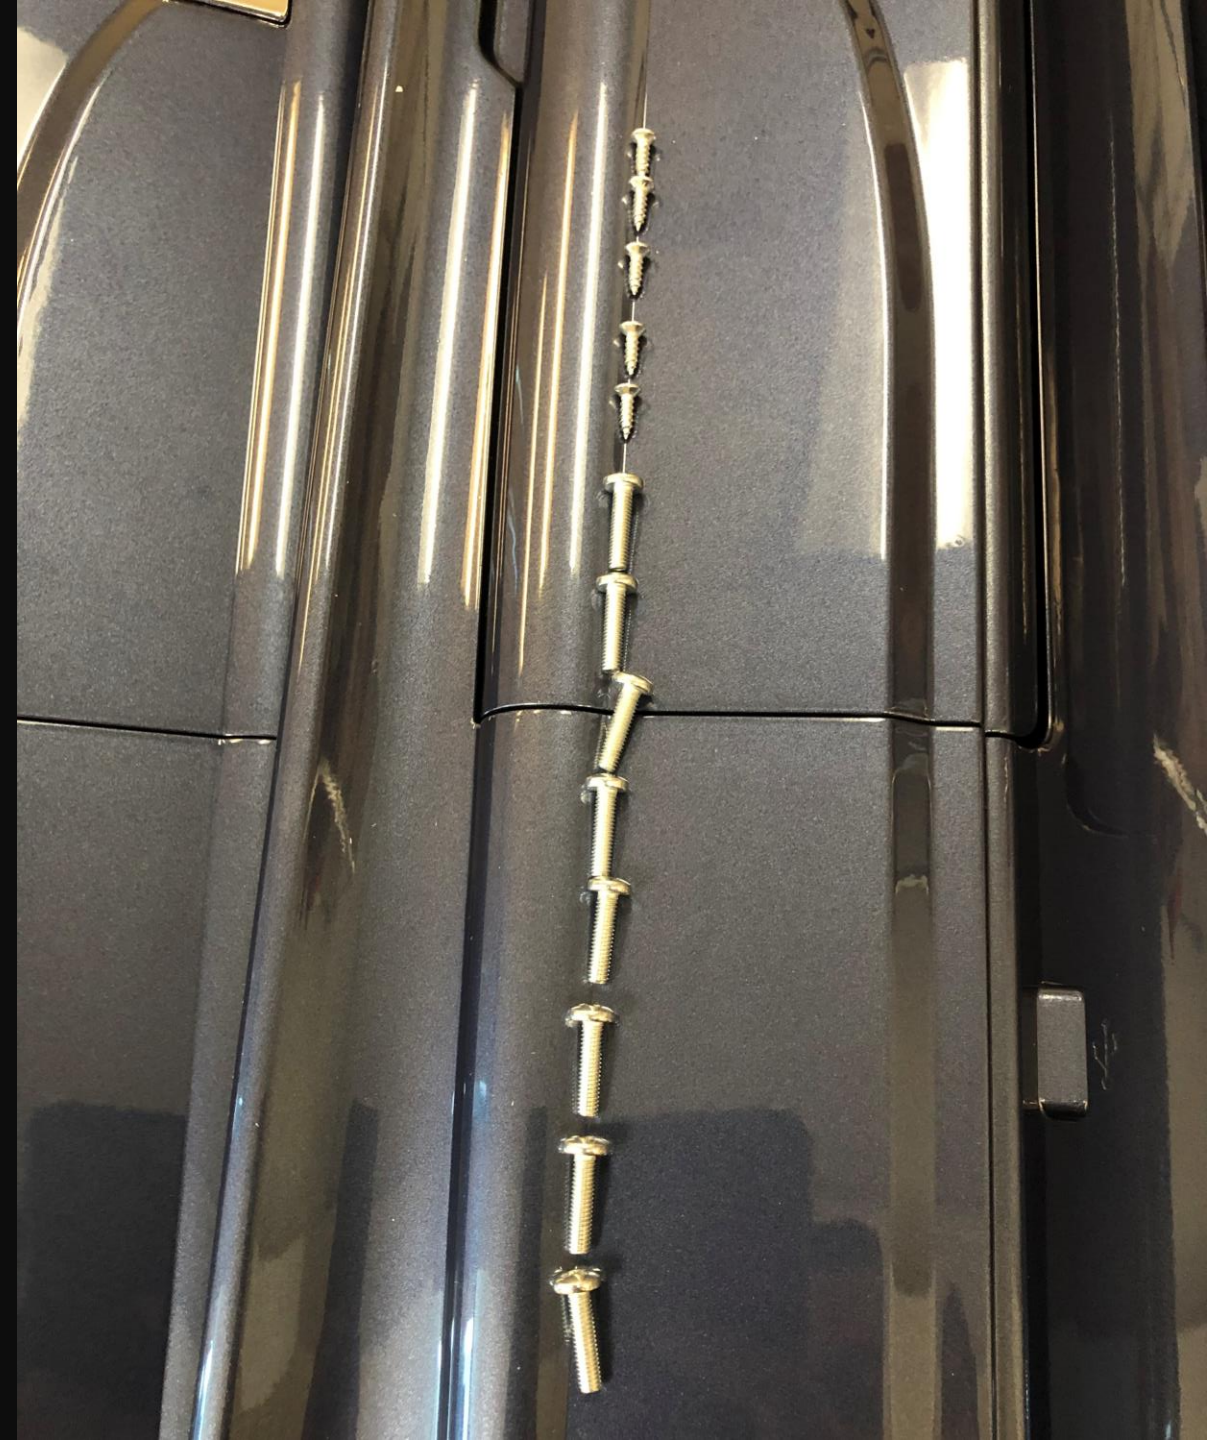



Install 4 frames and fix them with long screws

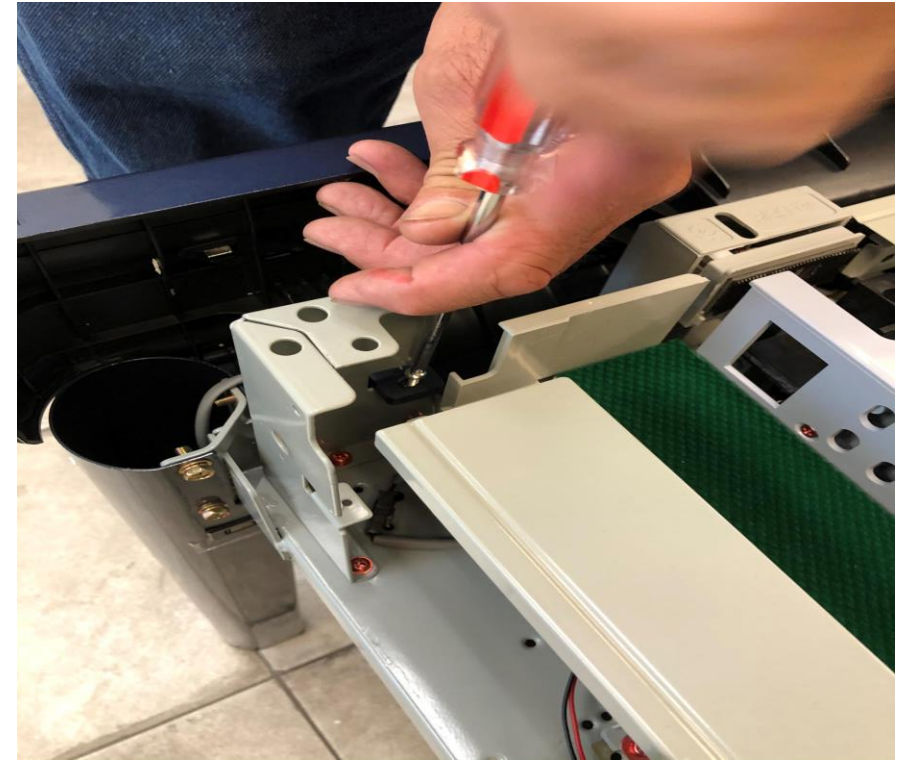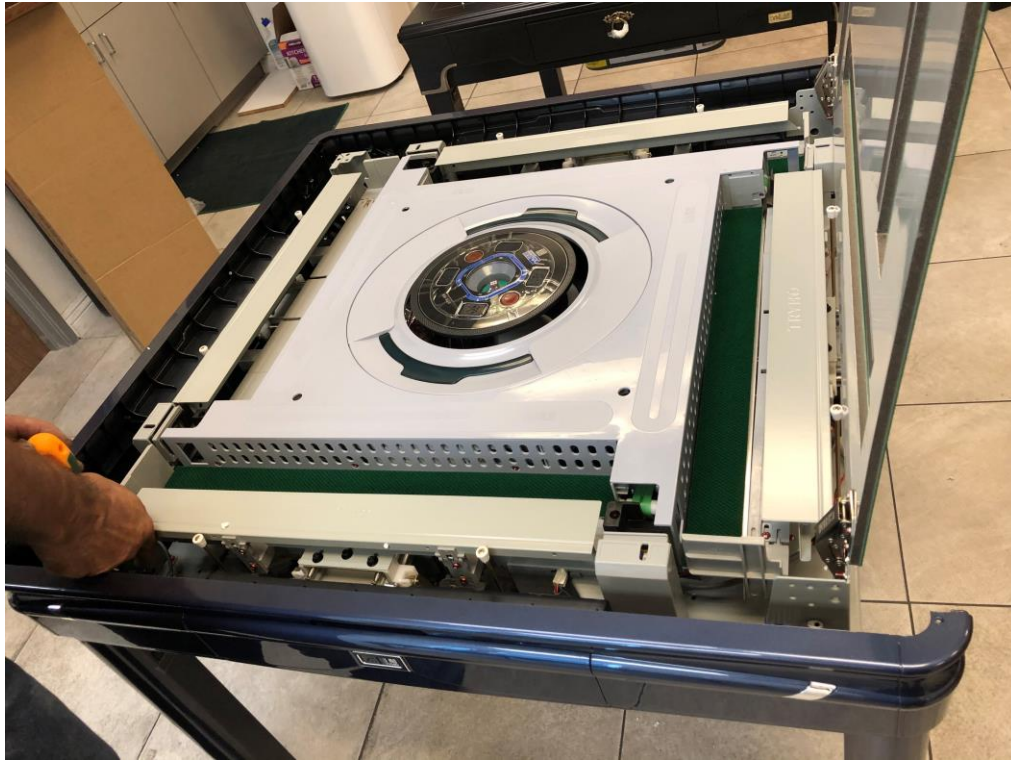

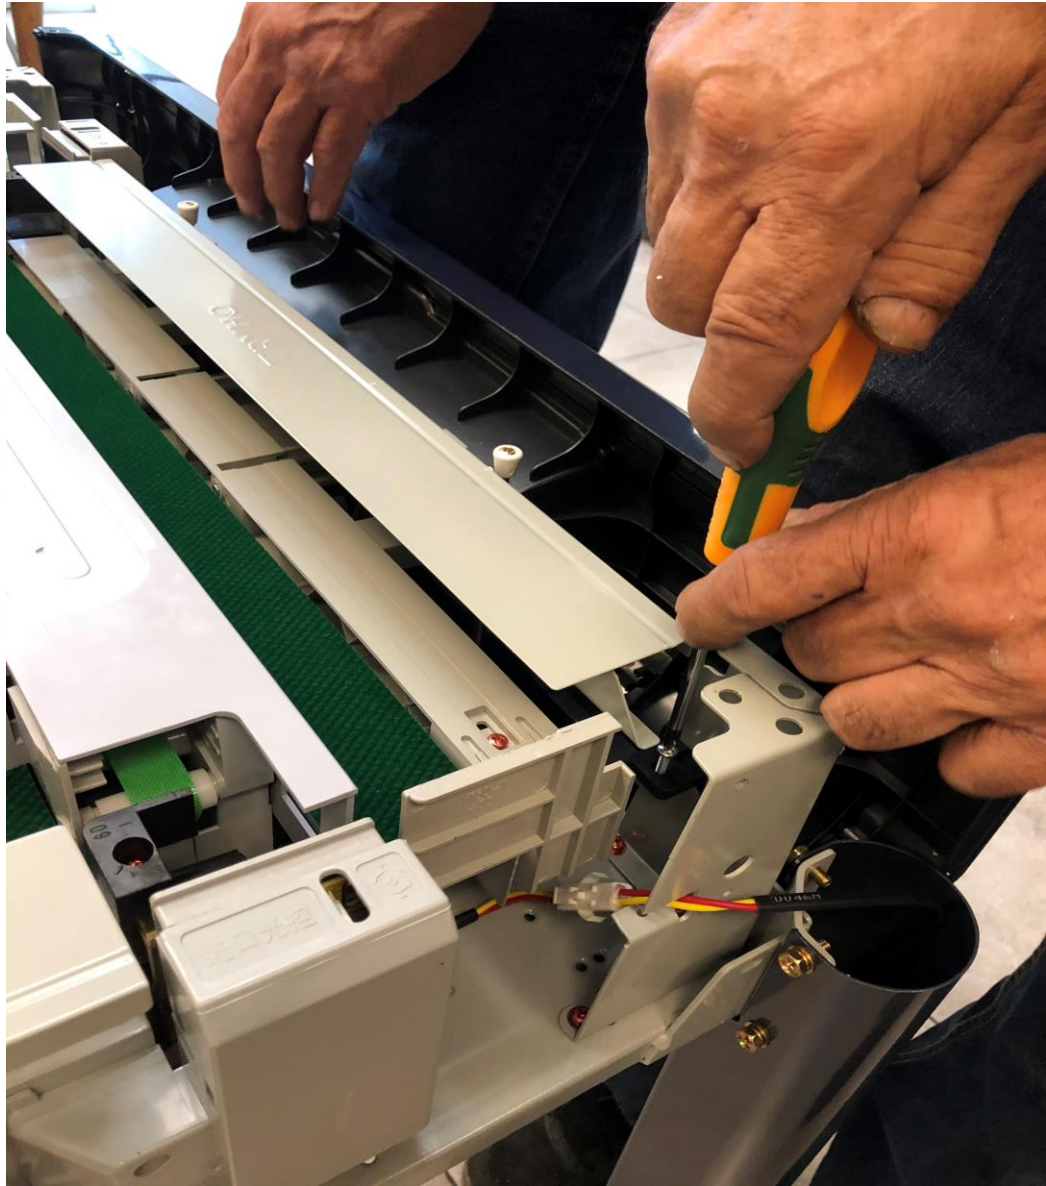



Clamp the connection between the frames tightly

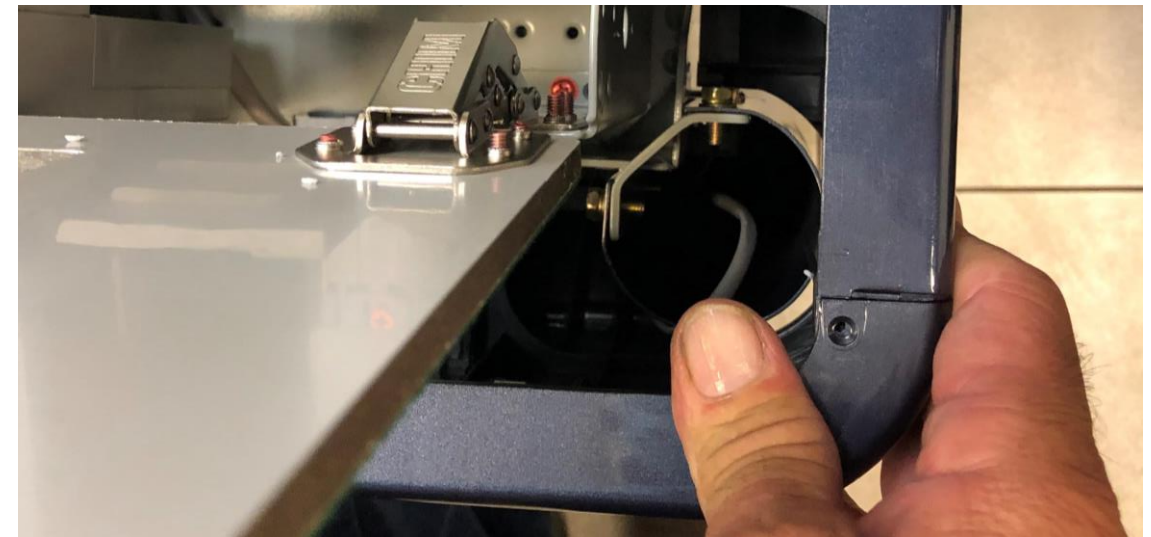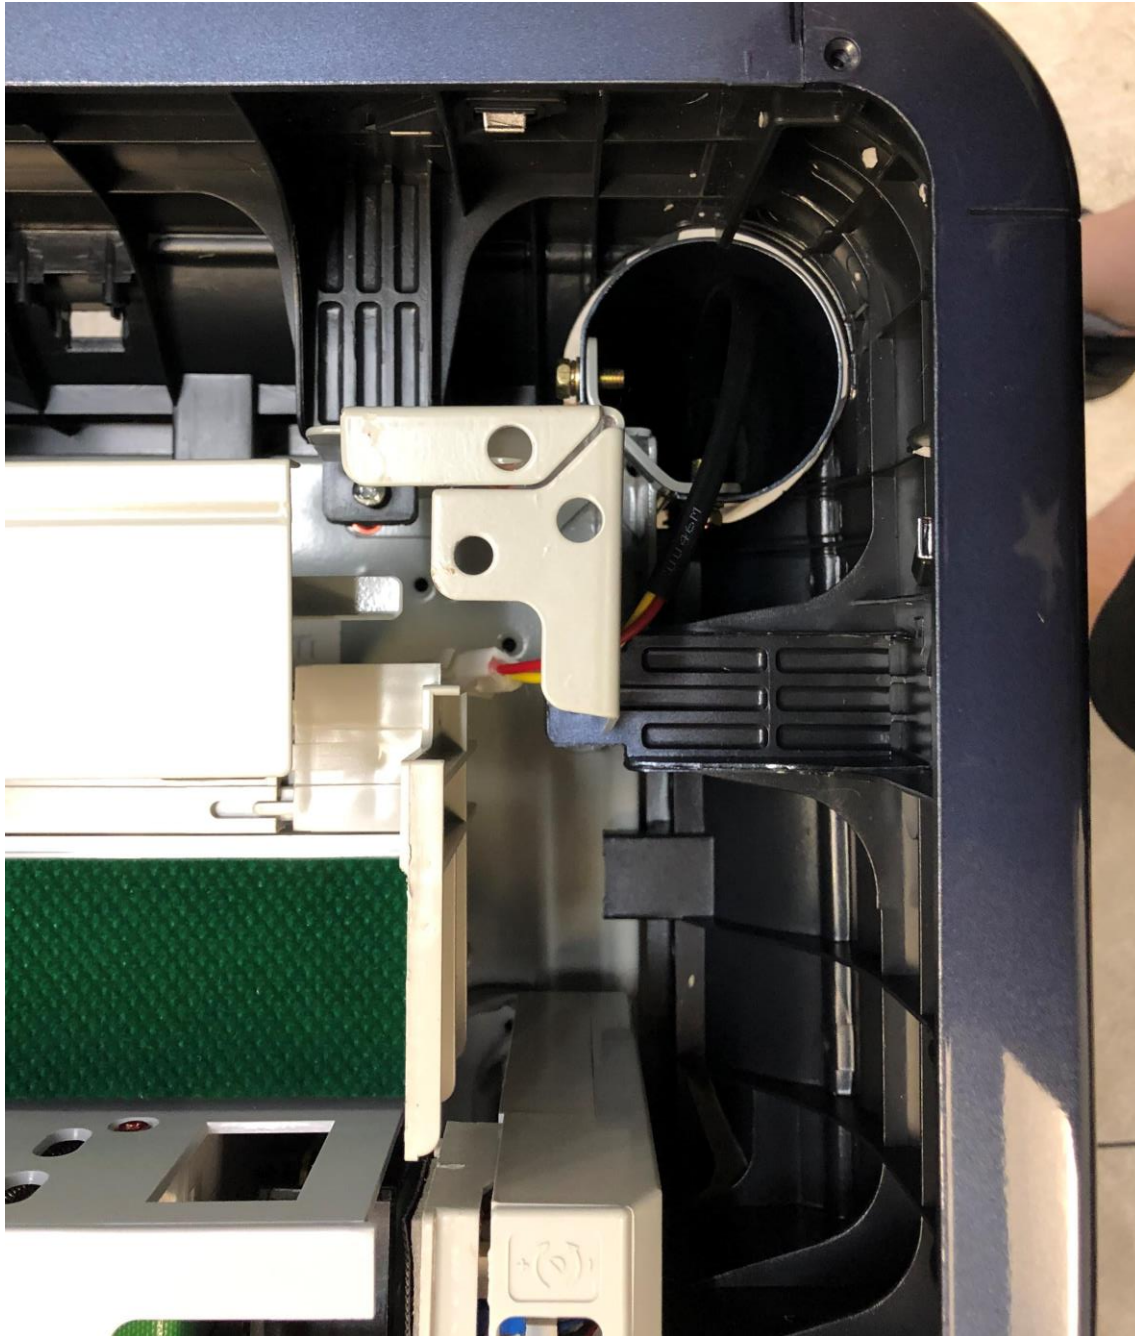

Fix the 4 corners with small screws





Connect the four bumpers



Plug bumper
on the
desktop



Turn on the power, Installation completed! 安裝完成!

Set the code according how many tiles you will play

- Code:
- 03- 136 tiles
- 01- 144 tiles
- 10- 152 tiles

- How to set code:

Before setting code, please press two buttons "+" and "-" for 3 seconds to unlock.

- <https://www.youtube.com/watch?v=AaZqjEInyvA&t=10s>

档位操作说明

① 档位设置前请同时按下+ -键3秒进行解锁

② 按下+ -键调至娱乐所需档位

数码号	牌总数	四方牌的墩牌数			
00		手动测试			
01	144	18	18	18	18
02	140	17	18	17	18
03	136	17	17	17	17
04	128	16	16	16	16
05	120	15	15	15	15
06	112	14	14	14	14
07	108	13	14	13	14
08	100	12	13	12	13
09	72	12	12	12	0
10	152	19	19	19	19
11	138	17	17	17	18
12	116	14	15	14	15
13	110	14	14	14	13